


Disassembly Instructions

All Terrain® Screens, WireWorks® Rolling Door, System 3000® Rolling Door

KI

Material Type: A. Steel B. Aluminum C. Plastic D. Wood E. Rigid Rubber

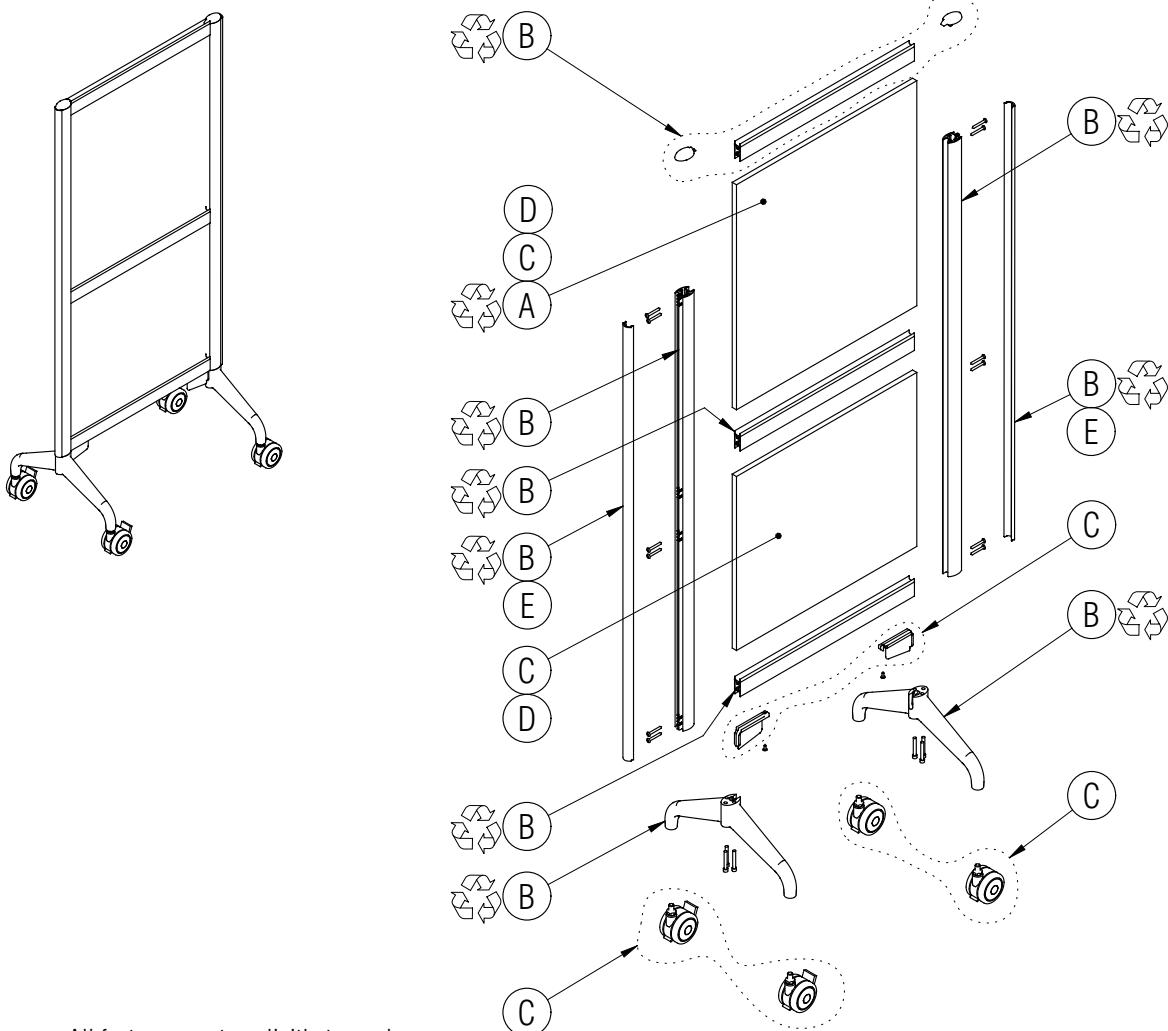

All fasteners not explicitly tagged or shown are Material Type A: Steel

Procedure:

1. If present, remove the screws holding the support legs and the nesting bumpers to the bottom of the screen frame and remove the legs and bumpers.
2. Pry or slide the vertical trim pieces out of the screen frame.
3. Remove the screws holding each horizontal frame member and separate the screen core and top caps from the frame.
4. Remove the casters or glides from the support legs or bottom of the frame.
5. Remove core material. Separate steel outer sheets from inner core if applicable.

General Notes:

1. Disassembly time: 10-15 minutes
2. This procedure assumes basic familiarity with hand tools and furniture terminology: no specialized training is required
3. All materials removed and disassembled shall be sorted and segregated with like materials and disposed of or recycled according to recycling availability or waste acceptance
4. For items to be recycled, refer to KI's End of Life Recycling Matrix and KI's End of Life Recovery Options Matrix, available at www.ki.com

Required Tools



 
Safety Glasses



Gloves



Phillips Screwdriver



Allen Wrench