
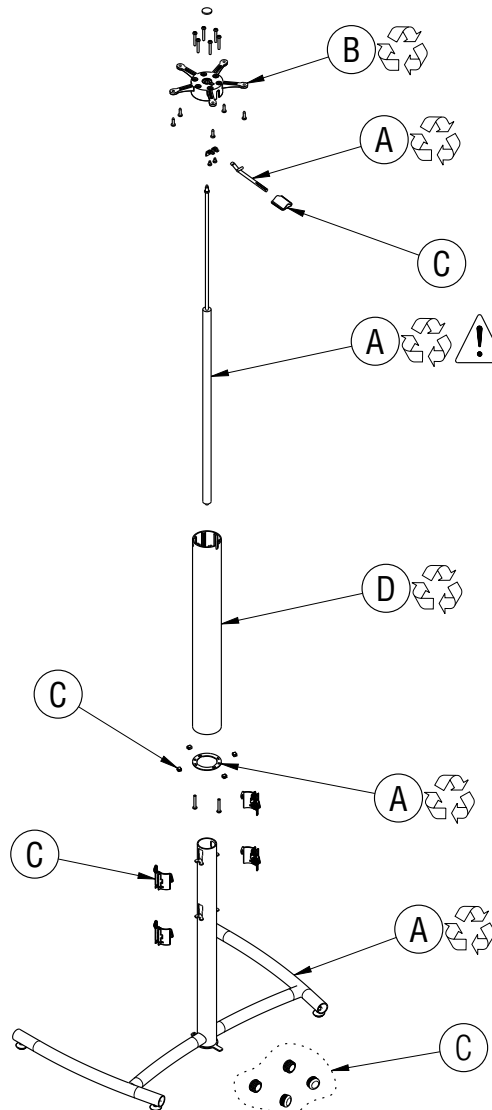


Disassembly Instructions

Ruckus Table

Material Type: A . Steel B. Zinc C. Plastic D. Aluminum

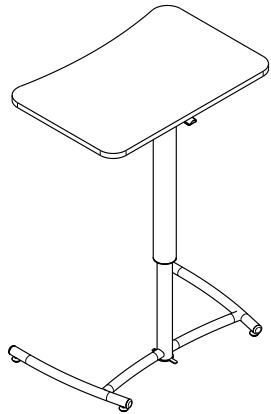

Procedure:

1. Remove the screws holding the top to the column assembly.
2. Remove the screws holding the flange to the support column.
3. Remove the screws holding the height adjustment lever bracket to the flange.
4. Remove the lever handle from the lever.
5. Remove the gas cylinder out of the support column.
6. Remove the screws holding the collar to the support column. Pull off and discard the clip-on collar glides.
7. Pull up the column and pry off the support column glides
8. Remove the tube plugs from the outer foot tubes.



**WARNING: CONTENTS UNDER PRESSURE!
REMOVE WITH CAUTION.**

General Notes:

1. Disassembly time: 20-25 minutes
2. This procedure assumes basic familiarity with hand tools and furniture terminology: no specialized training is required
3. All materials removed and disassembled shall be sorted and segregated with like materials and disposed of or recycled according to recycling availability or waste acceptance
4. For items to be recycled, refer to KI's End of Life Recycling Matrix and KI's End of Life Recovery Options Matrix, available at www.ki.com



All fasteners not explicitly tagged
are Material Type A: Steel

 
Required Tools



Gloves



Safety Glasses



Philips Screwdriver