
### Planner Student Desks



Ficture does not necessarily represent parts received

If you have damaged or missing components, Please contact customer service at 1-800-328-1061


## **Hardware and Components**

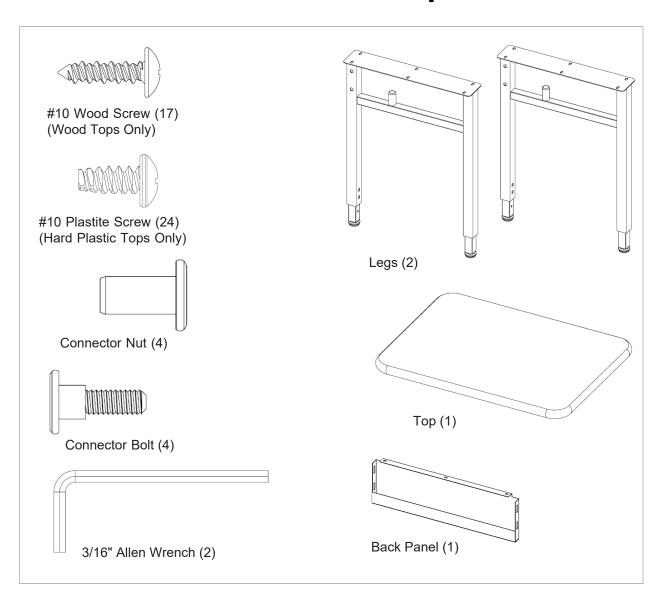


#### **Special Notes:**

- Check that all components are accounted for and undamaged before assembling.
- Please assemble the product in a clean and dry area.
- For larger units you may need another person to help assemble the product.
- Clean the product with a mild cleaner and a damp cloth.


**Step 1:** Loosely attach legs and back panel with connector bolts and nuts. (finger tight)

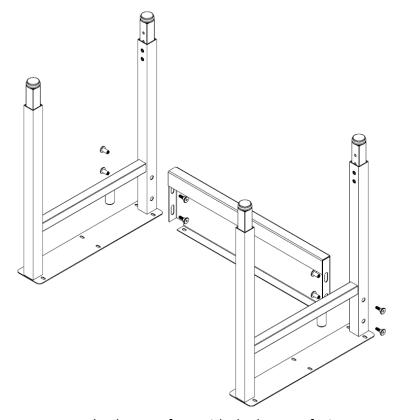


**Step 2:** Place top on a smooth, clean surface with the bottom facing up.

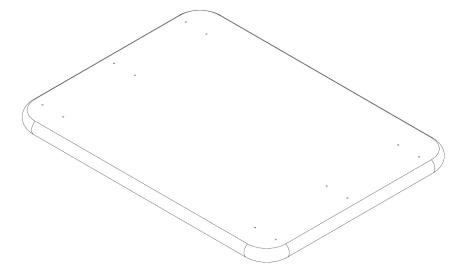


Step 3: Align frame assembly with pilot holes in top and use the corresponding #10 screws to loosely attach frame assembly. Make sure to only use plastite screws on hard plastic tops and wood screws on wood tops.

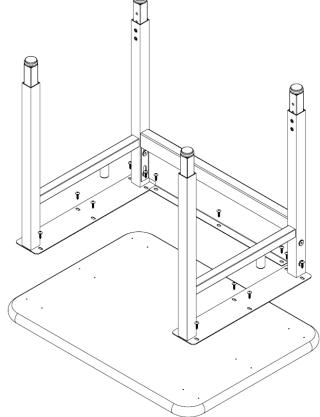

**Note:** Hard plastic tops may have multiple hole patterns. Make sure to identify the correct hole pattern as shown (01272PLASTIC model shown). Note that the Smith System logo always indicates the user side.

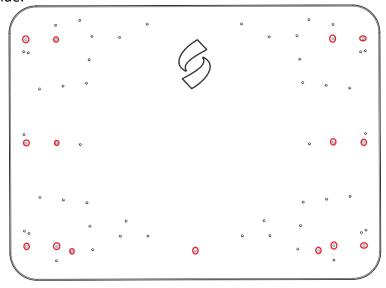

**Step 4:** Using supplied Allen Wrench go back and tighten connector bolts.

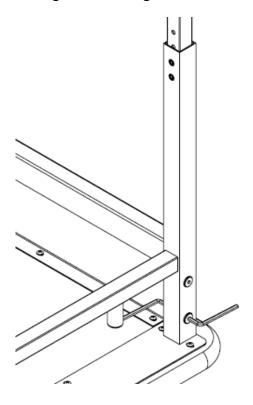

**Step 5:** Tighten #10 wood/plastite screws into table. Adjust table to desired height using supplied Allen Wrench. Carefully flip the desk over, desk is now ready to be used.

