

Make your space work®

HON

© 2024 The HON Company. Form No. H5984 (3/24)
To view the registered and unregistered trademarks
owned and used by The HON Company, visit hon.com/
protected-marks. Models, upholstery and finishes are
subject to change without notice.

The HON Company
Muscatine, IA 52761
800.833.3964 | Check out hon.com

**DO NOT REMOVE
THIS TAG.**
PRODUCT INSTALLERS:

HON



Cofi™ Seating

Quick Guide

Congratulations on your new chair!

Quick Guide | Cofi™



Shown with seat control 4c.

1 Pneumatic Seat Height Adjustment

To raise the seat, take your weight off the chair and lift the lever up. To lower the seat, place your full weight on the chair while lifting the lever.

2 Tilt Lock

For controls 4a & 4b, push the lever in to lock the chair in an upright position or pull the lever out to release the tilt lock and recline. For 4c, turn the "lock/unlock" lever backward to lock and forward to release.

3 Adjustable Arms

Pull the lever up to raise or lower arm-height. All-Adjustable arms include pivot functionality to move the arms towards or away from the body.

Seat Controls

Reference the diagram below to find your control option.

4a Weight-Activated



Automatically adjusts tension as you recline, eliminating the need to make adjustments for different users.

4b Swivel Tilt



To adjust the ease of recline, turn the front knob clockwise to tighten the tilt tension and counter-clockwise to loosen.

4c Synchro-Tilt



Turn the "+/-" lever to adjust the tension of recline. Turn the tilt-lock forward to release and recline. As you return to an upright position, the back continues to provide support throughout your entire range of motion.



Scan to learn more!



Or visit hon.com/cofi

