

Make your space work®

HON®

To view the registered and unregistered trademarks owned and used by The HON Company, visit hon.com/ protected-marks. Models, upholstery and finishes are subject to change without notice.

© 2024 The HON Company. Form No. H6018 (9/24)

The HON Company
Muscatine, IA 52761
800.833.3964 | Check out hon.com

**DO NOT REMOVE
THIS TAG.**
PRODUCT INSTALLERS:



HON®

Ignition® 2.0 Seating
Quick Guide

Congratulations on your new chair!

Quick Guide | Ignition® 2.0



Shown with seat control 4a.

Standard Features

Available on all models.

1 Pneumatic Seat-Height Adjustment

To raise the seat, take your weight off the chair and lift the lever up. To lower the seat, place your full weight on the chair while lifting the lever.

2 Tilt Lock

For control 4a & 4c, turn the "lock/unlock" lever clockwise to lock the chair in an upright position and turn the lever counter-clockwise to release and recline. For 4b, push the lever in to lock and pull it out to release.

3 Adjustable Lumbar

Easily slides up and down to increase lower back comfort.

Seat Controls

Reference the diagram below to find your control option.

4a Advanced Synchro-Tilt



Turn the "+/-" lever to adjust the tension of recline. The back provides support throughout your entire range of motion. Includes seat depth adjustment.

4b Synchro-Tilt with Seat Slide



To adjust the ease of recline, turn the front knob clockwise to tighten the tilt tension and counter-clockwise to loosen. Includes seat depth adjustment.

4c Synchro-Tilt with Independent Back Angle



The same functionality as 4a, plus the ability to adjust the back angle by lifting the lever on the user's left side and leaning back to the desired angle. Lower the lever down to lock the back in place.



Scan to learn more!



Or visit hon.com/ignition

