 


WCS11

PROPRIETARY AND CONFIDENTIAL.

ALL DIMENSIONS HAVE A $\pm 1/32"$ TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.




WARNING

- To reduce the risk of electric shock use only indoors.
- If any malfunction occurs, do not attempt to disassemble or repair.
- Avoid placing the charger in a high temperature environment or near fire.
- Allow enough clearance for part operation.
- Do not place metal on the wireless charging area.
- Metal objects, bank cards, digital IC cards should not be placed between the charger and the phone to avoid damage.
- To ensure proper performance, only use the included power adapter with unit.

SPECIFICATIONS

- 6 ft. cord length.
- Wireless output is 10W MAX.
- Power adapter is 1-1/16" X 1-29/32" X 1-21/32".
- Mobile device must be equipped with a wireless charging receiver (wireless charging accessories not included). Check mobile manufacturer for compatibility.


 
TABLE OF CONTENTS




..... 1X WCS11



  ..... 1X PCS/AC/C/3A

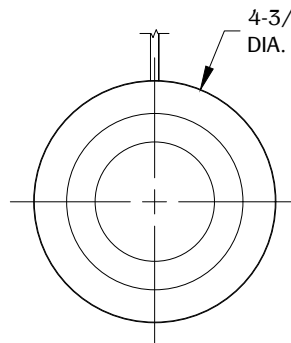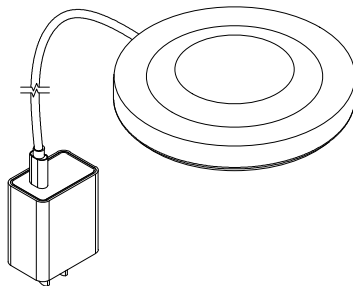


TOP VIEW

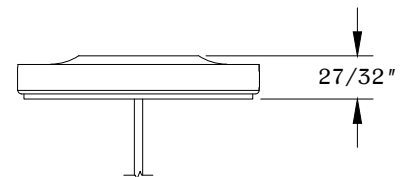 


FRONT VIEW

 1

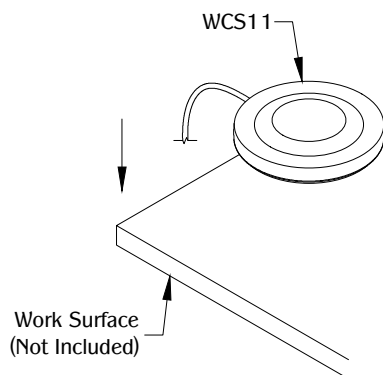

Determine the position and location of the WCS11 on the work surface. DO NOT place the unit where the cable can get strained or trapped.

 2

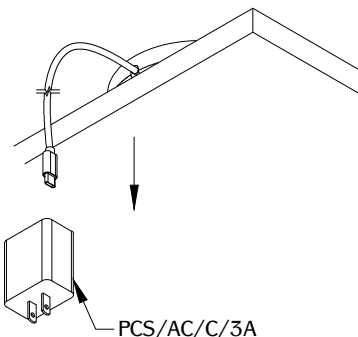


Connect the USB-C power cord from the WCS11 to the PCS/AC/C/3A. Plug the PCS/AC/C/3A into a nearby outlet and the unit is ready for use.

WCS11

PROPRIETARY AND CONFIDENTIAL.

ALL DIMENSIONS HAVE A $\pm 1/32"$ TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

 3

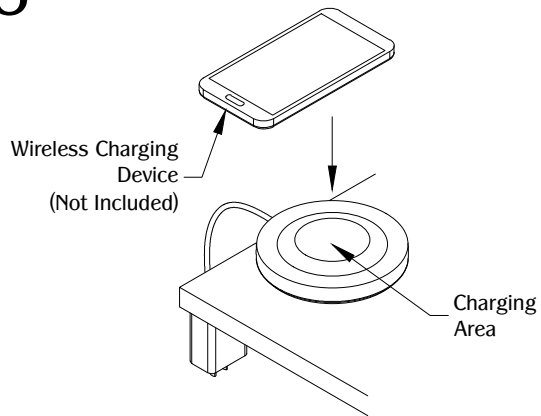

Position the mobile device on the center of the charging area.
The charging icon will activate on the device's screen when properly aligned at the center of the charging area.