



For initial setup and occasionally during day to day use, the Ergo system may need to be reset. This is done by returning the lift columns to their home position. Each lift column communicates its position electronically to the control box. If the system senses that the columns are not moving in sync, the system will stop to prevent possible damage. If this occurs the lifting columns need to be reset by returning to their home position. Before resetting, make sure that there are no obstructions that may be preventing the work surface from moving freely. Additionally, assure that there is nothing between the work surface and the subtop on the desk chassis. Press the down button (may have to push twice) and hold it down until the work surface reaches its lowest position. Release the button and then push and hold the down arrow again. The lift columns will compress an additional 1/16 of an inch. You should hear the

movement in the motor and the work surface may move slightly. Release the down button when movement has completely stopped. Initialization is now complete. The Ergo system is ready for normal use.



Ergo Control Switch

**Notice To Installers:** Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.