




BRETFORD

QUATTRO TABLE CPU Holder

Assembly Instructions

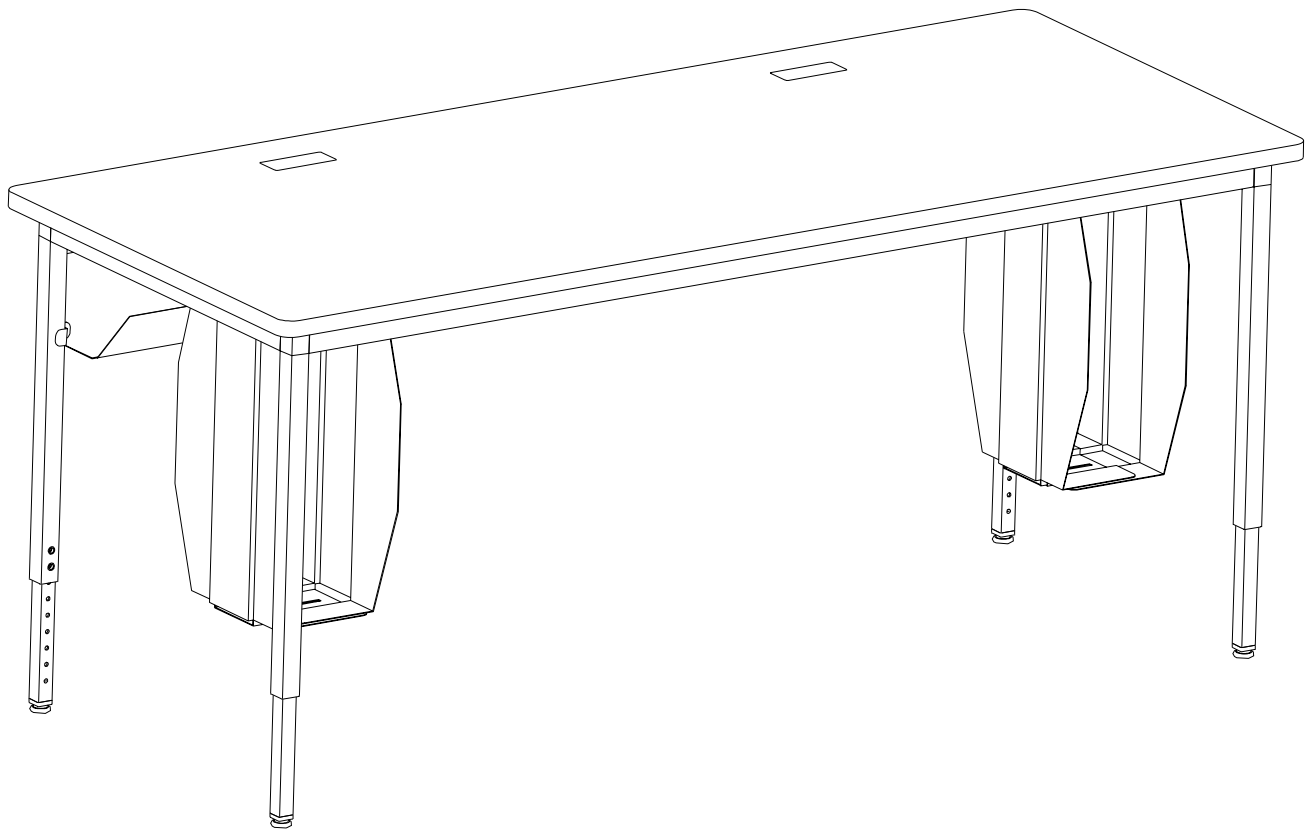

Parts List

<u>Qty.</u>	<u>Part No.</u>	<u>Description</u>
1	010-3344	CPU Side Holder w/hole
1	010-3343	CPU Side Holder w/slot

Hardware List

<u>Qty.</u>	<u>Part No.</u>	<u>Description</u>
6	030-0305	Flat Washer
6	030-0453	#12 x 3/4" LG. PHLPS. TR. HD.
1	030-0306	Flat Washer
1	030-0256	1/4-20 Flanged Nut
1	030-0272	1/4-20 x 1/2" Carriage Bolt

Tools Required


Philips Screwdriver
Allen Wrench
Electric Drill
1/8" Dia. Drill Bit

Note:

**QUANTITY AND LOCATION
OF CPU HOLDER WILL
VARY BY MODEL**

SAFETY WARNING

**Note: TWO PERSON
ASSEMBLY REQUIRED**

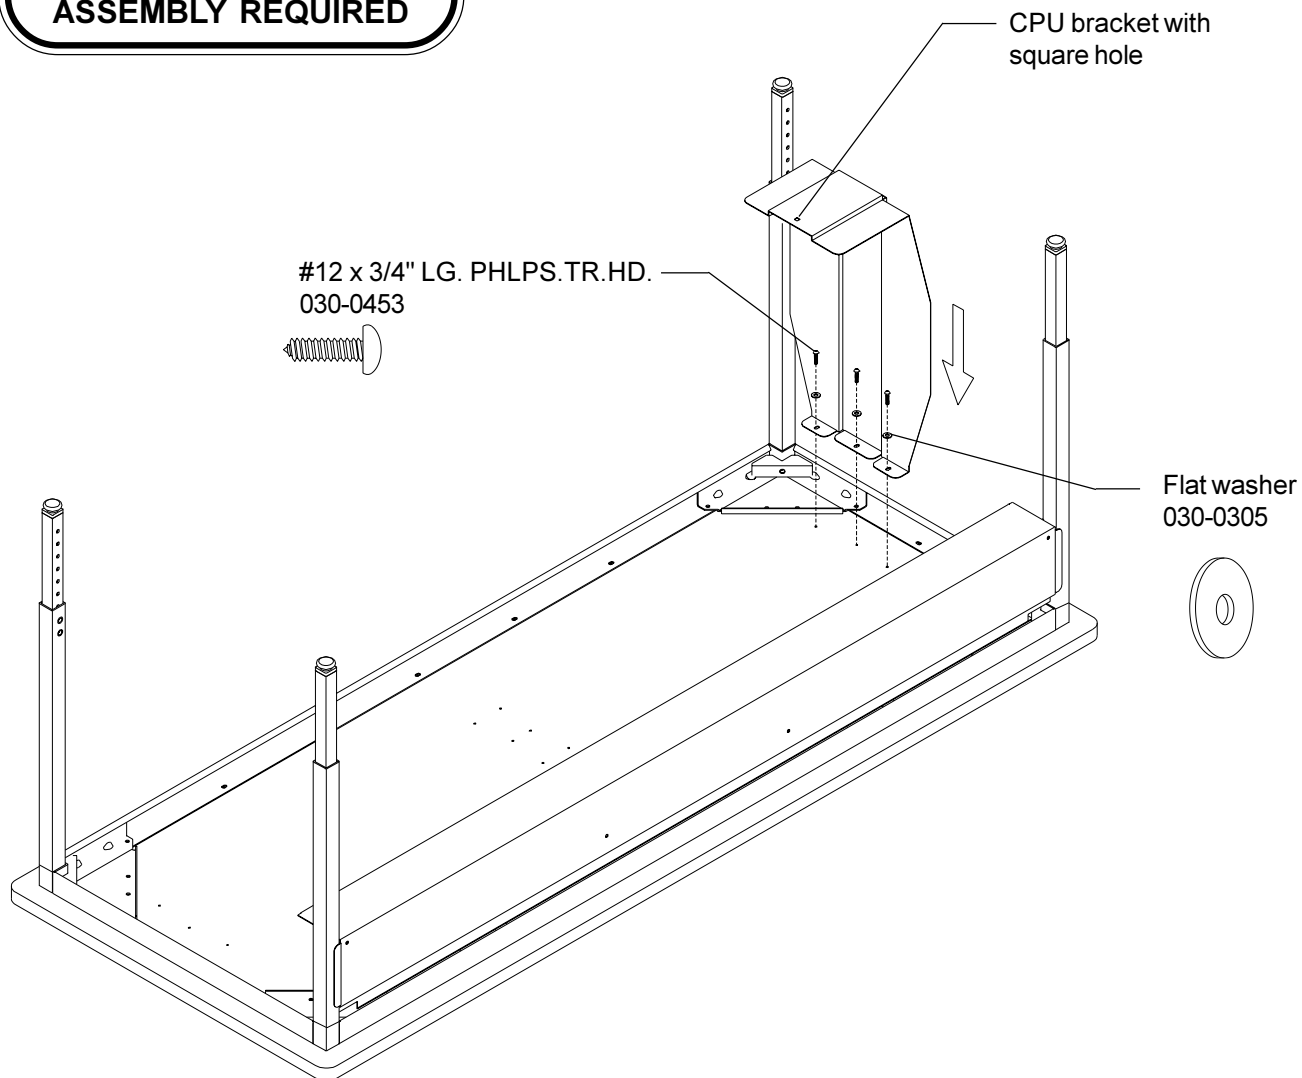


Step 1

Lay the table on a carpeted surface with legs facing up.

The table predrilled so the first CPU bracket can mount on the left, right or middle side of your table (depending on model).

Attach the CPU bracket with the square hole located on the bottom flange first. Install with flat washers (030-0305) and screws (030-0255) as shown.

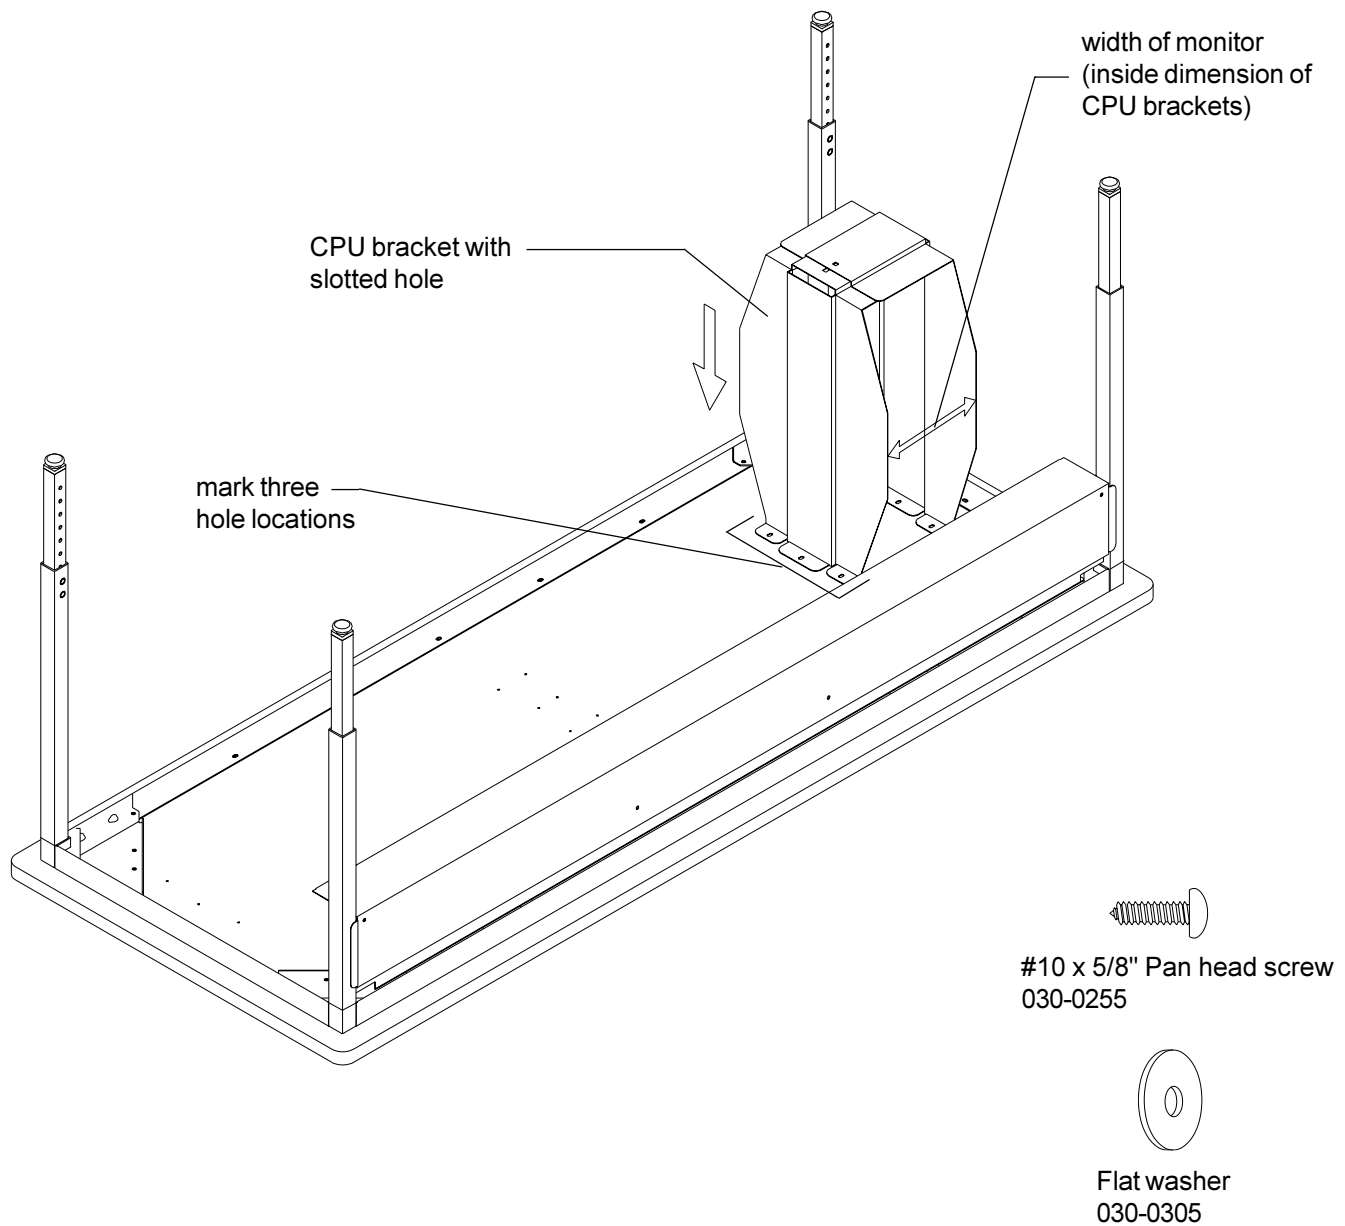



Step 2

Determine the overall width of your CPU. Place the other CPU bracket (with the slotted hole located at the bottom) over the mounted CPU bracket as shown. Adjust the space between the two brackets by sliding the bracket side to side to equal your CPU width.

MAKE SURE THAT THE BRACKETS ARE PARALLEL.

Using the CPU bracket as a template, mark the three hole locations for drilling pilot holes. Carefully drill an 1/8" dia. pilot holes 3/4" deep (see note above). Install the second bracket with flat washers (030-0305) and #10 x 5/8" Pan head screws (030-0255).

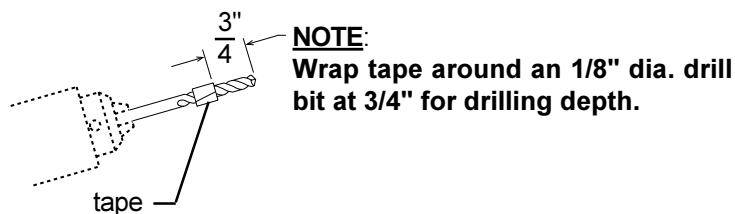

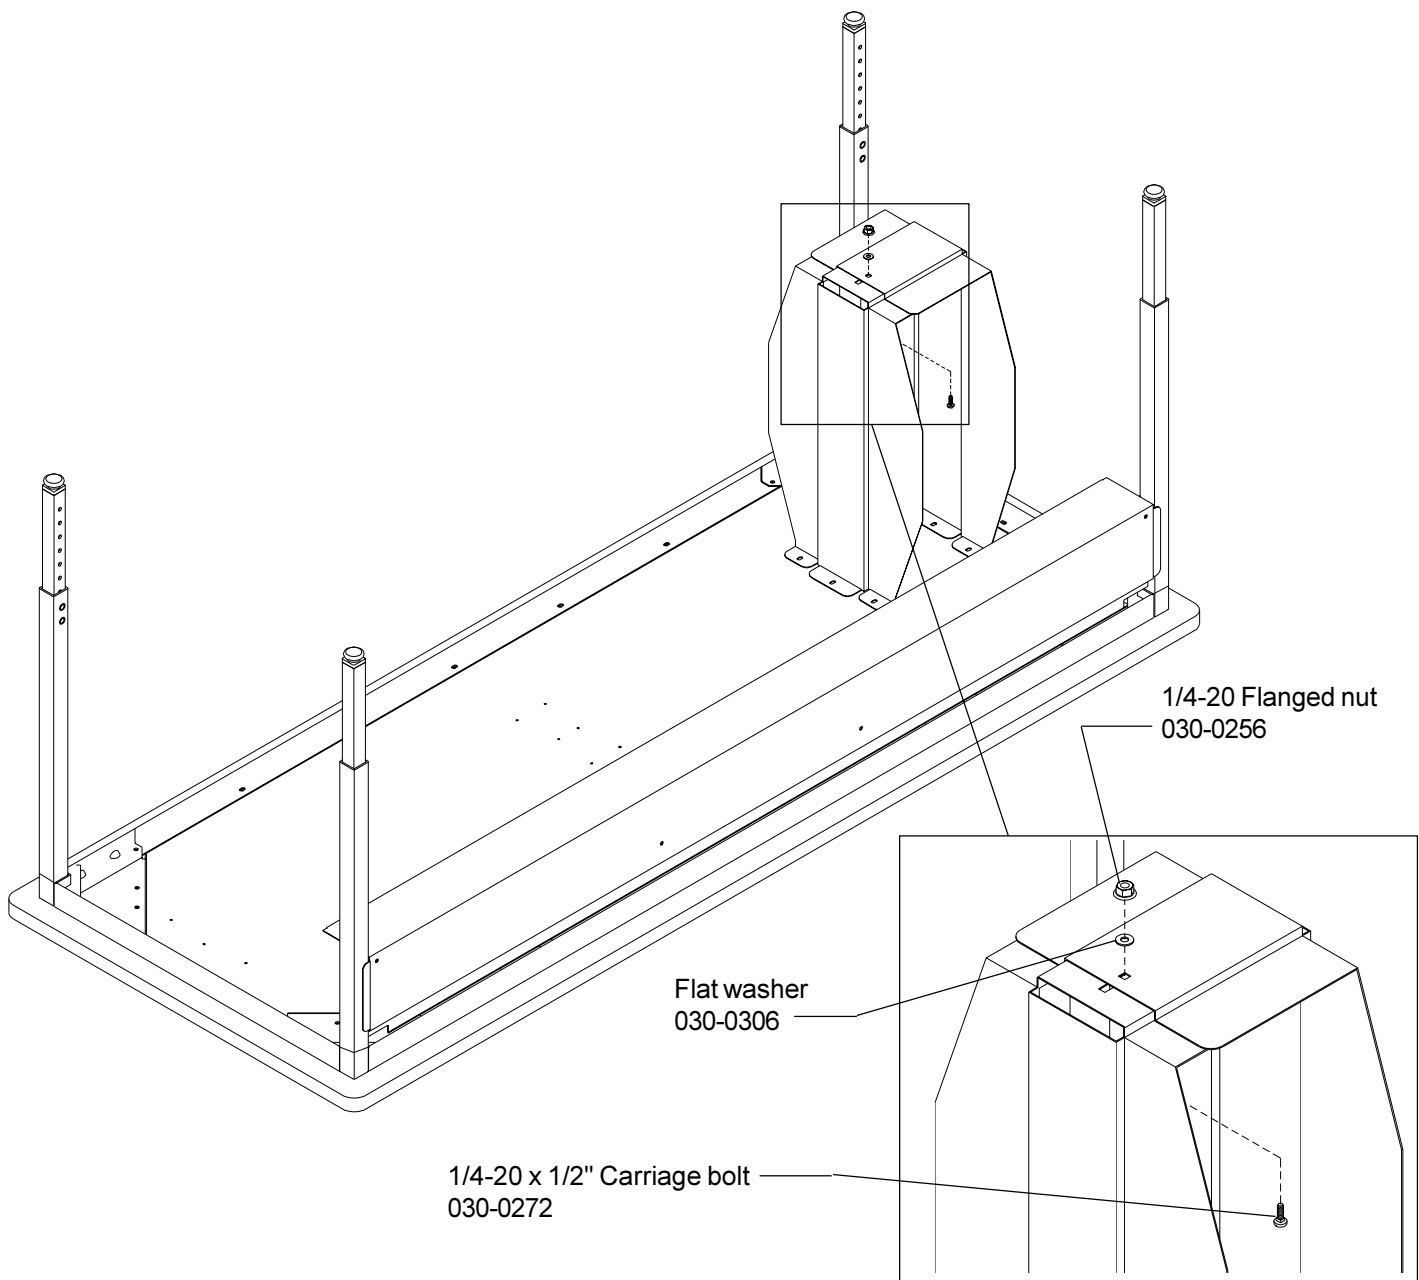

Step 3

Install 1/4-20 x 1/2" Carriage bolt (030-0272) to the inside flange with flat washer (030-0306) and 1/4-20 Flanged nut (030-0256) on the outside flange as shown.

Repeat steps 1,2, & 3 to install additional CPU holder.

Carefully turn over the table and place into position.



1/4-20 x 1/2" Carriage bolt
030-0272



1/4-20 Flanged nut
030-0256



Flat washer
030-0306

Bretford
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

Bretford Ltd.
Technology House
7 Lake End Court, Taplow
Bucks SL6 0JQ England
TEL: 01628 603558
FAX: 01628 604923

www.bretford.com

Part#031-4214
Rev.08.24.01 IM