


DSR28 DSR46 DSR64 DSRT64  
 DSR34 DSR52 DSRT52  
 DSR40 DSR58 DSRT58




## Rail Application

- Slide square nut into groove and align with hole on rail (1a). Align rail clamp with hole on rail (1b).

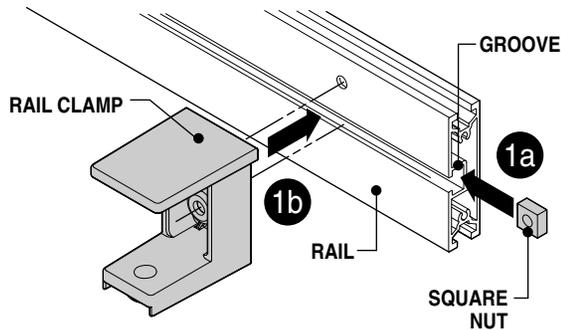

- Insert bolt through rail clamp and into square nut.

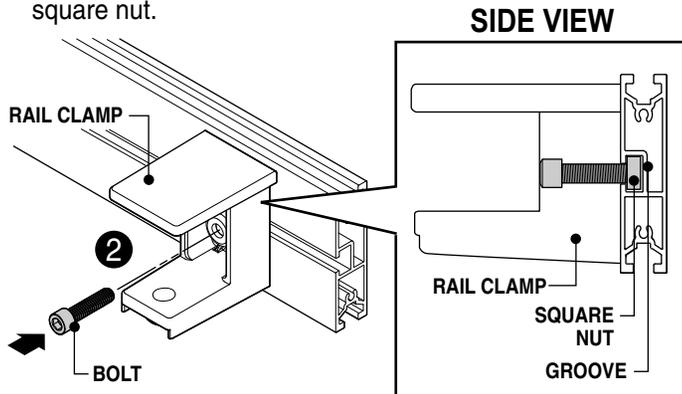


If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)  
 Or visit our website: [www.steelcase.com](http://www.steelcase.com)


© 2015 Steelcase Inc.  
 Grand Rapids, MI 49501  
 U.S.A.

Printed in U.S.A.


- Tighten bolts with allen wrench.

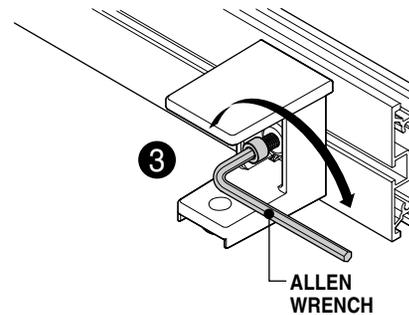

- Insert each set screw into bottom of each rail clamp.

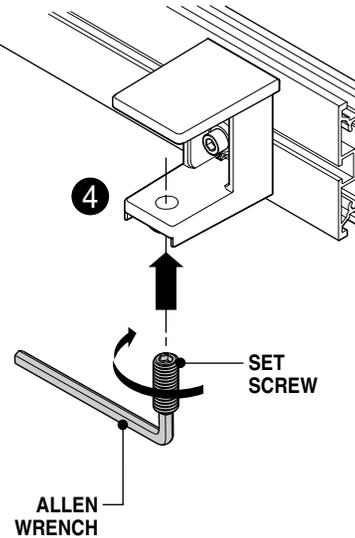

- Slide each rail clamp onto edge of worksurface. Align hole in plate with set screw.

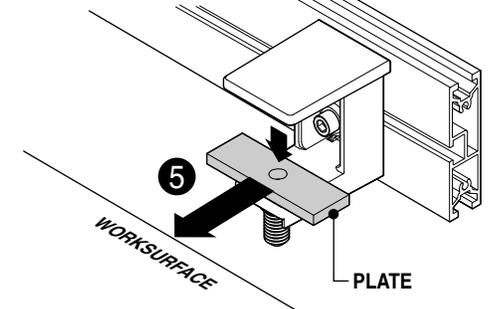

- Tighten each set screw completely with allen wrench to secure each rail clamp to worksurface edge (6a). Insert rail caps onto each end of rail by pressing into place (6b).

NOTE: Tighten set screw until snug. DO NOT overtighten. Torque not to exceed 50 in/lbs.

