


Disassembly Instructions

Torsion Air Nesting Chair

Material Type: A. Steel B. Plastic C. Foam D. Wood E. Fabric

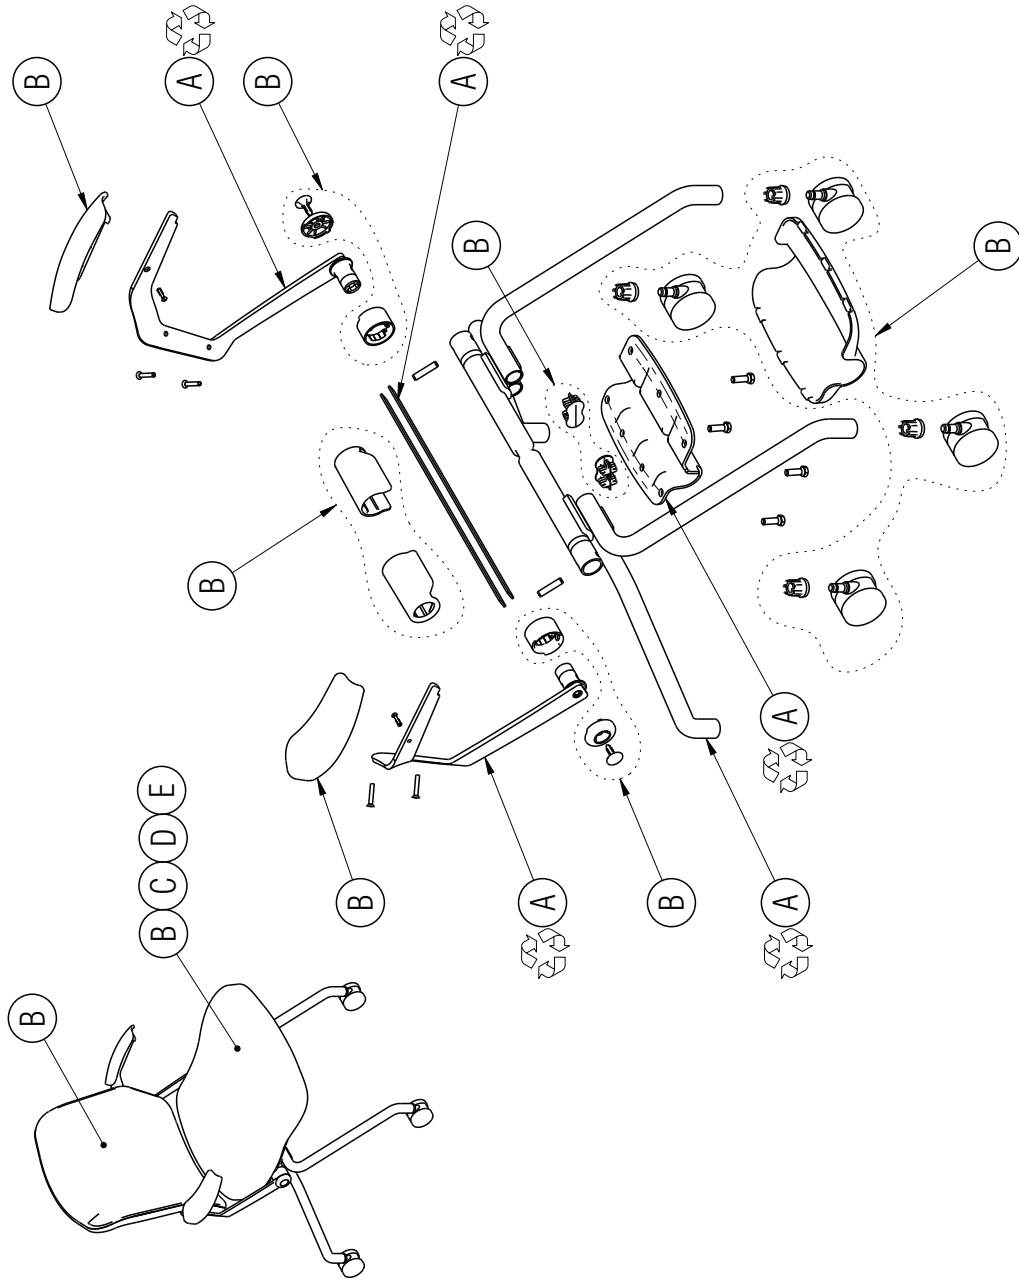

Procedure:

1. Remove the screws holding the backrest onto the back supports and remove the backrest.
2. Pry off the cover under the seat to expose the seat support plate. Remove the screws holding the support plate to the seat and remove the seat.
3. Remove the screws holding each arm cap to the back supports and remove the arm caps.
4. Pry out the end caps holding the arms onto the torsion tube and remove the outer bushings. Rotate each inner bushing so that the slot underneath is aligned with the pin. Push back on the support which will allow the pin to drop out. Pull the supports and inner bushings away from the frame and pull out the leaf springs.
5. Pry out the caps from the seat frame tubes underneath the seat.
6. Pry out the casters and caster bushings from the chair base.

General Notes:

1. Disassembly time: 15-20 minutes
2. This procedure assumes basic familiarity with hand tools and furniture terminology: no specialized training is required
3. All materials removed and disassembled shall be sorted and segregated with like materials and disposed of or recycled according to recycling availability or waste acceptance
4. For items to be recycled, refer to KI's End of Life Recycling Matrix and KI's End of Life Recovery Options Matrix, available at www.ki.com

All fasteners not explicitly tagged are Material Type A: Steel

Required Tools

