
M/Power**

USER GUIDE

Table of Contents

PARTS REQUIRED	3
IDENTIFYING COMPONENTS	4
INSTALLING M/POWER BASE	6
ATTACHING A MONITOR ARM	8
ELECTRICAL SPECIFICATIONS	10

PARTS REQUIRED

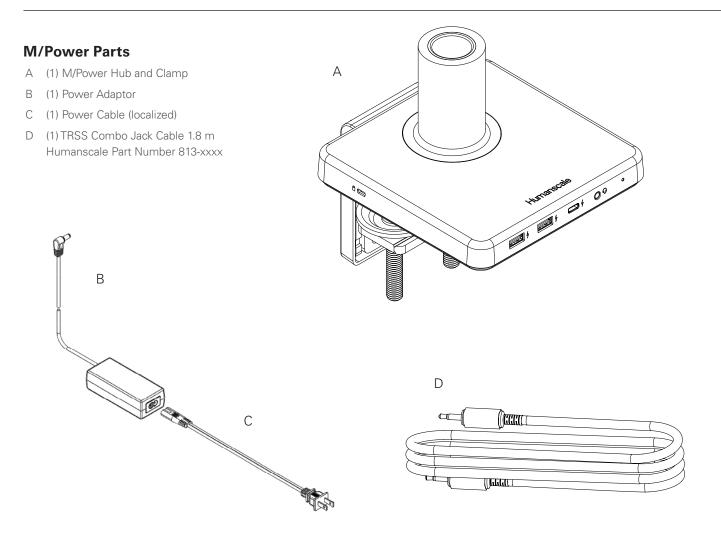

INSTALLAION GUIDELINES

This product is intended to be used with Humanscale's Moniotor Arm product line and the following office desk styles placed on a non-skid surface:

- 1. Systems Furniture with panel hung surfaces
- 2. Systems Furniture with a floor mounted panel behind the desk
- 3. Systems Furniture with a desk mounted panel in the rear of the desk
- 4. Back-to-back desks sharing the same frame


When mounting monitor arm and monitor(s) with this product on a freestanding desk/table:

- 1. The freestanding desk/table should have base that is no less than 30" deep and 66.5" wide
- 2. The freestanding desk/table should be a minimum of 200 lbs and placed on a non-skid surface.
- 3. The tabletop thickness should be no less than 1.2 inches and strong enough to support a minimum weight load of 165lb.




CAUTION: DO NOT rotate monitor past rear edge of desk. Doing so can create an unstable situation and may cause equipment damage or personal injury.

IDENTIFYING COMPONENTS

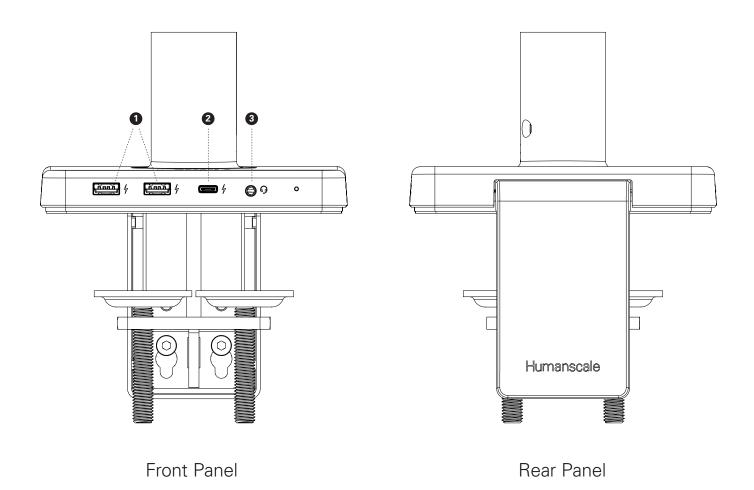

Component		Component	Description
	0	USB A charging port	Supports charging 5V, 2.4Amax
	2	USB Type-C charging port	Supports charging 5V, 3Amax
	3	3.5 mm TRRS jack	To connect combined headphone and microphone headset

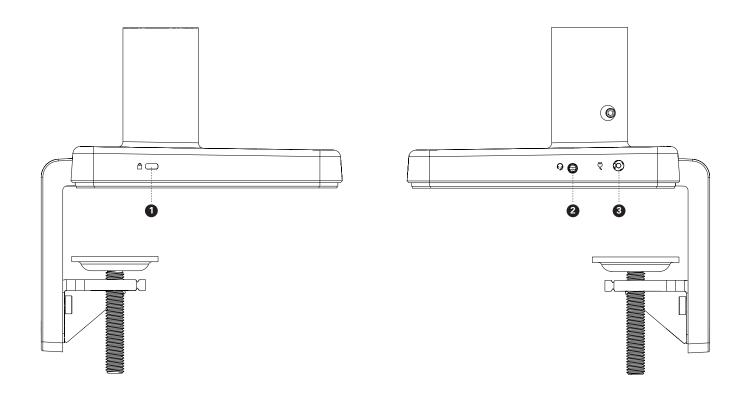

Left Panel Right Panel

	Component	Description
0	Kensington Slot	To secure unit from theft
2	3.5 mm TRRS jack	To connect auxiliary audio cable out
3	DC in	19V / 2.21A DC to power M/Power

INSTALLING M/POWER ONTO EDGE OF TABLE


Caution: Maximum weight load of M/Power is as follows: M2.1: 15.5 lbs. M8.1: 28 lbs. M10: 40 lbs. M/Flex: 60 lbs. Total. M10 is not to be used on M/Flex when mounted to M/Power Do NOT exceed maximum weight limits.

STEP 1

When used in conjunction with M/Power, M/Flex post must be limited to 24 inches

Place M/Power Clamp onto Table

Slide mount against work surface edge and fully tighten clamp screw (fig. A)

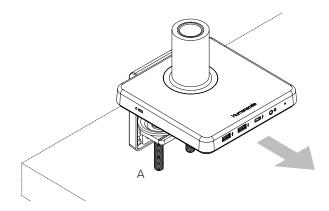


INSTALLING M/POWER THROUGH A GROMMET HOLE OR SYSTEM FURNITURE

STEP 1

Disassemble Clamp

Remove the two screws (fig. B) using 4 mm hex key (fig. D) and detach the smaller clamp bracket (fig. C) from the larger bracket

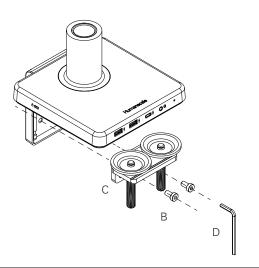


STEP 2

Place into Grommet Hole or System Furniture Gap

Place the L Bracket of the M/Power through the grommet hole and to the desired position


Note: Minimum hole diameter is 3" (76 mm)

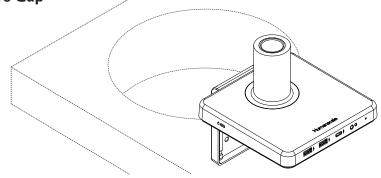

STEP 3

Reattach Clamps

 Secure the lower bracket to the larger bracket reusing the two M6 screws (fig. E)

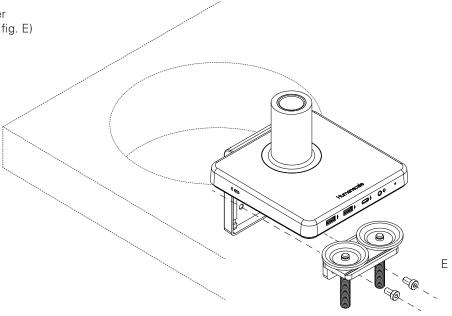


INSTALLING M/POWER ONTO SLIDING DESK

STEP 1


Place M/Power Clamp onto table edge

Slide unit with loosely mounted bracket against work surface edge

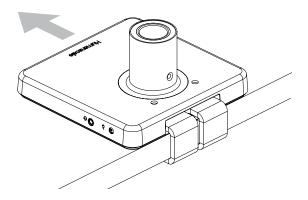

Tighten Clamp

• Tighten both set screws into bracket to a snug fit (fig. F)

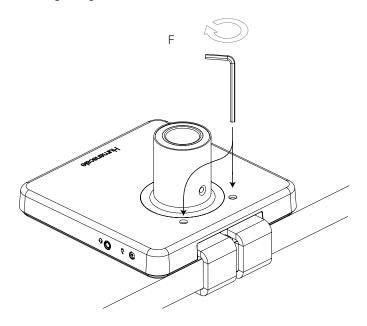


ATTACHING A MONITOR ARM TO M/POWER

M2.1/M8.1 MONITOR ARM

Adjust Base Clamp for Correct Work Surface Depth


- Insert Monitor Arm into the Base stem (fig. H) until you hear it click into place
- Proceed to the "Attach VESA Bracket to Monitor" step in the main M2.1 or M8.1 instruction guide

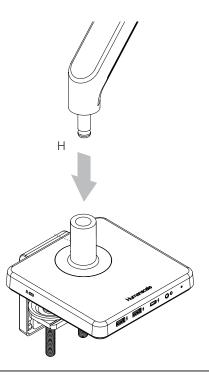


Plug in power cable

- Insert power cable into rearward power jack
- LED light (fig. K) will illuminate to indicate power

Do not use this AC Adapter for other purposes than for its original intented usage with M/Power

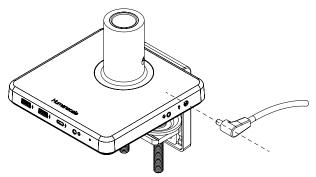


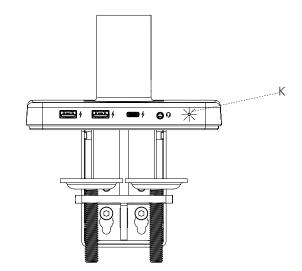

STEP 4

Connect auxiliary cable for audio pass through

- Insert auxiliary audio cable into rearward audio jack, connect to computer
- Insert headphones into front audio jack

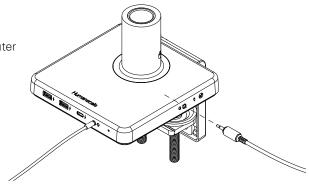

ELECTRICAL SPECIFICATIONS

Ports	USB - A (x2)	Supports BC1.2, Chinese standard YW/T1591-2009. Divider mode voltage on D+D-lines, 5V, 2.4Amax
	USB - C (x1)	Supports USB-C native power delivery of 5, 3Amax
	Audio Pass Through Jack (x2)	4-pole3.5mm combo jack
	DC (x1)	Accepts 19V DC input
Power Consumption	No load	86mW
	Full load	42W
Environmental	Temperature - Operating	0°C to 40°C
	Temperature - Storage	-20°C to 60°C
	Relative Humidity - Operating	20% to 80% (non-condensing)
	Relative Humidity - Storage	5% to 90% (non-condensing)

FCC Notice

M/Power Models MP-AXY (where X and Y can be alphanumeric or blank)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

The FCC requires the user be cautioned that any changes or modifications made to this device that are not expressly approved by Humanscale may void the user's authority to operate the equipment.

Humanscale

1114 Avenue of the Americas

New York, NY 10036

+1 (800) 400-0625

Innovation, Science and Economic Development Canada ICES-003 Compliance Notice:

CAN ICES-3 (B)/NMB-3(B)