Coact lite planning guide









Coact Lite planning guide

Table of contents

Basic Rules 3 - 5 Connection type examples 6 - 16

OF S


Coact Lite planning guide

Basic rules

- Start of run always from left side facing units
- Ganging options for Left (Ganging or No Ganging) / Right (indicates the type of unit on its right.)
 - First (left end) unit = X9 No Ganging Left / (Refer to Right Ganging option descriptions for selection)
 - Middle units = LCHG Ganging Left / (Refer to Right Ganging option descriptions for selection)
 - Last (right end) unit = LCHG Ganging Left / X9 No Ganging Right
 - X9 will always start and end a run




- Can only gang end to end
 - To turn a corner with straight units would require a spearate new run

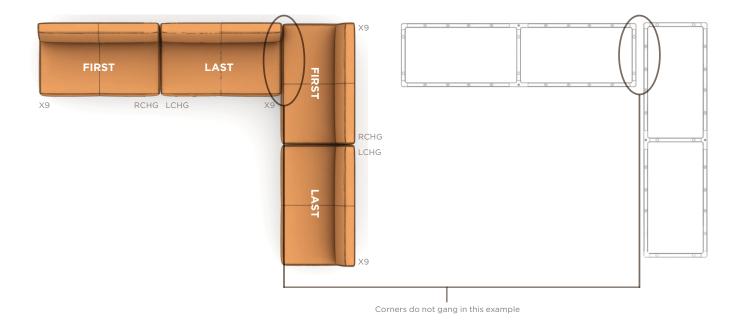





Coact Lite planning guide


- Corner Units
 - Mid/High Back Corners
 - Use as forward facing (Inside curve) only.
 To face it away (non-facing), a separate run would be required starting from the other end. A 207GK ganging bracket can be used

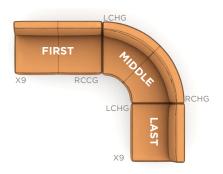

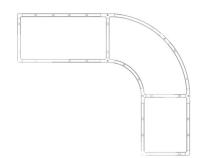

Correct corner with ganging

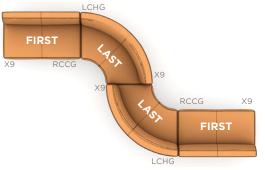

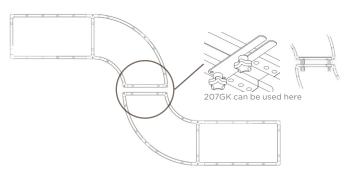

New run required to change facing direction

- Corner Benches, backless
 - 207045-I Inside. Use to curve forward.
 - 207045-O Outside. Use to curve away.





Coact Lite planning guide

• End Tables

• Must be ganged on a minimum of one side. Not available as freestanding.



Ganged to one side






Ganged on both sides

• Armed Seating

- Designed to allow a shared arm arm to no arm or no arm to arm ganging.
- Designed to gang to straight units only, not corners.

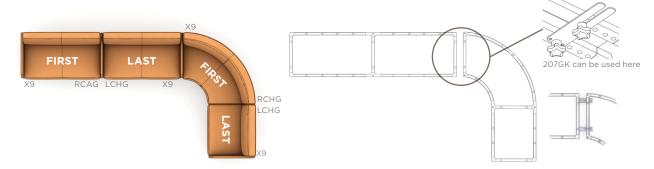

Arm units can only be ganged on straight connections

imagine a place® 5 ofs.com 800.521.5381








Connection type examples

Straight to straight to straight



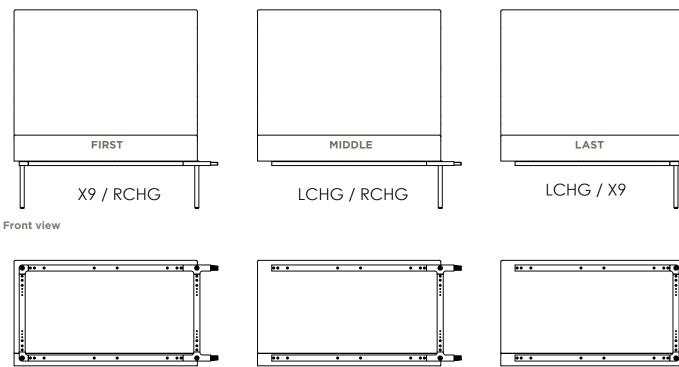


Bottom view







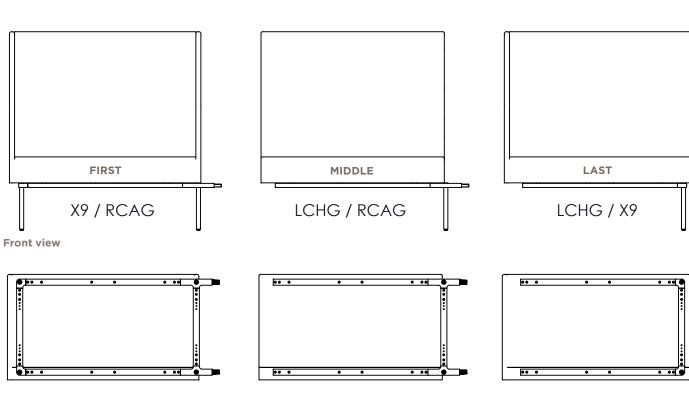



Bottom view




Straight to inside corner connection



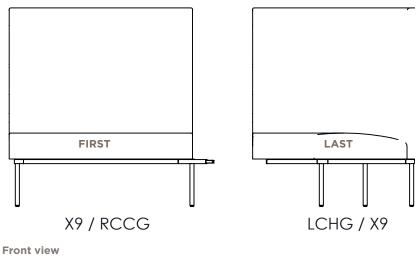

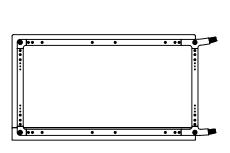

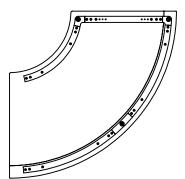


Bottom view





Table to straight to inside corner connections

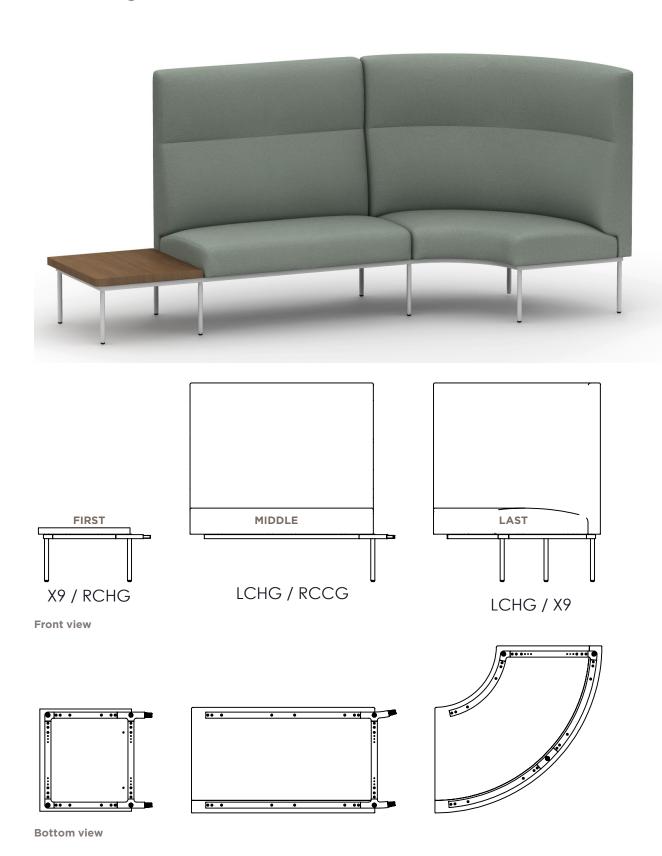

ofs.com imagine a place® 800.521.5381


9










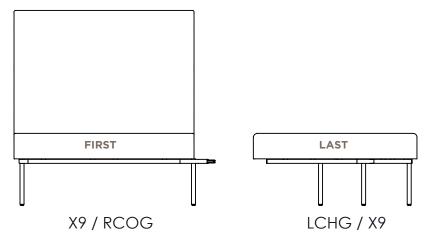

Front view

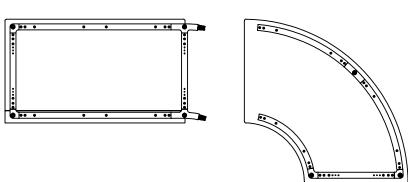


Bottom view




Straight to inside bench connection



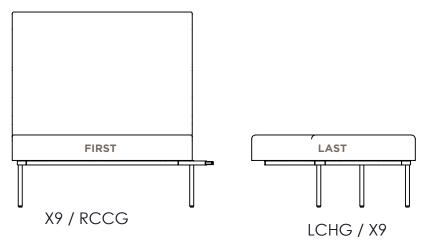

Front view

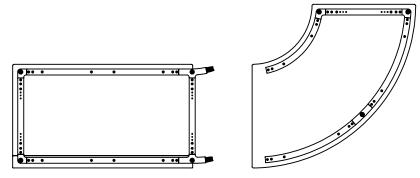


Bottom view






Straight to inside corner to straight connections

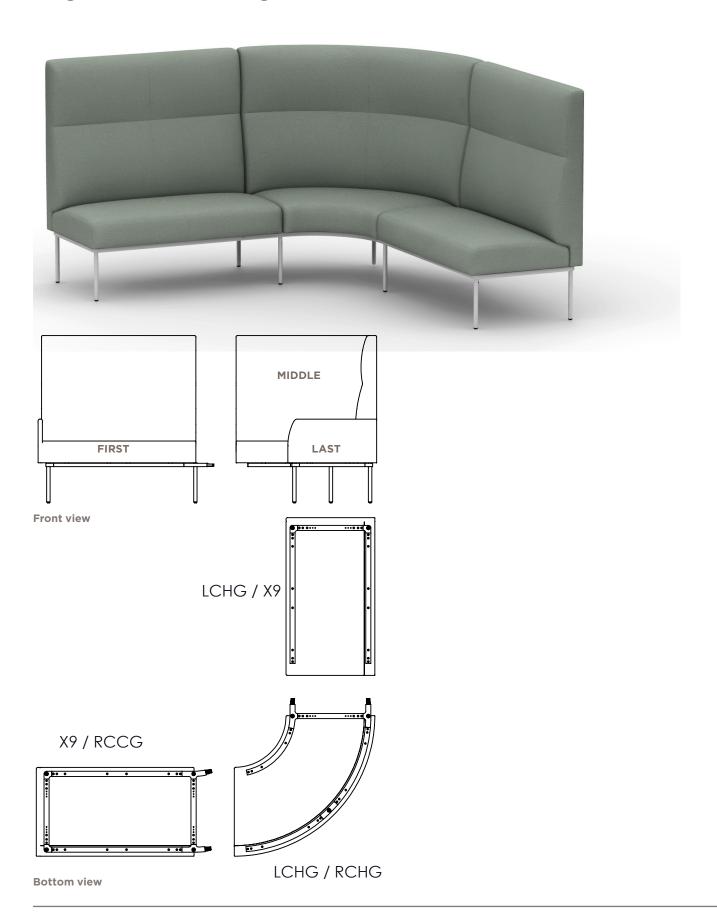




Straight to inside squared corner to straight connections

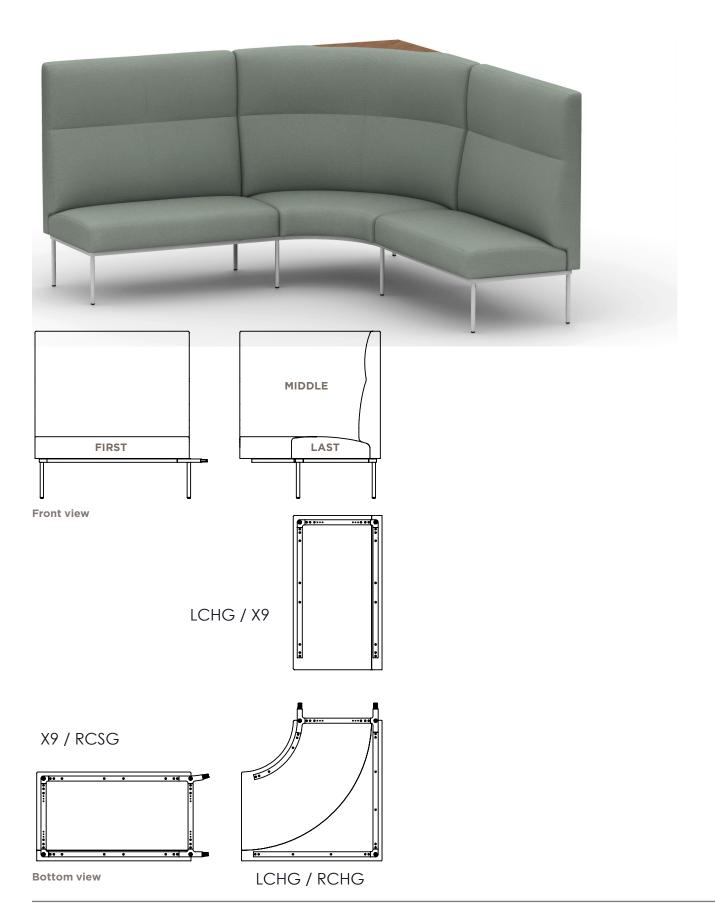

13



Square corner to square corner connection

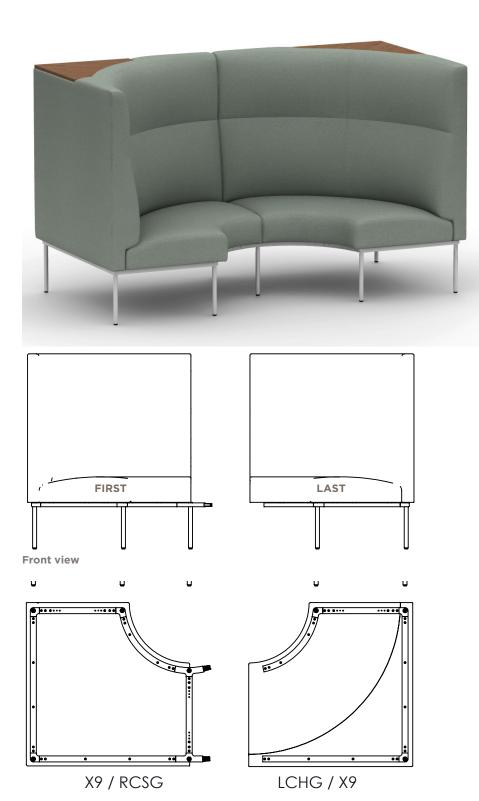

Bottom view



Round corner to round corner connection




Bottom view






Outside bench to inside bench to outside bench connection





Front view

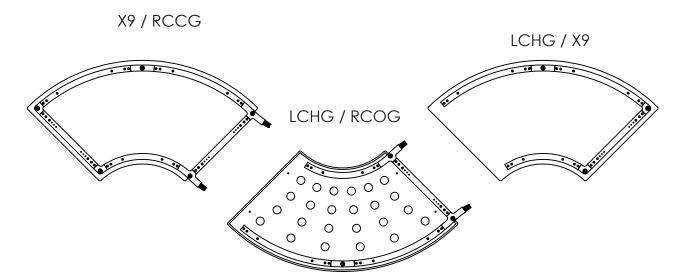

Bottom view