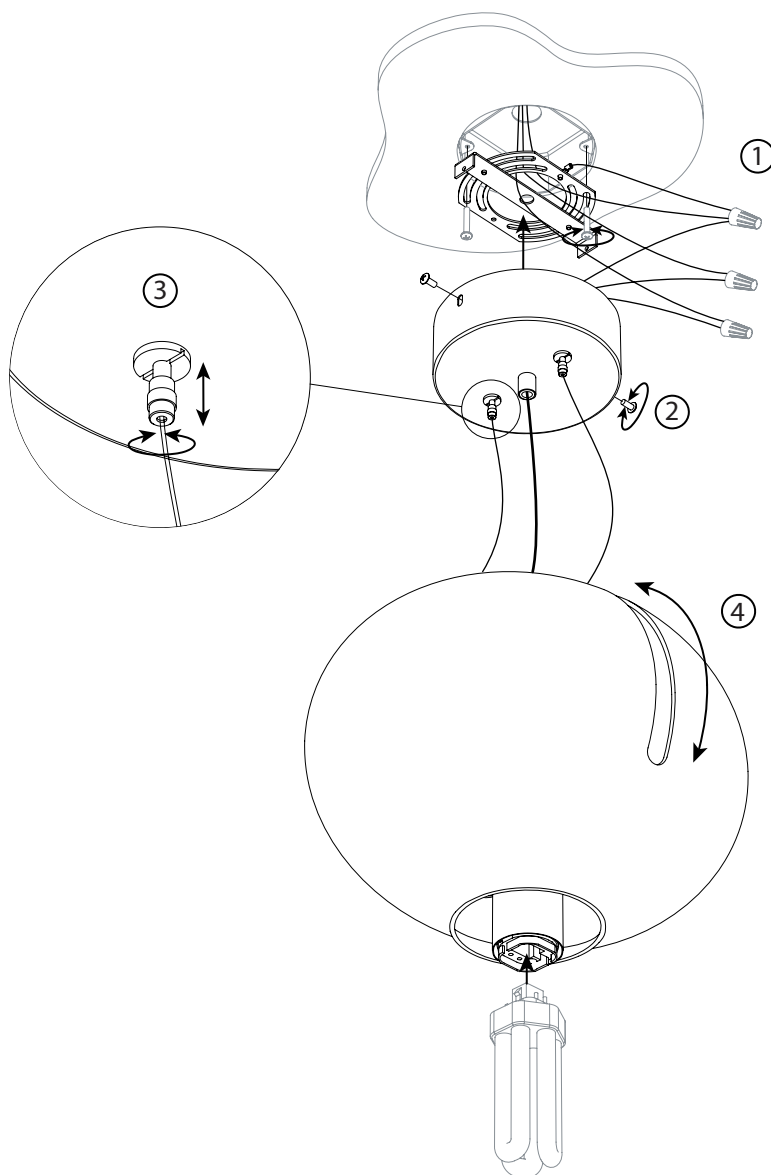


INSTALLATION

REMOVE THE 2 SCREWS [A] TO RELEASE THE UNIVERSAL PLATE [D]

- 1 - INSTALL THE UNIVERSAL PLATE [B], AND MAKE THE ELECTRICAL CONNECTIONS (WIRE NUTS AND SCREWS NOT SUPPLIED)
- 2 - INSTALL CANOPY PLATE [C] ON THE JUNCTION BOX USING THE SUPPLIED SCREWS [A]
- 3 - ADJUST SUPPORT CABLE LENGTH USING THE SPRING CLAMPS
- 4 - TO ADJUST THE OPENING ANGLE, LIFT UP AND ROTATE THE GLASS

MAINTENANCE

- 5 - ADJUST THE OPENING DOWN SIDE
- 6 - REMOVE PROTECTIVE GLASS (IF APPLICABLE) AND INSERT THE BULB (NOT SUPPLIED), IN SOME CASE LIFTING THE GLASS COULD FACILITATE RELAMPING

INSTALLATION

AVANT DE COMMENCER, DÉVISSEZ LES 2 VIS [A] POUR LIBÉRER LA PLAQUE UNIVERSELLE [D]

- 1 - INSTALLER LA PLAQUE UNIVERSELLE [B] SUR LA BOÎTE DE JONCTION ET FAIRE LA CONNEXION DES FILS. (MARRETTES ET VIS NON INCLUSES)
- 2 - FIXER LE PAVILLON À LA PLAQUE UNIVERSELLE EN UTILISANT LES 2 VIS [A]
- 3 - AJUSTER LA LONGUEUR DES CABLES DE SOUTIEN À L'AIDE DES SERRES-FILS
- 4 - POUR ORIENTER L'OUVERTURE, SOULEVER LÉGÈREMENT LE VERRE ET FAIRE PIVOTER DANS LA DIRECTION VOULUE

MAINTENANCE

- 5 - ORIENTER L'OUVERTURE DU VERRE VERS LES BAS
- 6 - RETIRE LE VERRE PROTECTEUR SI NÉCESSAIRE ET INSÉRER L'AMPOULE (NON FOURNIE) DANS CERTAIN CAS SOULEVER LE VERRE POUR DONNER LIBRE ACCÈS À LA STRUCTURE POURRAIT FACILITER CETTE OPÉRATION