


Assembly Instructions









BIG MANI Item 40

JAK SCONCE Item 41


SMALL MANI Item 32

SMALL JAK SCONCE

Item 31

Parts Included: (pictures not to scale)







(1) Big Sconce Base



(1) Mani Mesh Shade



(1) Jak Mesh Shade

Assembly:

WARNING: RISK OF FIRE AND ELECTIRC SHOCK. THIS PRODUCT IS TO BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY.

- Install the sconce base. (See separate hardwire installation instructions included in sconce kit.)
 Try to touch the mesh as little as possible.
- (figure 1) Spread open the back of the shade with your hand. Pull the shade into the coil of the sconce base.
- **3. (figure 1)** The opening in the back of the shade should slip around the socket.
- 4. If you have the Jak design, feel free to manipulate, bend, squeeze the shade to a desired shape. If you have the Mani Design, gently crease the folds of the shade is necessary.
- Install a bulb, turn on, and enjoy! We recommend a clear 60- watt Type CA Candelabra base bulb for Item 31 and Item 32. A clear 60-watt T-10 Medium base bulb for Item 40 and Item 41

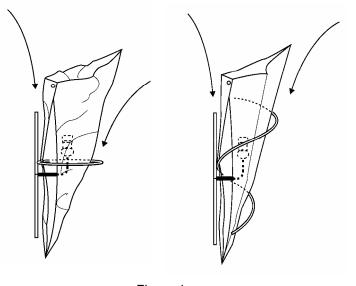


Figure 1

You may put up to a maximum of a 60-watt bulb in this fixture.

SAFETY INFORMATION

SAFETY

We have designed your lamp to meet the highest **UL and CUL** safety standards.

WARNING: RISK OF FIRE AND ELECTRIC SHOCK. THIS PRODUCT IS TO BE INSTALLED ONLY BY A QUALIFIED ELECTRICIAN.

CARE

Mesh shade . . .

Metal mesh will naturally change over time developing a richer, deeper color. The acids and oils from your hands quicken this process. For this reason, it is important to clean your hands with soap and water, drying thoroughly, before handling your shade. Rubbing alcohol (70% isopropyl) applied with a soft nylon brush may help for spot cleaning. Wipe and dry with a clean cloth, or spots may appear from the mesh being damp. (Do not use household copper or brass cleaners, as they will permanently stain the shade.)