




FIRE FARM
 □ 1999 Fire Farm, Inc.
 Elkader, IA
 Made in the USA


SPLAT WALL SCONCE

Item 52-S

Designed by Elizabeth Meredith

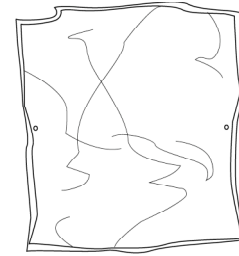

Parts Included: (pictures not to scale)

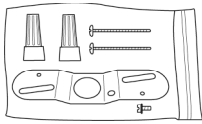


(1) Sconce Mounting Kit



(1) Mounting Screw



(1) Mesh Shade

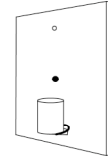

(1) Sconce Plate

WARNING: RISK OF FIRE AND ELECTRIC SHOCK. THIS PRODUCT IS TO BE INSTALLED ONLY BY A QUALIFIED ELECTRICIAN.

Assembly:

First read and install your Sconce Plate using the WALL SCONCE INSTRUCTIONS supplied with the Sconce Mounting Kit.

- (figure 1)** Slide the Mesh Shade down the front of the Sconce Plate so that the socket rests in between the last two layers of mesh. The slit in the mesh should slide down around the metal clip that attaches the socket to the Sconce Plate.
- (figure 2)** Find the hole in the top of the rear layer of the Mesh Shade. Put the Mounting Screw through the hole and secure the shade to the Sconce Plate.
- Install a 60-Watt CLEAR tubular T-10 bulb, turn on, and enjoy!

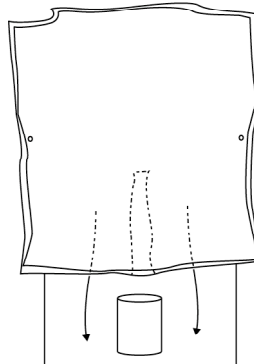


Figure 1

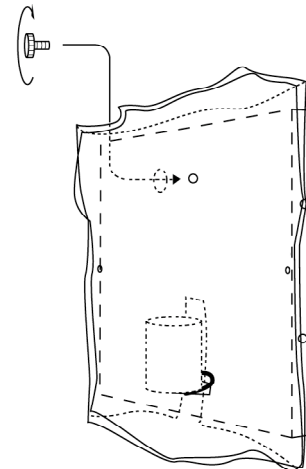


Figure 2

You may put up to a maximum of a 75-watt bulb.

We recommend using a CLEAR T-10 Style bulb for the best lighting effect.

SAFETY INFORMATION

SAFETY

We have designed your lamp to meet the highest **UL and CUL** safety standards.

CARE

Mesh shade . . .

Metal mesh will naturally change over time developing a richer, deeper color. The acids and oils from your hands quicken this process. For this reason, it is important to clean your hands with soap and water, drying thoroughly, before handling your shade. Rubbing alcohol (70% Isopropyl) applied with a soft nylon brush may help for spot cleaning. Wipe area dry with a clean cloth, or spots may appear from the mesh being damp. (Do not use household copper or brass cleaners, as they will permanently stain the shade.)