


Commercial Recessed Compact Fluorescent Rough-In Installation Instructions

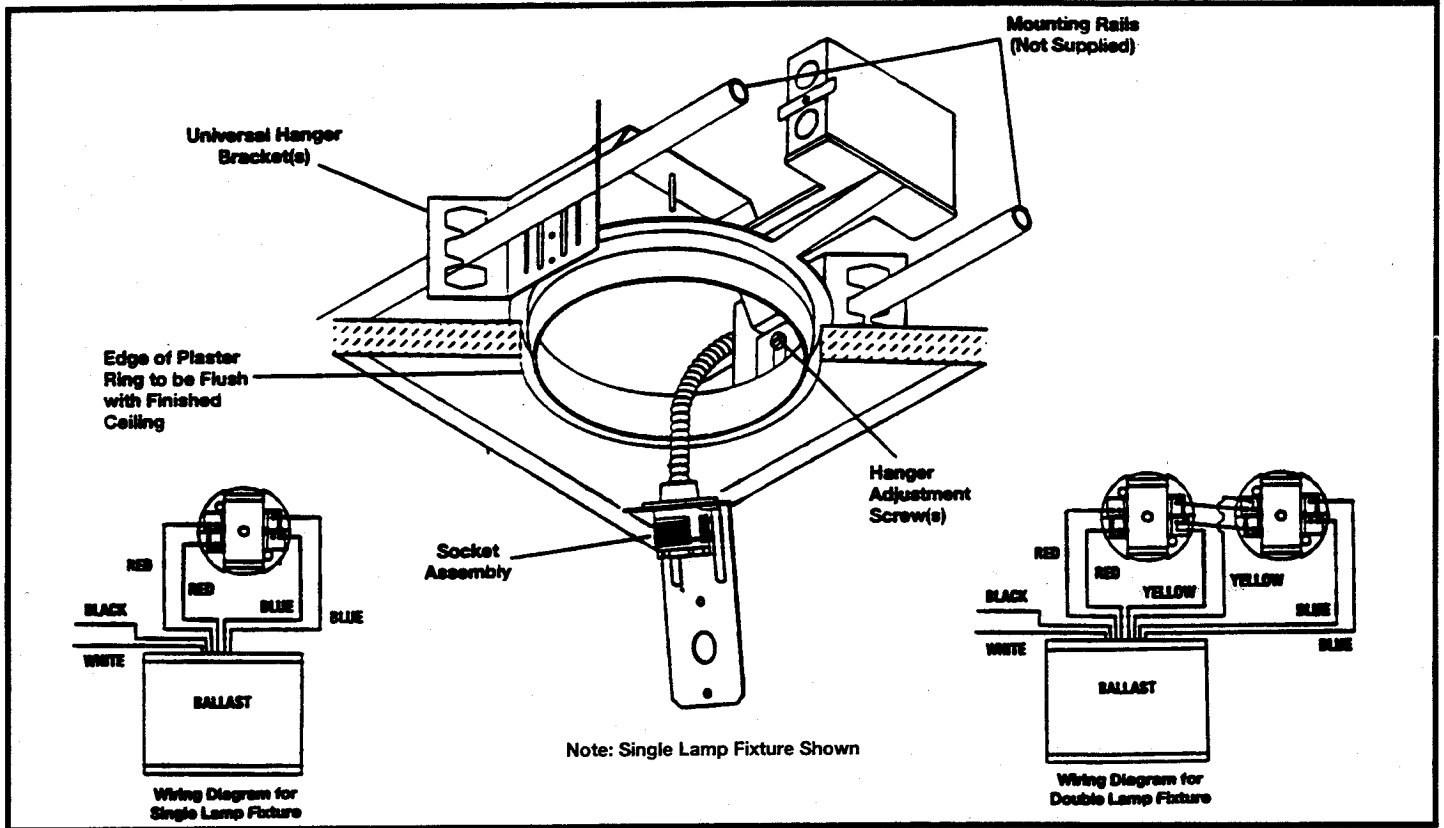

CAUTION: To avoid possible electrical shock, be sure that power supply is turned off before installing or servicing this fixture.

Note: This fixture should be supported by main runners or other structure that is capable of supporting fixture weight of 10 lbs.

To Install Rough-In Section

- Step 1** Install fixture into ceiling cavity using 1/2" electrical conduit, 3/4" channel, 1 1/2" channel, 1/8" x 1/2" bar stock, or T-bar fasteners as mounting rails (furnished by others) by inserting them through hanger brackets at both ends.
- Step 2** Adjust hanger adjustment screws so bottom of plaster ring is flush with finished ceiling line. Hanger bracket is reversible for a total adjustment of 5".
- Step 3** Remove one of the junction box covers. Connect supply lead wires to lead wires of ballast per wiring diagram and in accordance with your local electrical code(s) or N.E.C.

To Install Trims

- Step 1** Attach trim to socket assembly with (2) thumb nuts.
- Step 2** Attach trim assembly to center stud with thumb nut.

To Clean Trims

- Step 1** Gently wipe with a soft, clean, dry lint-free cloth to remove dust.
- Step 2** Wipe with a mild detergent solution on a soft, clean cloth to remove fingerprints and stains.
- Step 3** Rinse with clean, soft water and dry with lint-free cloth.

Note for Wall Wash Installation

Housing is to be installed with Side A facing wall. Wall wash trims can be oriented with stepped reflector facing wall.

Wall Wash Diagram

