

MILLIKEN-APPROVED INSTALLATION METHOD FOR:

WINDOWS

Installation methods not approved by Milliken are at the customer's discretion.

DESIGN	INSTALLATION METHOD
Windows	Monolithic



Modular Carpet Installation Instructions - TractionBack®

The following document describes the correct method for installing Milliken modular carpet manufactured with TractionBack® adhesion backing.

APPLICABLE CRI INSTALLATION METHODS: Except where exceeded or modified by this instruction, Milliken recognizes the CRI Carpet Installation Standard 2011 as the minimum acceptable standard for the installation of its carpet products.

NOTE: The installation contractor is responsible for reasonable inspection of the product prior to installation and for maintenance of dye lot integrity during installation. Milliken will not be responsible for visible defects after carpet has been installed.

GENERAL: Milliken modular carpet with TractionBack® is designed for installation without the general use of adhesive. However, the TractionBack adhesion backing system will ONLY function properly when the stringent floor preparation and installation guidelines outlined below are followed. For this reason, it is VERY important that a qualified installation contractor install this product. Milliken **strongly recommends** the use of a **Milliken Certified Installation Contractor** to install TractionBack modular carpets. As an alternate source, Floor Covering Installation Board (**FCIB**) certified contractors as well as companies that can document that they employ installers certified at the C-2 level or higher by the International Certified Floorcovering Installers Association (**CFI**) are also recognized as viable sources of quality installation.

TILE ORIENTATION: Some Milliken designs require specific installation methods (Quarter-turn, Ashlar, etc.) to achieve the intended appearance.

PRIOR TO INSTALLATION, always consult your local Milliken sales representative or Milliken Technical Services (1-800-528-8453 Option 3) if you have questions or concerns about the correct installation method. Due to the nature and construction of solution-dyed nylon, we are able to provide very unique, tufted design patterns. From time to time during installation, these products may require that tiles be shifted within the layout in order to avoid a dark line in one tile being positioned next to a dark line in another tile. The dark seam is not a carpet manufacturing defect and can be avoided by attention during the installation phase.

FLOOR PREPARATION:

NOTE: The following are guidelines only. Financial responsibility for bringing any floor into conformance with these guidelines must be determined prior to beginning work.

- **Subfloor:** Subfloor must be structurally sound, clean, dust free, smooth and level. Cracks and holes in excess of 1/8" (3.2mm) should be filled with a Portland Cement based floor patching material such as W.W. Henry 547 Unipro™, DAP "Webcrete 98", Maipei "PlaniPatch", Ardex "Featherfinish" or similar. Gypsum based compounds are not recommended.
- **Sealing of Floor:** Sealing or other post treatment of concrete floors is at the discretion of the installation contractor. In general, properly cured (90 days minimum) steel trowel finished concrete requires no additional treatment. Excessively porous or dusty concrete slabs are the only exceptions. Please call Milliken Technical Services if you have questions. Durabond D250 is a recommended product should this type of treatment be deemed necessary; however, any non-silicone based sealer will work acceptably with non-PVC backings. **This treatment is NOT intended to be a corrective for out-of-specification water vapor transmission levels.**
- **Old Adhesive:** Milliken modular carpet backings are non-reactive and contain no PVC or plasticizers, so it is typically not necessary to remove old adhesive from the floor prior to installing Milliken modular carpet with TractionBack®. No chemical incompatibility exists between Milliken modular carpet with TractionBack and any existing floor covering adhesive. This includes "cutback", asphalt emulsion, general-purpose adhesive, epoxy and any other commonly found flooring adhesives. The only physical requirement for existing adhesive films is that they be smooth, non-tacky, and that residual trowel notches be reduced to 1/32" (0.8mm) or less. In most cases the removal of the existing floor covering accomplishes this with only normal sweeping, cleaning, and patching required prior to beginning installation. Milliken is not responsible for subfloor conditions. The installer has the responsibility for obtaining a successful installation.
- **Dust Removal:** For TractionBack to effectively prevent lateral movement, it is REQUIRED that ALL dust and dirt MUST be removed from the floor prior to installation. A thorough wet mopping of the floor surface is REQUIRED prior to beginning installation of TractionBack.
- **Sweeping Compounds:** Oil or silicone based sweeping compounds and similar products, except where specifically approved, must not be used during floor preparation. TractionBack must not be installed over surfaces contaminated with oily residues.
- **Oily Residue/Asbestos Abatement:** If your subfloor is contaminated with an oily residue either from removal of "cutback" during asbestos abatement or from a previous end use such as metal fabrication, this residue MUST be totally removed or covered prior to applying modular adhesive and carpet. In addition, if residual adhesive - either "cutback" or general purpose - has been damaged/reactivated by previously installed PVC-backed carpet, call Milliken Technical Services for guidance. NEVER scrape, sand or mechanically abrade any exposed black adhesive or any existing resilient floor. These may contain asbestos. If residual adhesive is **not** black, scrape or sand until smooth and non-tacky as required above and follow with a thorough mopping as directed above. If additional smoothing is required and residual adhesive is black (cutback or asphalt emulsion) smoothing **must** be accomplished by applying a very thin layer of one of the above patching compounds.
- **Level Floor:** Protruding objects must be removed. Floor must be flat (not undulating) to within 1/4" in 12' (6.4mm across 3.66m) with no abrupt changes. This is very critical with TractionBack since there can be no differential adjustment of corner alignment as is possible when a general coverage of adhesive is present.
- When working with a Gyp-Crete or Gypsum subfloor, Milliken recommends sealing with a gypsum floor sealer prior to installation. Failure to do so will result in an unacceptable installation.
- **Carpet Storage and Conditioning:** Carpet should be stored between 40°F and 100°F (4°C to 38°C) and must be conditioned to between 60°F and 90°F (15°C and 32°C) for at least 24 hours prior to and during installation.
- **Installation Temperature and Humidity:** Floor temperature should be 60°F (15°C) minimum for proper performance of TractionBack. Floor temperature should not exceed 90°F. Relative humidity of the slab should not exceed 85% as measured by the RH Probe Test (ASTM F2170).
- **Floor pH** should not exceed 10.0. Floor should be acid washed using a 50/50 vinegar and water or a 1/20 muriatic acid and water solution if pH is greater than 10.
- **Water Vapor Emission:** Water vapor emission should not exceed 8 lbs. per 1000 square feet (3.6 kg/93m²) per 24-hour period as determined by the #625 Anhydrous Calcium Chloride test available from Taylor Tools, Denver, Colorado 800-525-3714. Equivalent tests (Vaprecision® or SINAK's "dome" test) are also available from various suppliers. Any test used MUST be performed to comply with ASTM F-1869-98. Milliken modular carpet with TractionBack has been tested to accept water vapor emission levels up to 8 lbs. without creating adhesion bonding problems. However, on all TractionBack projects where the use of any supplemental adhesive materials may be necessary and the water vapor emission level is above 5 lbs. in that area, the installation MUST be pre-approved in writing by Milliken Technical Services (1-800-528-8453, Option #3).


INSTALLATION INSTRUCTIONS:

GENERAL: The most important part of any modular installation occurs before the first tile goes on the floor or any adhesive is applied. **Proper planning and layout is crucial to the success of all modular installation.** Floor preparation should be verified before beginning installation. Milliken Technical Services should be contacted for assistance if problems are encountered.

1. Place a carpet tile on the cleaned floor and press the entire tile down firmly. Kneel beside the module and attempt to slide it across the floor by grasping the opposite edge and pulling. The tile should not move laterally.
2. Lift a corner of the tile and then lift the tile from the floor. The tile should easily separate from the floor surface.

CHALKLINE APPLICATION: Once floor preparation is completed and the floor thoroughly mopped, two working chalklines must be applied to the floor to insure a straight, square, and properly aligned installation. These chalklines intersect at the starting point and are exactly 90° to each other. Following are two methods for applying chalklines:

METHOD #1 - TRIANGLE METHOD:

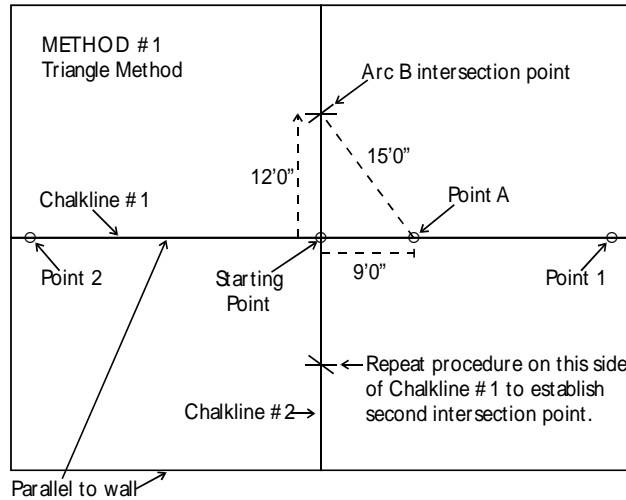

Chalkline #1: Regardless of method, chalkline one - also referred to as the “baseline” - is snapped roughly parallel to some architectural feature (outside wall, column line, etc.) and generally runs the longer dimension of the area. This is done by placing two and only two points on the floor as far apart as possible within the area at the same distance from the selected architectural feature. (See Point 1 and Point 2 on the diagram.) This distance is determined by the installer to optimize cut sizes and minimize waste.


Starting point and Chalkline #2: Select a starting point somewhere on Chalkline #1. Location of starting point is usually but not always close to the true center of the area. It may be offset to optimize cut sizes. Using the largest possible multiple of a 3-4-5 triangle (6-8-10,9-12-15,12-16-20, 15-20-25, 18-24-30, 30-40-50 etc.), construct a chalkline through the starting point exactly 90° to chalkline #1 as follows:


Note: In this example we will use a 9-12-15 triangle measured in feet and inches, however, units of measure used do not affect the validity of the procedure.

Construct Chalkline #2 as follows:

1. Measure exactly 9’0” from the starting point along chalkline #1.
2. Measure exactly 12’0” from the starting point approximately perpendicular to the line #1. Mark an arc (line) on the floor parallel to chalkline #1 four to five inches long as indicated by Arc “B”.
3. Measure exactly 15’0” diagonally from point “A” to Arc “B” as indicated.
4. That point on Arc “B” exactly 15’0” from point “A” when connected with the starting point gives a line exactly 90° to chalkline #1. For maximum accuracy, this procedure should be repeated on the opposite side of chalkline #1. A chalkline or a dry line should be stretched between the two intersection points created. If measurements are accurate, the string will go directly across the starting point.

METHOD #2 - DOUBLE ARC METHOD:

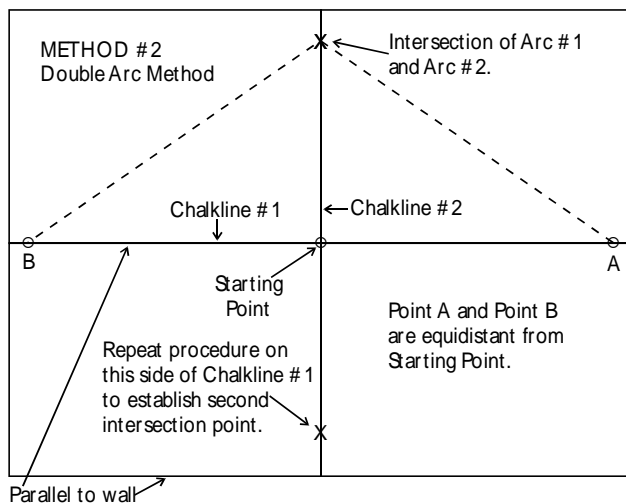

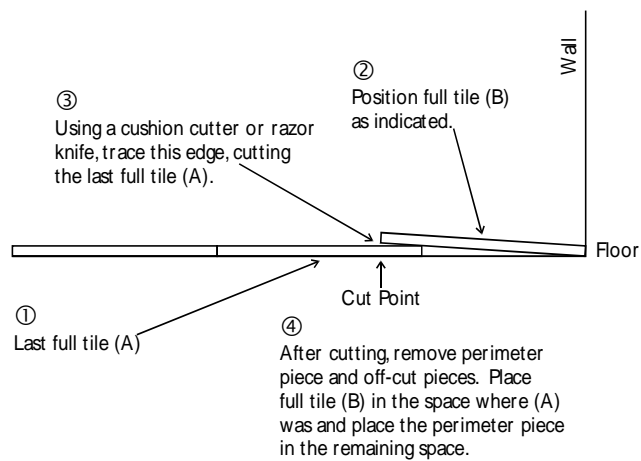

- A fixed and unmovable perimeter is mandatory to insure the performance of the finished installation. To avoid tile movement or shifting, each tile must be firmly fitted (within 1/16") to all wall lines or fixed building structures. When this is not practical, the product must be securely anchored using a perimeter adhesive (18" to 24" wide) or double faced tape. Adhesive or double faced tape should be used under all partial or cut tiles measuring less than 12" in any single direction.
- In situations where vertical abutments do not extend to (connect with) the floor, or cutting techniques do not yield a snug fit to the wall, Milliken recommends the use of a locking mechanism. A minimum of two strips of double faced carpet tape or a 12" wide application off Milliken pressure sensitive adhesive applied along the walls are acceptable locking mechanisms.
- Properly installed installations with TractionBack can begin receiving foot and rolling traffic as soon as they are finished and locked into the perimeter of the area. Exposed edges should be protected when rolling heavy loads such as pallets of carpet across the installed portion. Plywood or Masonite should be positioned on the carpet when heavy furniture or supplies are moved.
- The recommended casters for desk chairs should have a tread width of 3/4" to 1" (19mm to 25mm), and a wheel diameter of 2" - 2 1/2" (5cm - 6cm) tapered. Hard polyolefin composition is recommended. For more detailed information, contact Milliken Technical Services.

TRANSITIONS AND STAIRS:

- For the most attractive finish with its modular products Milliken recommends the use of top set cove base after carpet installation is completed.
- Appropriate transition strips **MUST** be installed wherever there is a potential for an edge to be exposed or where Milliken modular carpet finishes to another flooring type. The total thickness of Comfort Plus®- and Underscore™-backed products requires a transition treatment capable of accepting the carpet without the necessity of modifying or adapting the edge. Johnsonite's EG-XX-W edge guard and CRS-XX-D reducer have proven successful for edge protection for Comfort Plus- and Underscore-backed products. Equivalent products from other manufacturers are also acceptable.
- For best long term performance on stairs, a double undercut nosing such as Johnsonite part SVCD-XX-A or equal should be applied to each step with modules cut to fit on both the tread and the riser. This method of installation on stairs protects the carpet from receiving the impact present at the nose and helps in holding the riser carpet in place. Generally a Cove Base type adhesive is also used to adhere the riser and tread piece to insure that the carpet stays in place.
- It is possible to install both Underscore™- and Comfort Plus®-backed modules on stairs without the use of a separate nosing. This requires modifying and/or removing the backing and results in placing a structurally compromised product directly on the nose of the stair with no protection from the severe impact and abrasion that will occur. This is not recommended.
- Johnsonite transition treatments, stair nosings and similar products from other manufacturers are sold through distributors. For the location of the nearest Johnsonite distributor, call 800-899-8916. When obtaining transition/nosing treatments from other manufacturers, always be sure to specify the total thickness of the carpet product being installed to insure the correct transition product is used. **USE OF IMPROPER AND/OR INADEQUATELY INSTALLED TRANSITION TREATMENTS WILL RESULT IN EDGE FAILURE. SELECTION AND INSTALLATION OF THESE PRODUCTS IS THE RESPONSIBILITY OF THE INSTALLATION CONTRACTOR.**

PROTECTING CARPET AFTER INSTALLATION:

Milliken recognizes the CRI Carpet Installation Standard 2011 as the standard guideline for protecting carpet and associated materials after installation. The CRI Standard specifically states: "It is recommended that carpet be the last trade on any job site. However, if it is required to protect the finished floor covering from soil or paint, or if any additional work is required to be done after installation, the carpet should be covered with a non-staining building material paper. Protect the installation from rolling traffic by using sheets of hardboard or plywood in potentially affected areas." Also, CRI cautions: "Self-adhering plastic films may leave residues that result in rapid soiling after removal. Do not place plastic sheeting over any carpet installation because it may present a slip hazard. Most importantly, plastic coverings will trap moisture, retard adhesive curing and may promote mold growth."

NOTE: THE ABOVE INSTALLATION INSTRUCTIONS ARE GENERAL IN NATURE AND ARE NOT COMPLETE FOR EVERY MILLIKEN MODULAR CARPET PATTERN. SOME MILLIKEN PATTERNS REQUIRE SPECIFIC INSTALLATION METHODS (QUARTER-TURNED, ASHLAR, ETC.) TO ACHIEVE THE DESIRED APPEARANCE. ALWAYS CONSULT YOUR MILLIKEN REPRESENTATIVE OR TECHNICAL SERVICES IF THERE ARE QUESTIONS ABOUT THE CORRECT INSTALLATION METHOD.

This information is supplied by Milliken & Company
300 Lukken Industrial Drive West, LaGrange, Georgia 30240
BACKED BY THE LARGEST, MOST PRODUCTIVE RESEARCH AND DEVELOPMENT FACILITY IN THE CARPET INDUSTRY.
Call Technical Services Team Toll Free 1-800-528-8453 - Select Option #3

The above instructions represent the best available data and are deemed to be correct and complete; however, Milliken assumes no liability for installation-related problems.

07/2011