

Installation Instructions

Photopolymer Curved Face Signs

FIG. 1


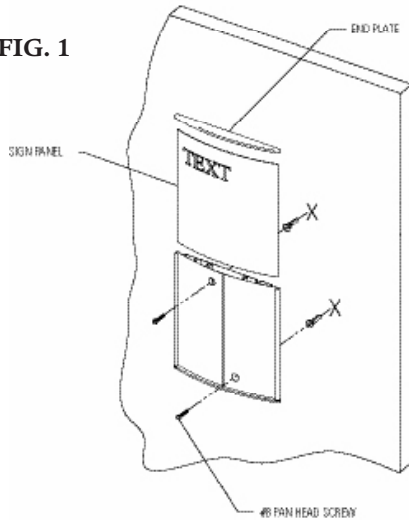


FIG. 2

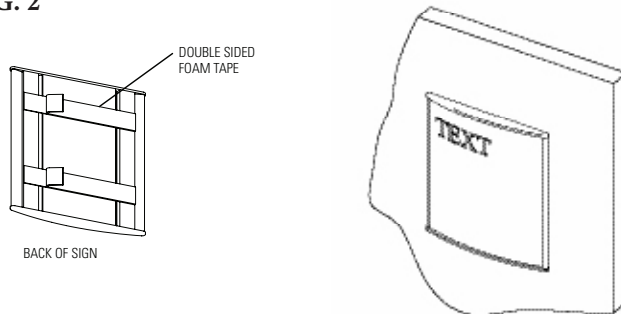

The Americans with Disabilities Act (ADA) and Building Codes regulate the placement of signage in buildings. Follow building codes when installing signage. ADA recommendation: 4.30.06 Mounting Location and Height. Where permanent identification is provided for rooms and spaces, signs shall be installed on the wall adjacent to the latch side of the door. Where there is no wall space to the latch side of the door, including at double leaf doors, signs shall be placed on the nearest adjacent wall. Mounting height shall be 60 inches above the finished floor to the centerline of the sign. Mounting location for such signage shall be so that a person may approach within 3 inches of signage without encountering protruding objects or standing within the swing of a door.

Mechanical Fasteners-See Fig. 1

1. Remove one end plate from sign frame.
2. Mark holes on wall using the signage frame as a template.
3. Drill $\frac{1}{4}$ " holes for Alligator anchors and push the anchors into the holes.
4. Mount curved frame to the wall with #8 pan head screws, screwed into the Alligator anchors.
5. Slide sign panel into the frame.
6. Reattach end plate to the sign frame.

Foam Tape-See Fig. 2

1. Mark the location of the sign on the wall.
2. Sign is applied using double-sided foam tape. Remove release liner from the double-sided foam tape.
3. Position the sign on the wall making sure that the sign is level.
4. Press the sign to the wall making firm contact between the foam tape and the wall surface.



Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556