


Installation Instructions

S600 Dimensional Characters


FIG. 1

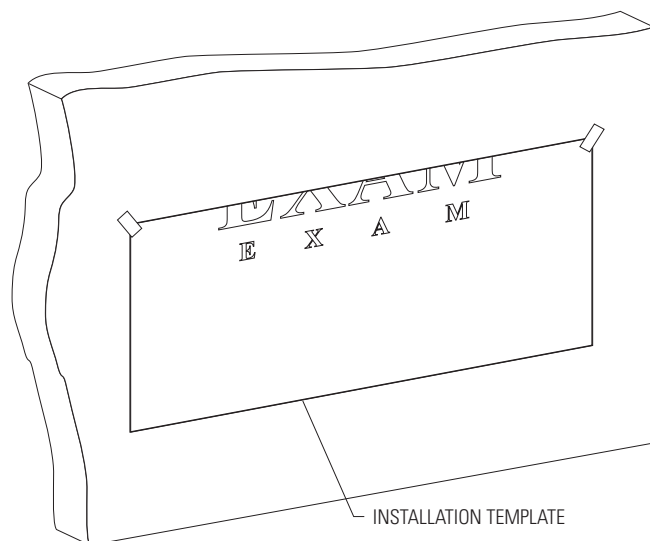

Please read all instructions before installing dimensional characters. Material must be stored, installed and used in environmentally controlled conditions. Wall must be dry, well sealed and free of dirt, loose paint, wax and grease.

1. Determine the location of the dimensional characters on the wall. Tape the installation template on the wall where the bottom edges of the letters are to be located. The bottom edges of the dimensional letters overlap the installation template and aid the installer in properly spacing the letters. (See Figure 1)
2. Apply foam tape, PL Premium Adhesive or a combination of both to the back of each letter keeping the tape and adhesive away from the part of the letter that will overlap the installation template. (See Figure 2)


FIG. 2

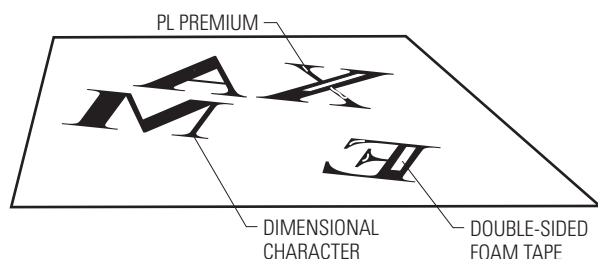

Installation Instructions

S600 Dimensional Characters

FIG. 3

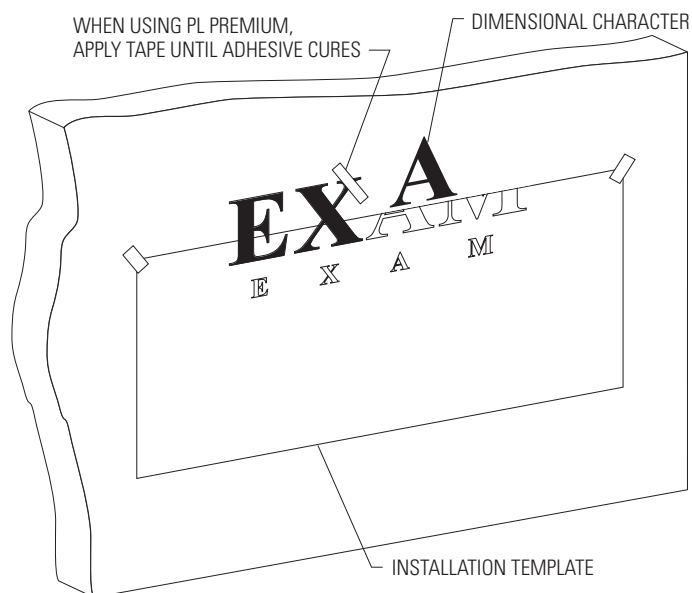

3. Remove the release liner from the foam tape and position the bottom of the letter on the appropriate location of the installation template. Press the letter firmly to the wall. If using PL Premium Adhesive, wipe off any excess adhesive while it is still damp and tape the letters to the wall until the adhesive cures. (See Figure 3)

NOTE: Some parts of a letter may be too small for foam tape. In these situations use PL Premium Adhesive to adhere these areas of the letters. Tape the letters to the wall until the adhesive cures (approximately 24 hours). Dots, commas, apostrophes and other pronunciation marks may require visual alignment with adjacent letters.

FIG. 4



4. Remove the installation template from the wall. (See Figure 4)