


Installation Instructions

Custom Formed Vinyl or EnviroGT Non-PVC Door Frame Guard

FIG. 1

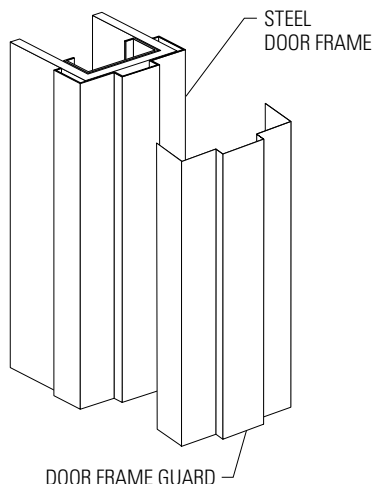

APPLY CONTACT CEMENT TO BOTH DOOR FRAME AND BACK OF DOOR FRAME GUARD

Please read all instructions before installing door frame guards.

Material must be stored, installed and used in environmentally controlled conditions.

1. The door frame must be smooth, dry and free from dirt, dust, oil, loose paint, wax and grease.
2. Apply 3M Fastbond 30 Contact Cement with brush to back of door frame guard and painted or primed door frame. Let the contact cement dry completely. After contact cement is dry, the installation must be completed within four hours. Properly position the door frame guard on the frame. Press the door frame guard on the frame and apply pressure with an IPC extension roller. Roll entire surface to eliminate air pockets and ensure complete adhesion. See Figure 1.

NOTE: On the hinge side of the door frame, unscrew the hinges from the door frame and follow the same step as above. Once the door frame guard is applied, trim the opening for the hinge with a utility knife and reattach the hinge.



IPC.443/REV.4

Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556

INPRO CORPORATION
Interior and Exterior Architectural Products