

Prism® & Illusion Solid Surface Counter Tops with Drop-in Kitchen Sink

FIG.1

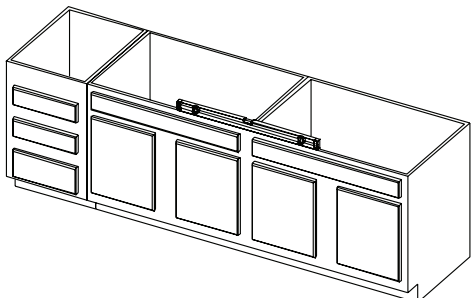


FIG.2

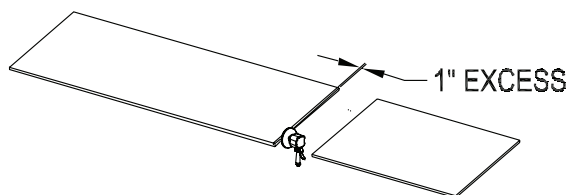


FIG.3


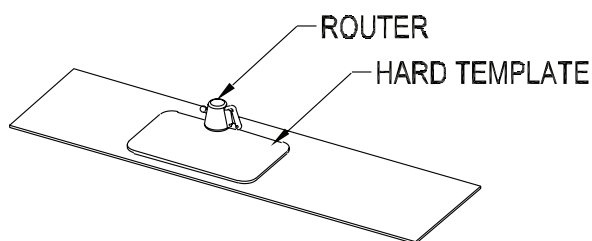


FIG.4



NOTE: Before installation, check material completely to ensure that it was not damaged in transit. Check size, color and style/model to confirm the product matches the order. Verify that the counter top is the correct size for the cabinets. Follow plumbing fixture installation instructions when installing drains and faucets.

1. Verify that the cabinets are level and flat. See Figure 1.
2. Two section tops that are ordered with "Jobsite Butt Fit" - Each section is up to 1" longer to allow for a perfect field fit. Trim extra material with a belt sander and #24 or #36 sandpaper or a saber saw. (Follow Standard Solid Surface Fabrication Procedures for seaming). See Figure 2.
3. Saw counter top on backside or use wide masking tape to protect finished surface from scratches or chipping. Always support and protect the material when sanding or cutting.
4. Determine the location of the sink on the counter top.
5. Choose the correct template for your sink. Transfer the template to plywood or Masonite to create a hard template. Cut out the hard template allowing for your saw blade or router bit width. A smooth accurate template is required for a proper fit.
6. Cutout Position - A suggested location for the cutout is centered front to back allowing for faucets. Customer preference may change location.
7. Cut opening with router bit using the template as a guide. See Figure 3.
8. Space lateral (front to back) supports 24" or less. See Figure 4.

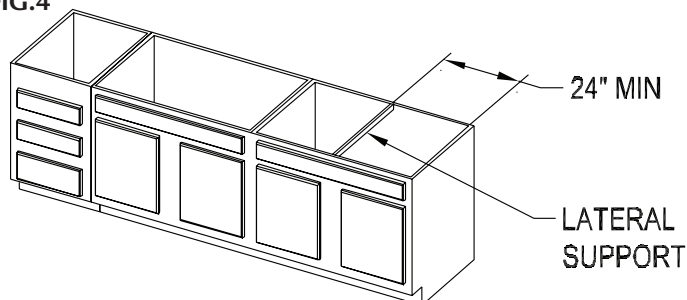

Prism® & Illusion Solid Surface Counter Tops with Drop-in Kitchen Sink

FIG.5

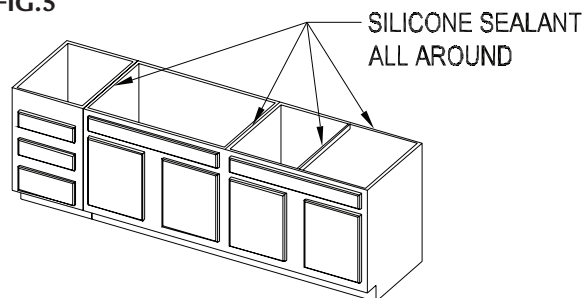


FIG.6

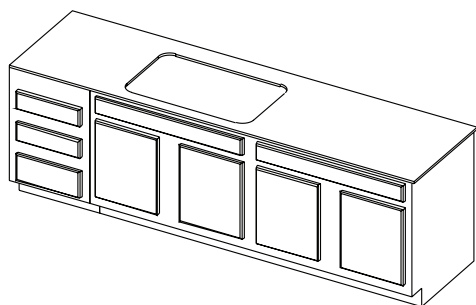


FIG.7


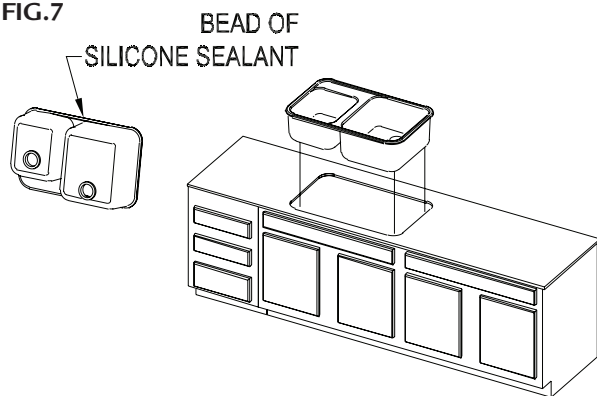


FIG.8



9. Apply a small bead of clear silicone sealant to the top edge of the cabinet or frame. See Figure 5.
10. Carefully lower the counter top into position and press firmly into place. See Figure 6.
11. Sink Installation - Follow the plumbing fixture installation instructions for installing drain and faucet.
12. Clean underside of sink flange with denatured alcohol. Apply a bead of silicone around the flange. See Figure 7.
13. Position the sink in the opening of the countertop. Press the sink into place to secure it. Wipe up any excess sealant with denatured alcohol.
14. Bond side splashes and back splashes to the counter top and tool the seams with silicone sealant. Seal and carefully tool all joints with silicone sealant to provide smooth contoured joints. See Figure 8.
15. Complete plumbing connections.

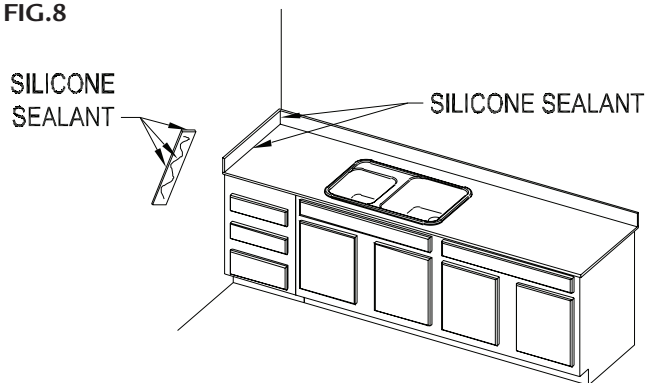

Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556