

Prism® & Illusion™ Solid Surface Counter Tops with Seamed Kitchen Sink

FIG.1

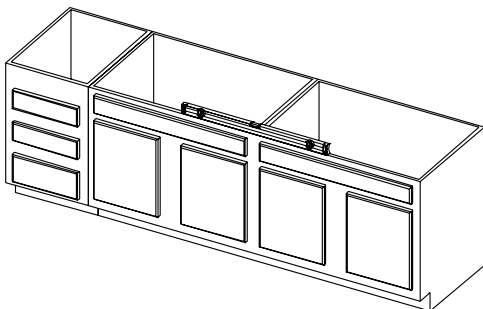


FIG.2


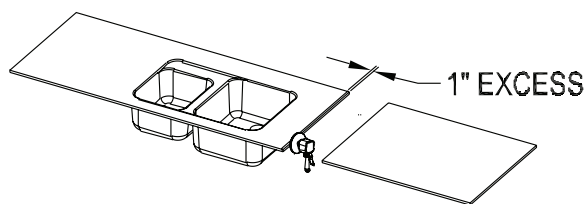


FIG.3




NOTE: Before installation, check material completely to ensure that it was not damaged in transit. Check size, color and style/model to confirm the product matches the order. Verify that the counter top is the correct size for the cabinets. Follow plumbing fixture installation instructions when installing drains and faucets.

1. Verify that the cabinets are level and flat. See Figure 1.
2. Two section tops that are ordered with "Jobsite Butt Fit" - Each section is up to 1" longer to allow for a perfect field fit. Trim extra material with a belt sander and #24 or #36 sandpaper or a saber saw. (Follow Standard Solid Surface Fabrication Procedures for seaming). See Figure 2.
3. Saw counter top on backside or use wide masking tape to protect finished surface from scratches or chipping. Always support and protect the material when sanding or cutting
4. Space lateral (front to back) supports 24" or less. See Figure 3.

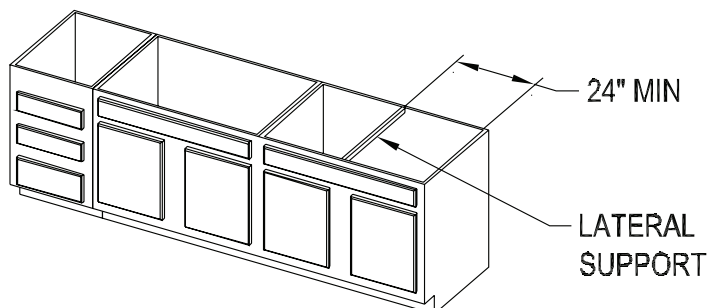

Prism® & Illusion Solid Surface Counter Tops with Seamed Kitchen Sink

FIG.4

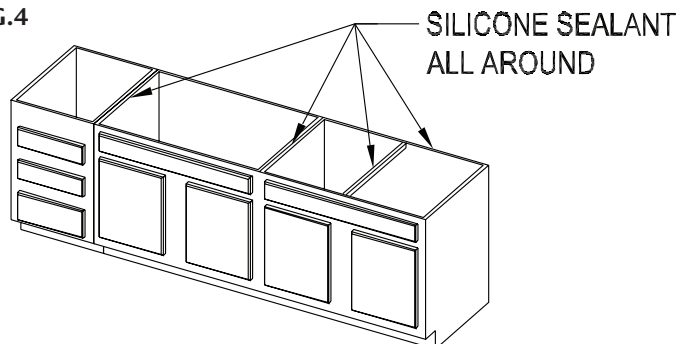

5. Apply a small bead of clear silicone sealant to the top edge of the cabinet or frame. See Figure 4.
6. Carefully lower the counter top into position and press firmly into place. See Figure 5.
7. Bond side splashes and back splashes to the counter top and tool the seams with clear silicone sealant. Seal and carefully tool all joints with silicone sealant to provide smooth contoured joints.
8. Complete plumbing connections.

FIG.5


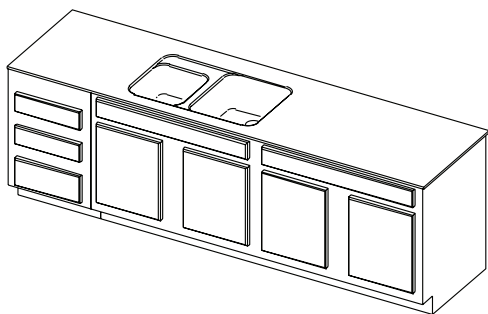


FIG.6

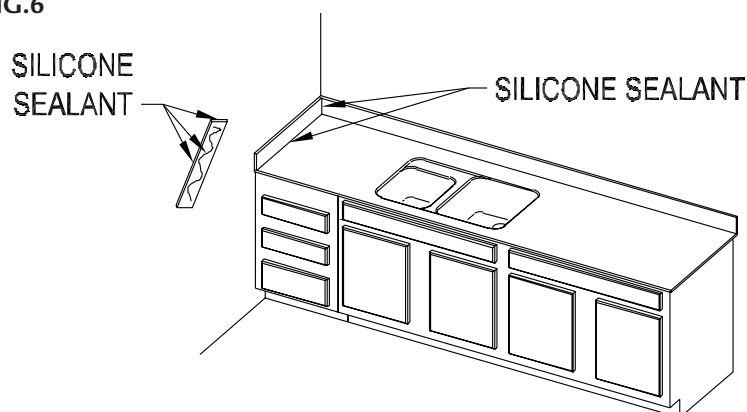

Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556