

Installation Instructions

Prism Decorative Trim, Small

Please read all instructions
before installing products.

FIG. 1

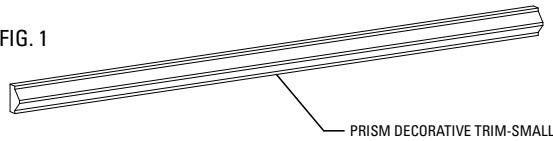


FIG. 1a

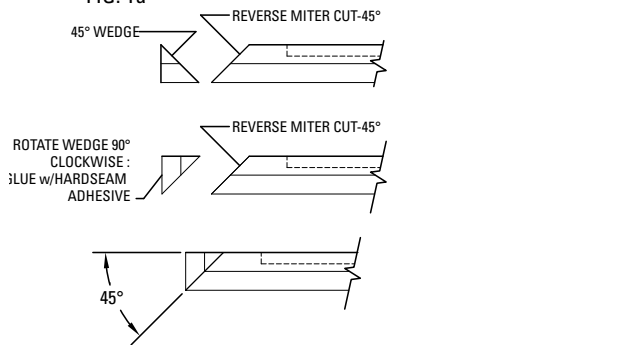


FIG. 2

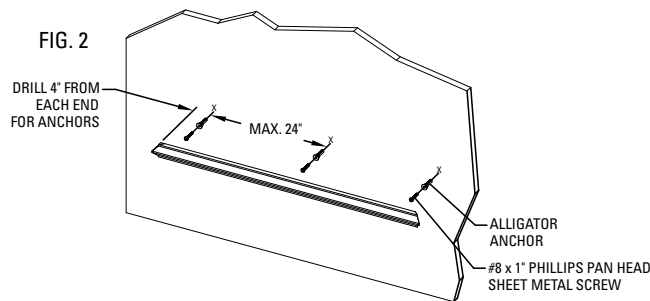


FIG. 3

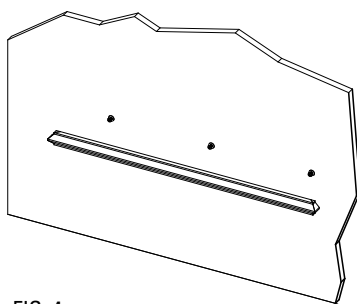


FIG. 3a



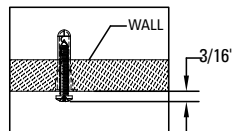


FIG. 4

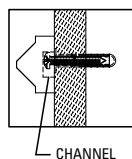

1. Determine the height of the decorative trim on the wall and snap a chalk line $\frac{1}{2}$ " below that height.
2. Cut the decorative trim to length. See Fig. 1. Miter cut outside and inside corners. For finished end conditions, reverse miter cut the end. Glue components with hard seaming adhesive. See Fig. 1a.
3. Mark fastener hole locations on the chalk line. Holes should be 4" from each end and spaced every 24". See Fig. 2.
4. Drill $\frac{1}{4}$ " holes at each mark and insert the alligator anchors into the holes.
5. Screw the #8 x 1" Phillips Pan Head Sheet Metal Screw into the alligator anchors. See Fig. 3. The screw head should protrude $\frac{3}{16}$ " from the wall. See Fig. 3a.
6. Apply dabs of clear silicone sealant/adhesive every 6" on the back of the decorative trim and at the fastener locations.
7. Just prior to positioning the decorative on the wall, apply dabs of hot melt in several locations on the back of the trim. This will hold the trim in place until the silicone cures.
8. Position the decorative trim on the wall with channel on the back of the trim resting on the screw head. See Fig. 4.
9. Press tight against the wall. If required, tape with painters tape until the adhesive cures. Remove any excess adhesive immediately. See Fig. 5.

FIG. 5

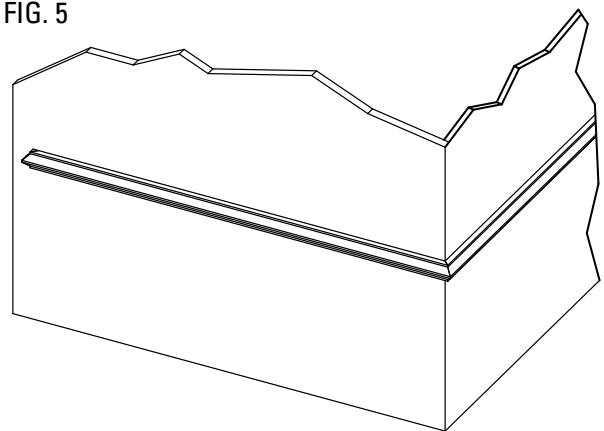

IPC.779/Rev.1

Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556

INPro
IPC Interior Protection Products
and Decorative Surfaces