


# Installation Instructions Prism<sup>®</sup>, Illusion<sup>™</sup> & Lippert<sup>®</sup> Tub Surrounds

Please read all instructions  
before installing products.

FIG.1

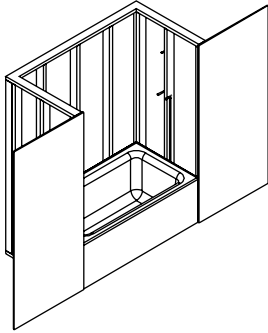


1. Tub should be in position and secured to the stud walls in accordance with the manufacturer's installation instructions. See Figure 1.

2. Install green board 1" above the tube flange. See Figure 2.

3. Measure the back wall to determine if the back panel requires trimming. Allow 1/8" for expansion in wall to wall installations. Use a belt sander with #24 or #36 sandpaper or a saber saw to trim panels. DO NOT trim the finished edges of panels. Note: when sanding or cutting panels, always support panels properly. Note: Showers with seats - Notch the rear wall panel to ride over the integral water guard barrier.


FIG.2

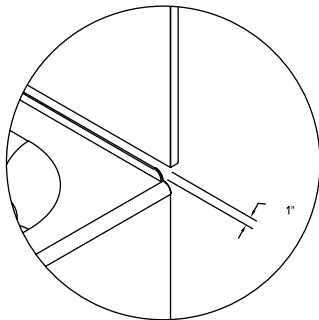

Note: When installing Prism Wall Tile Panels on a receptor that is not level, scribe and cut the bottom edge to keep tile lines level and plumb. Keep side panels and back panel tile lines aligned.

4. Wipe the back of the panels making sure they are clean dry and free of dirt and grease. Apply a bead of clear adhesive, on the wall, within 3" of the perimeter of the panel and 1 1/2" diameter portions of clear adhesive spaced 12" apart over the remaining field. Position the panel on the wall and press into place. See Figure 3.

FIG.3

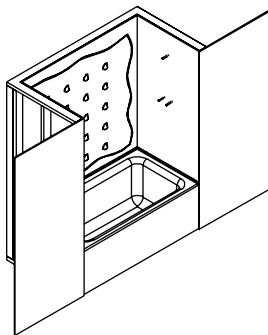

IPC.734/REV.3



## Installation Questions?

Contact our Installation Hotline 866.EZINPRO  
For Sales & Customer Service call 800.222.5556

**INPRO**  
**IPC** Interior Protection Products  
and Decorative Surfaces