

Installation Instructions

Signage with Stand-offs

FIG. 1

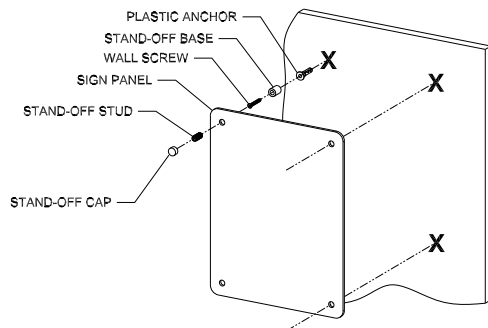


FIG. 2


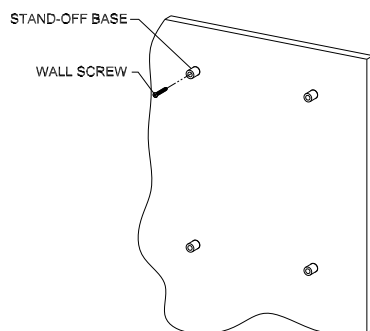



FIG. 3

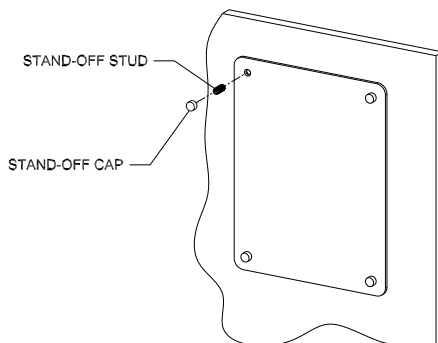

The Americans with Disabilities Act (ADA) and Building Codes regulate the placement of signage in buildings. Follow building codes when installing signage. ADA recommendation: 4.30.06 Mounting Location and Height. Where permanent identification is provided for rooms and spaces, signs shall be installed on the wall adjacent to the latch side of the door. Where there is no wall space to the latch side of the door, including at double leaf doors, signs shall be placed on the nearest adjacent wall. Mounting height shall be 60 inches above the finished floor to the centerline of the sign. Mounting location for such signage shall be so that a person may approach within 3 inches of signage without encountering protruding objects or standing within the swing of a door.

1. Determine the location of the sign.
2. Use the sign as a template to mark the hole locations. See Figure 1.
 - a. Drywall, plaster or concrete installation: Drill a $\frac{5}{16}$ " hole $1\frac{1}{4}$ " deep. Insert plastic wall anchors into the hole.
 - b. Mounting into wood: Drill a $\frac{3}{32}$ " pilot hole and do not use the plastic anchors.
3. Place the wall screw through the hole in the stand off base. Secure the base by fastening into the anchor or wood. Do this for all stand off bases. See Figure 2.
4. Attach sign panel to the wall by securing it to the stand off base with the stand off studs. See Figure 3.

COMPLETED SIGNAGE INSTALLATION

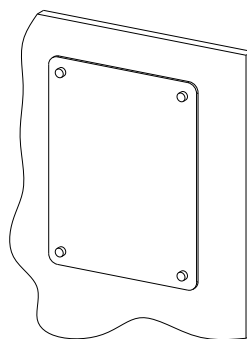

IPC.948/REV.1



Installation Questions?
Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556

INPRO
SIGNSCAPE
SIGNAGE and WAYFINDING