


Installation Instructions

Stainless Steel Kickplate

Models 130, 130E, 130GS, 130GSE

FIG. 1a

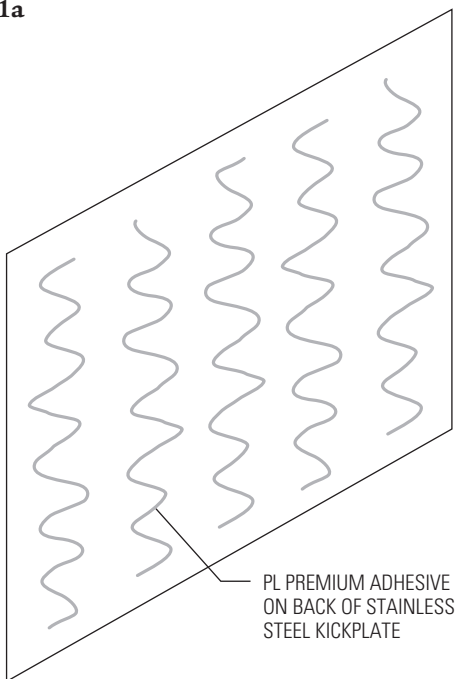

Please read all instructions before installing kickplate.


Material must be stored, installed and used in environmentally controlled conditions.

1. The door surface must be dry and free of dirt, dust, oil, loose pain, wax and grease.
2. CEMENT-ON INSTALLATION

Apply a bead of PL Premium Heavy Duty Adhesive in a zig-zag pattern over the back of the kickplate. See Figure 1a.

Position the kickplate on the door and apply pressure until a tight fit is achieved. Remove the protective plastic coating from the exposed surface of the kickplate. See Figure 1b.

FIG. 1b

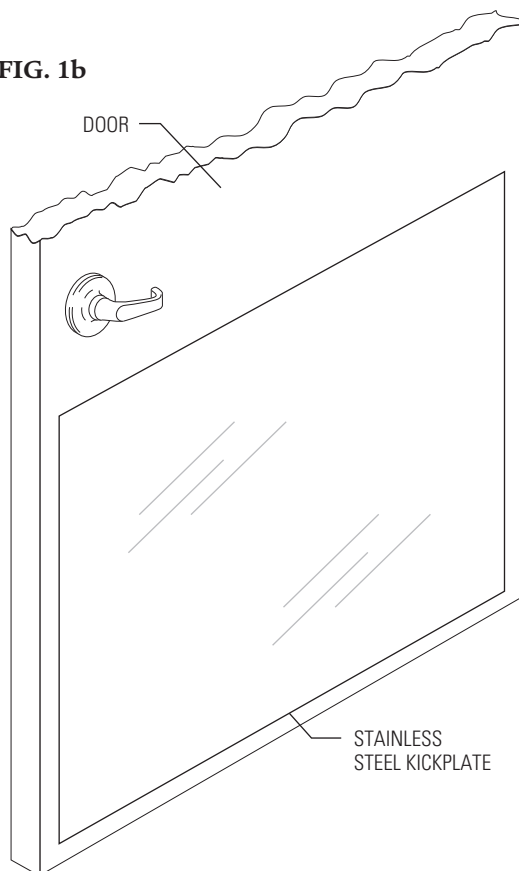

IPC.449/REV.4



Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556


INPRO CORPORATION®
Interior and Exterior Architectural Products

Installation Instructions

Stainless Steel Kickplate

Models 130, 130E, 130GS, 130GSE

FIG. 2

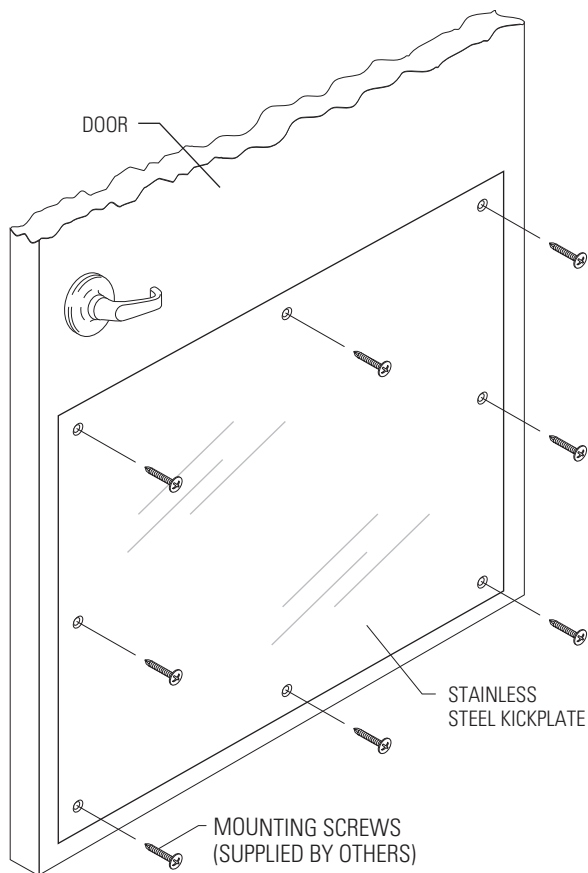

3. SCREW-ON INSTALLATION

Attach kickplate to door with provided hardware. Remove the protective plastic coating from the exposed surface of the kickplate. See Figure 2.



Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556

INPRO CORPORATION
Interior and Exterior Architectural Products