

Werndl™ Emerge™
6 Moby™

6	Moby	5	Communicator	4	FreeWall	3	Tokyo	2	Conference	1	Emerge	0	General
---	------	---	--------------	---	----------	---	-------	---	------------	---	--------	---	---------

Werndl™ Emerge™



6.1.1 Installation of Drawer with Panel

General	0
Emerge	1
Conference	2
Tokyo	3
FreeWall	4
Communicator	5
Moby	6

Werndl™ Emerge™

Installation of Drawer with Panel


In Addition to Existing Hanging Frame

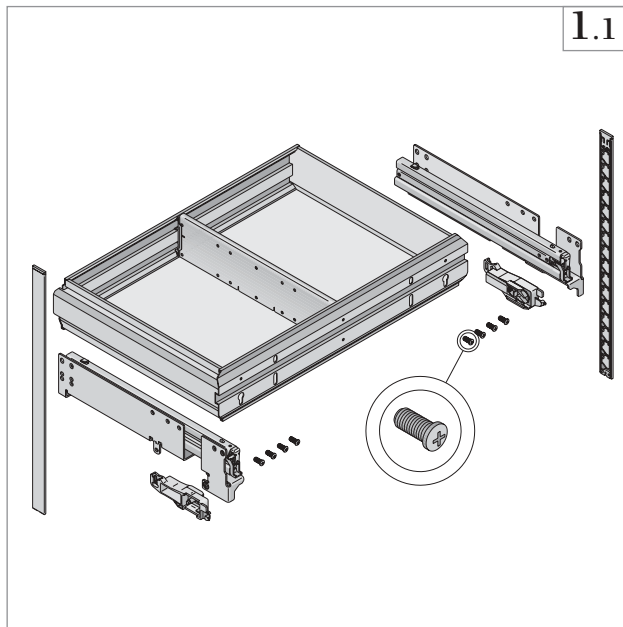

1.1

Package contents:

- 1 drawer made of sheet metal
- 2 drawer slides - right and left
- 2 central locking bars - right and left
- 2 stop control slides for locking drawers - left and right
- 8 Euro screws, 6.3x16 mm

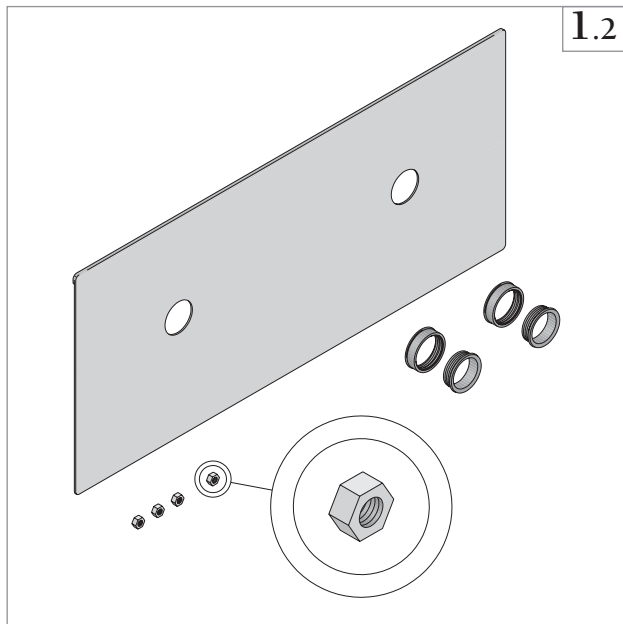

1.2



Package contents:

- 1 drawer face panel of sheet metal
- 1 supplemental packet with
- 2 ring pulls, 2 pieces each
- 1 supplemental packet with 4 M6, self-locking nuts


Werndl™ Emerge™

Installation of Drawer with Panel


In Addition to Existing Hanging Frame

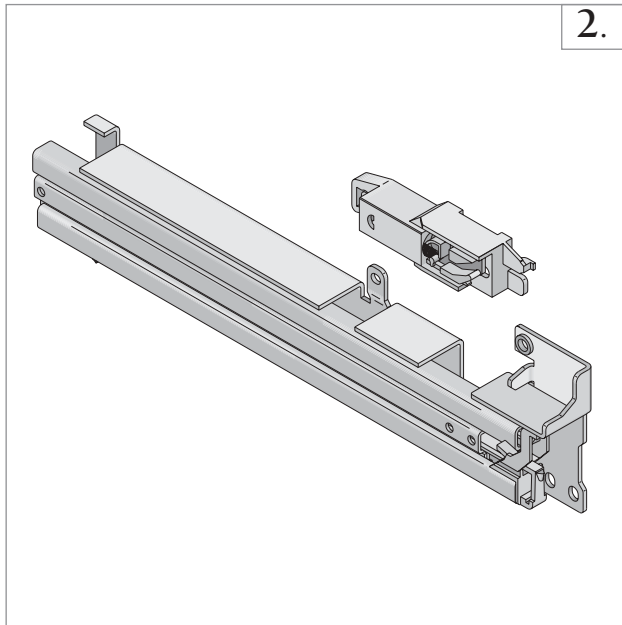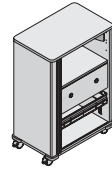


Preparation of the drawer slides using the left slide as an example.

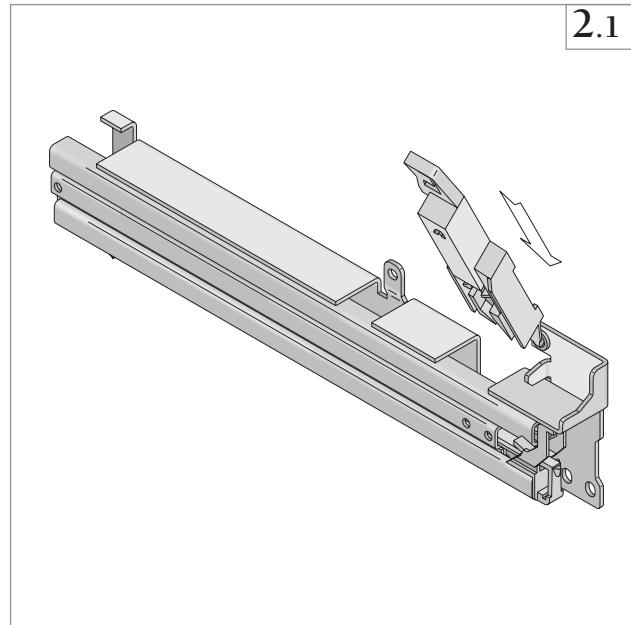

Insert the pin of the stop-control slide through the hole in the drawer slide at a slant.

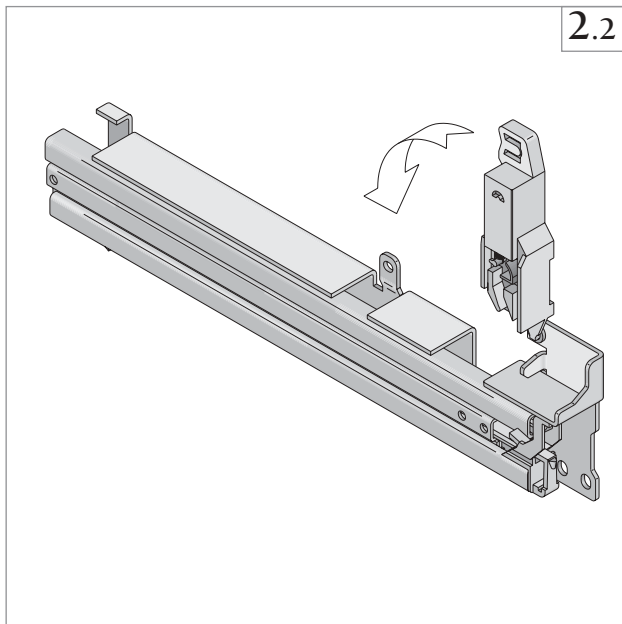

Now rotate the stop-control slide toward the drawer slide.


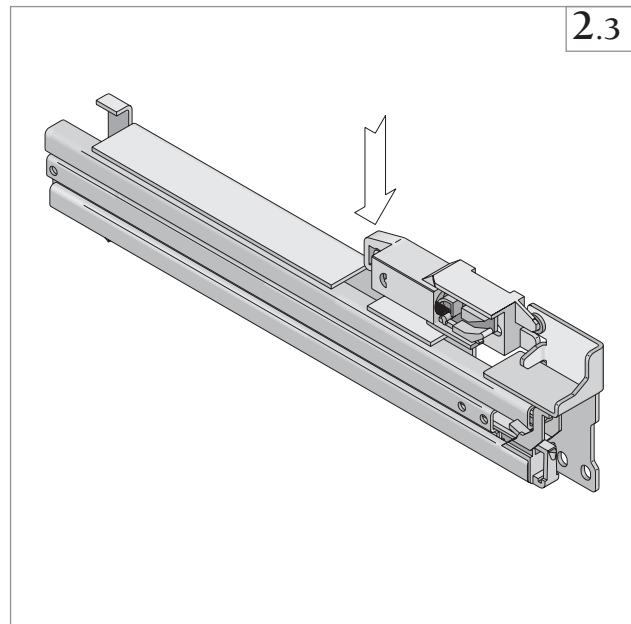


Click snap the stop-control slide onto the drawer slide.
Repeat Figures 2.1 to 2.3 for the right drawer slide.


Werndl™ Emerge™

Installation of Drawer with Panel


In Addition to Existing Hanging Frame

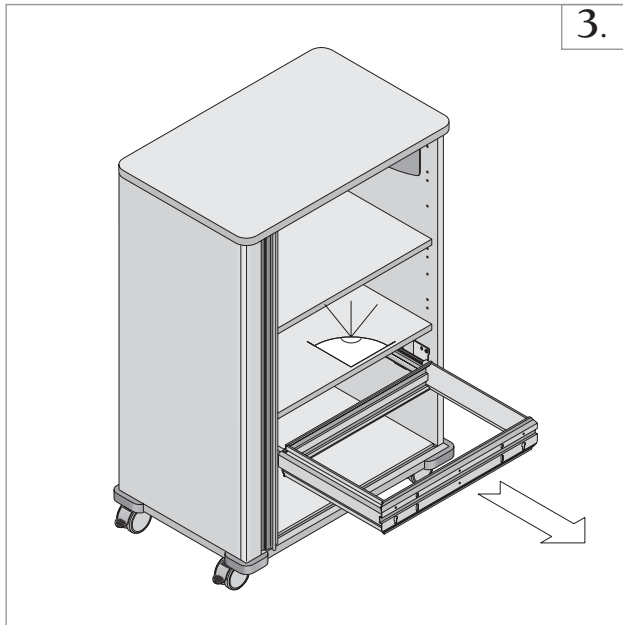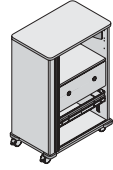


To prepare for installation, pull out the hanging frame.

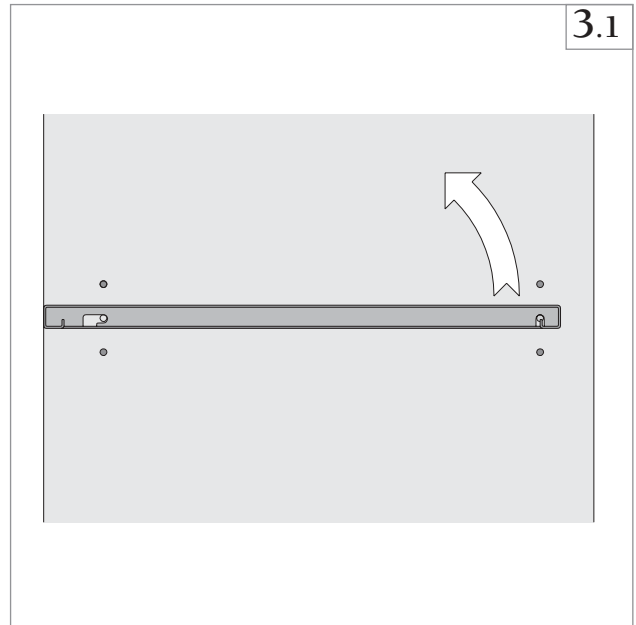

Remove the drawer bottom over the hanging frame. To do so, lift the front of the drawer bottom slightly.

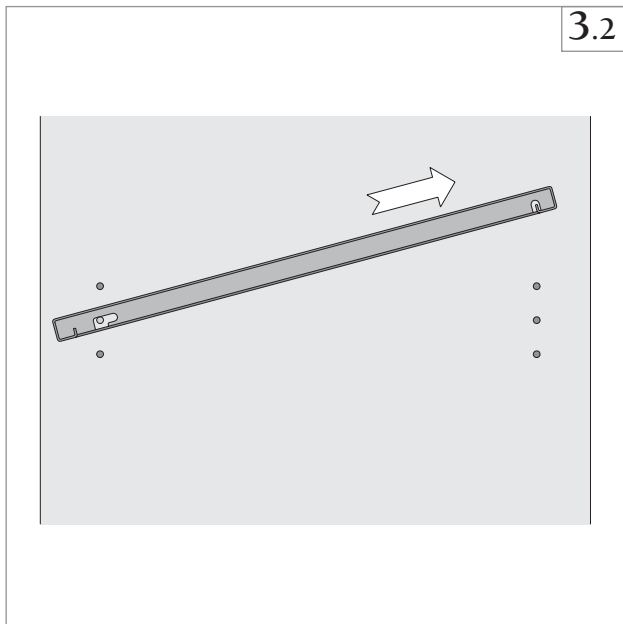

After that, pull the drawer bottom to the front.


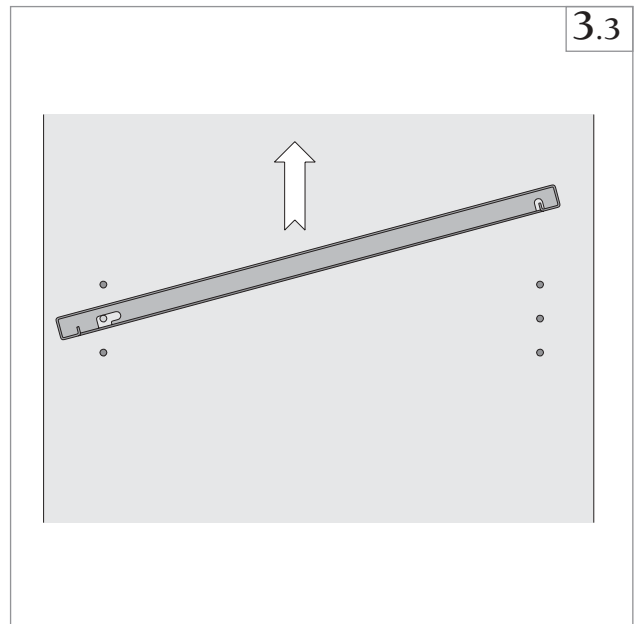


Now, the drawer bottom can be lifted out and the drawer bottom supports can be pulled out.


Werndl™ Emerge™

Installation of Drawer with Panel


In Addition to Existing Hanging Frame

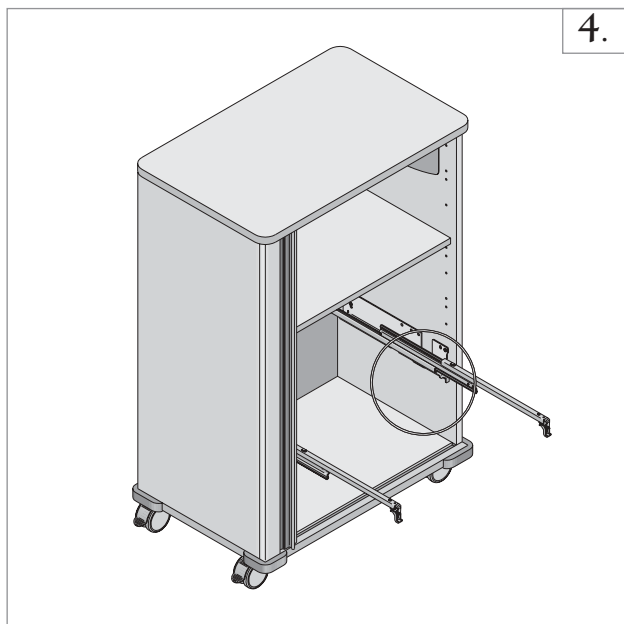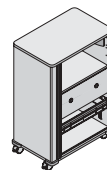**4.**


Now remove the hanging frame.
See Section 1.6.3, Figures 1 to 3..

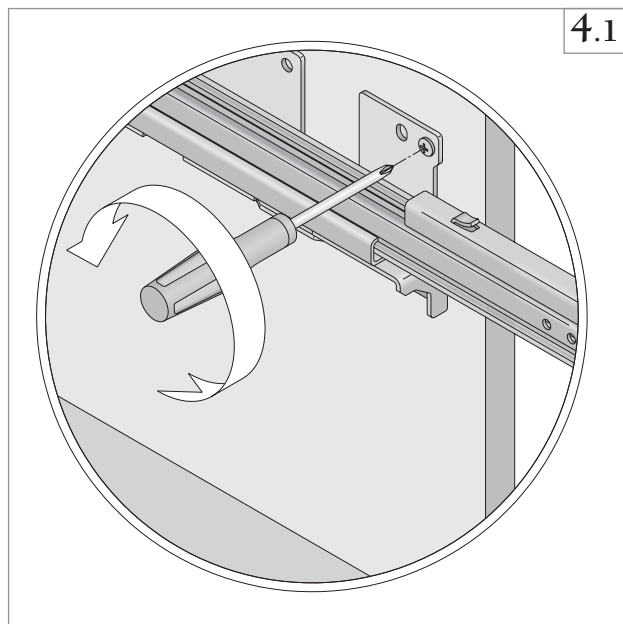**4.1**

Loosen the Euro screws on both drawer slides.
Do not remove them.
The drawer slides should have about 5 mm play.

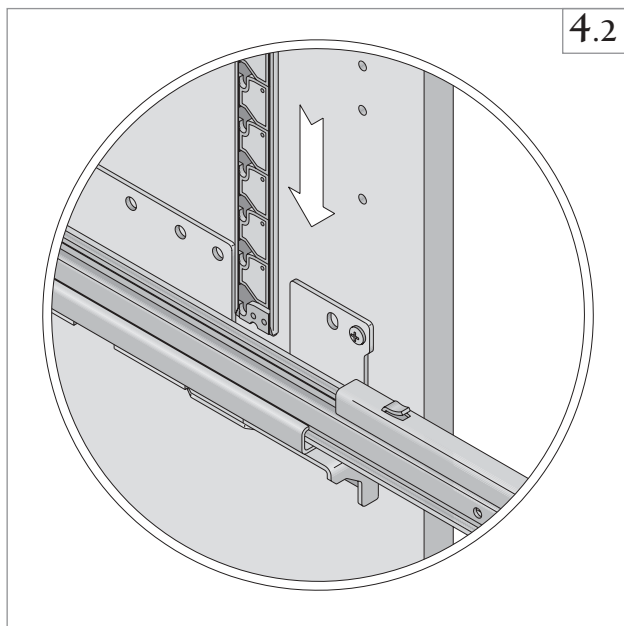**4.2**

Insert the central locking bars behind the drawer slides.
Notice there is a part for left and right.


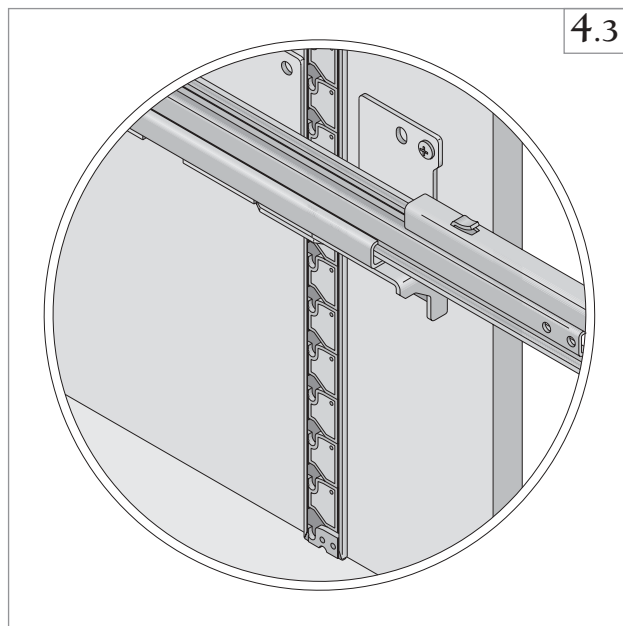
**4.3**

The central locking bars rest on the bottom of the Moby.

Werndl™ Emerge™


Installation of Drawer with Panel

In Addition to Existing Hanging Frame

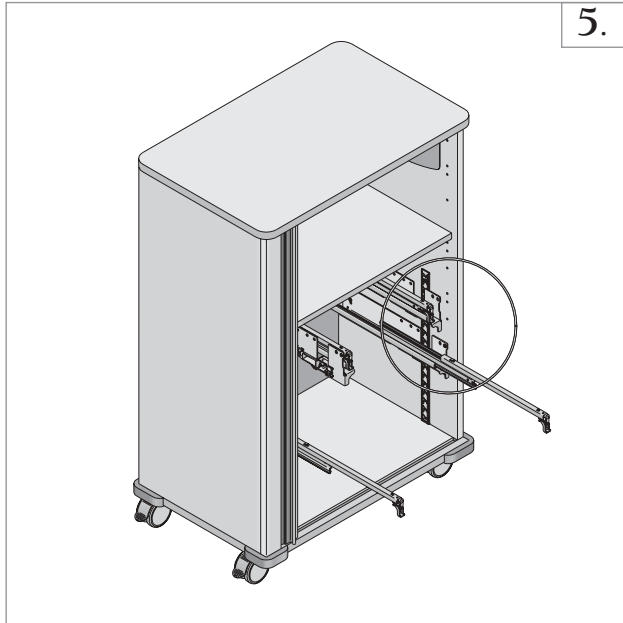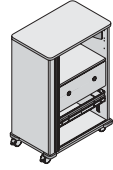


5.

Position prepared right and left drawer slides.

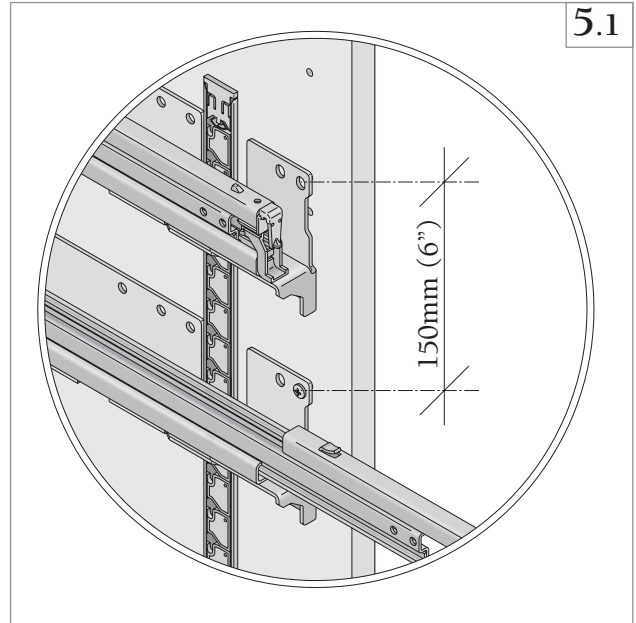


5.1

In this case, the center-to-center distance between the two drawer slides is 150 mm (6").

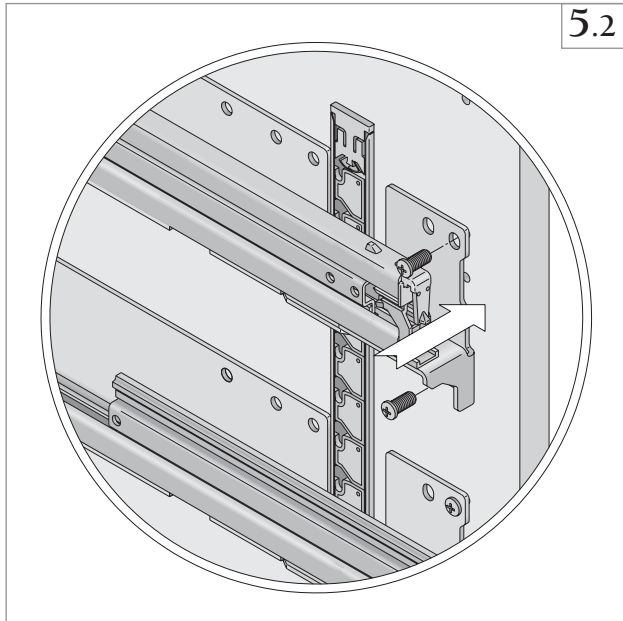

5.2

Now screw in the Euro screws.

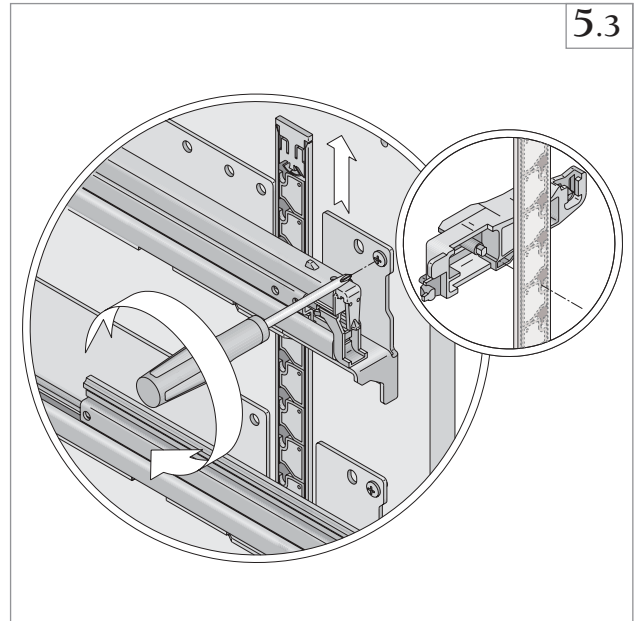



5.3

When tightening the Euro screws, raise the central locking bars. The pin of the stop-control slide must engage the recess of the central locking bar.


Werndl™ Emerge™

Installation of Drawer with Panel


In Addition to Existing Hanging Frame

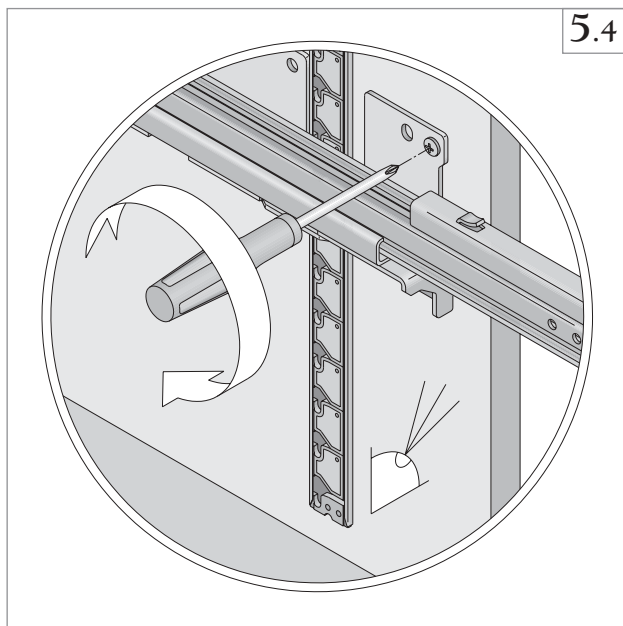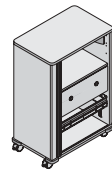


Retighten the Euro screws of the two lower drawer slides.

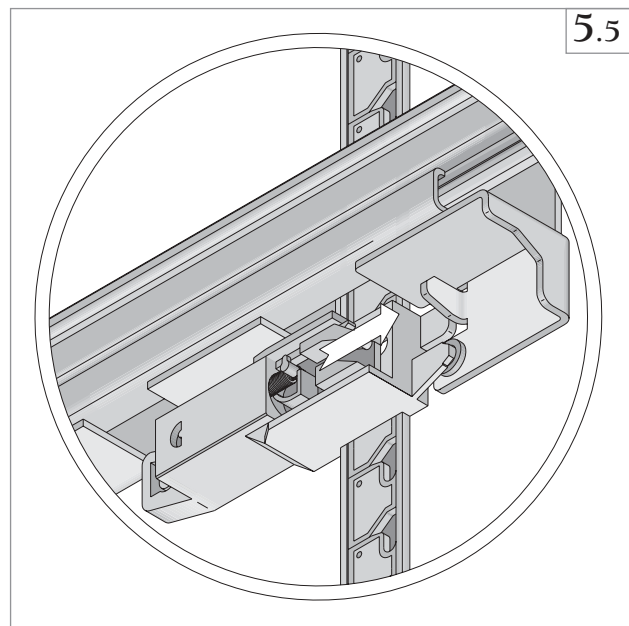

The stop-control slide on both drawer slides
should be prebiased.
This simplifies installation of the drawer.

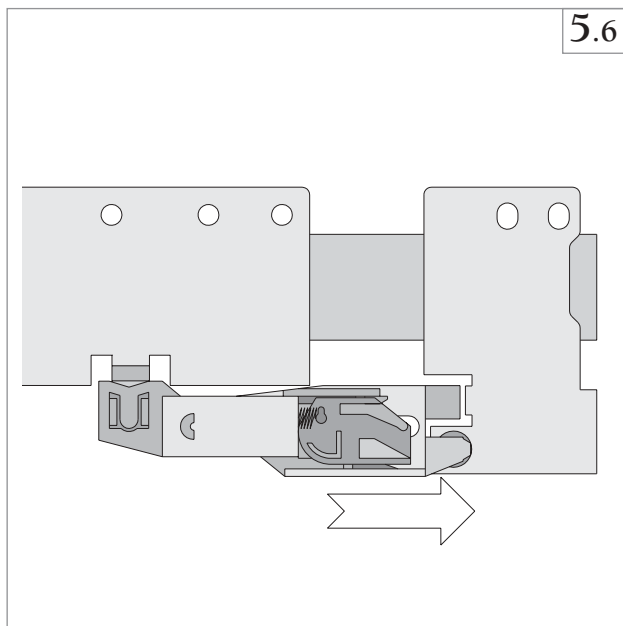

Pull the locking mechanism on the stop-control slide
toward the front.


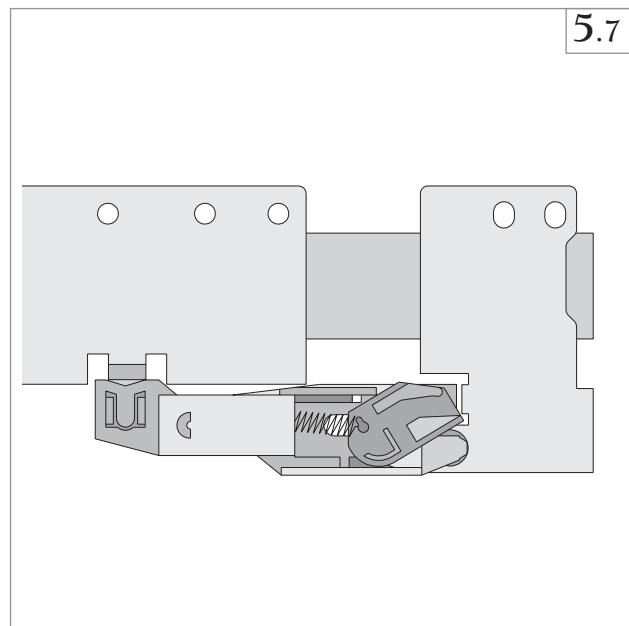


Push the locking mechanism on the stop-control slide upwards.


Werndl™ Emerge™

Installation of Drawer with Panel

In Addition to Existing Hanging Frame

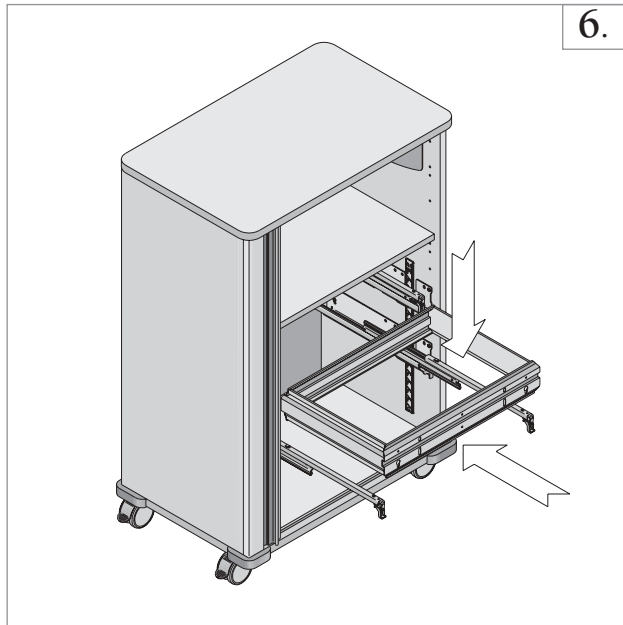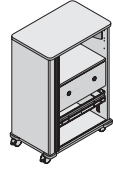

Install the hanging frame. See Section 6.1.2, Figures 4. to 6.

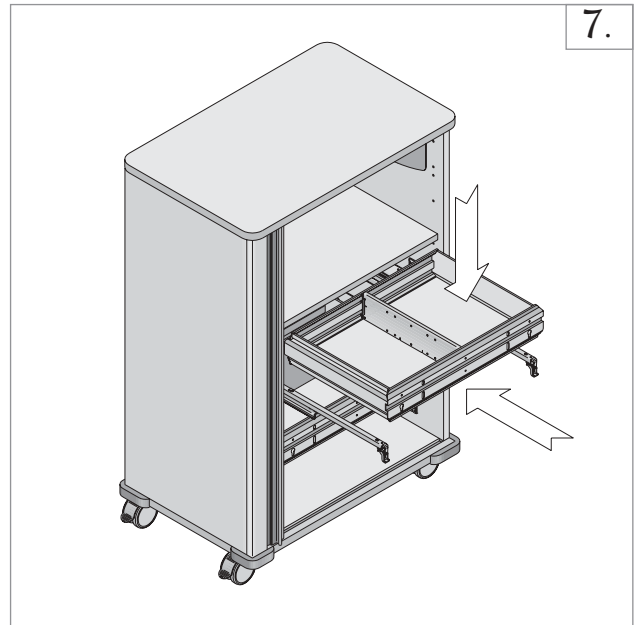

Now install the drawer. See Section 6.1.2, Figures 4. to 6.

g CAUTION



To prevent personal injury, ensure the proper operation of the interlock system.

- Open one element and verify the remaining elements will not open.
- Repeat for each moveable element.


Werndl™ Emerge™

Installation of Drawer with Panel


In Addition to Existing Hanging Frame

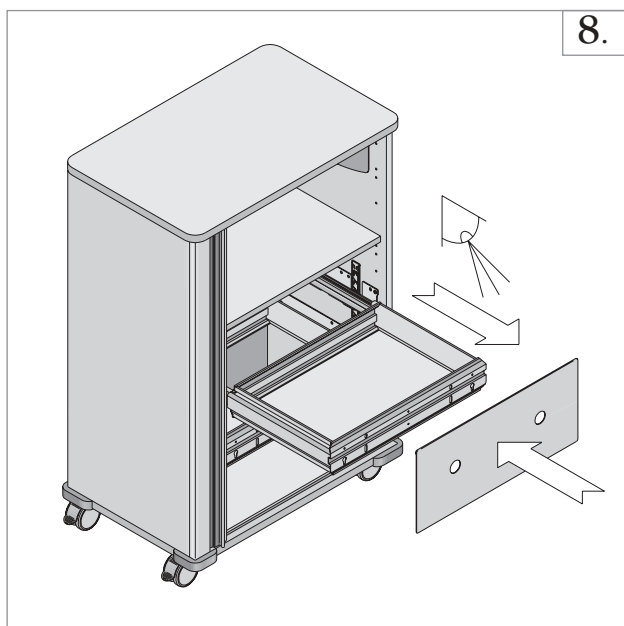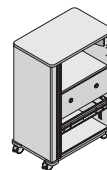


Pull out drawer and set the drawer face panel in place.

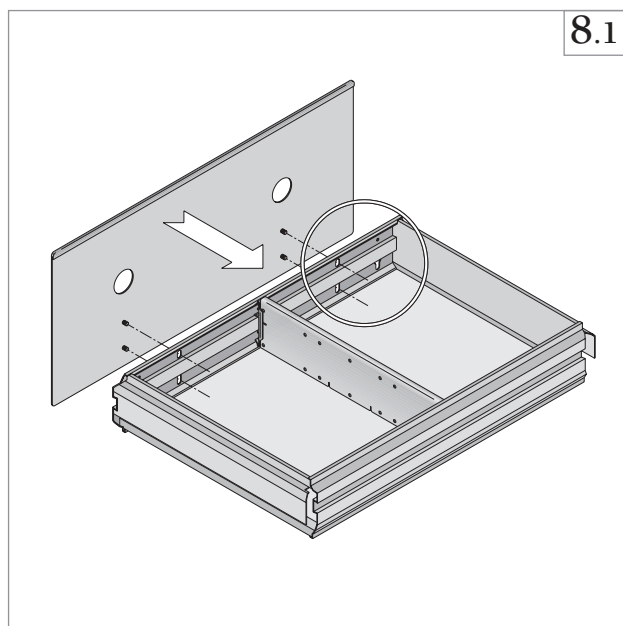

Insert the threaded rods of the drawer face panel through the oblong holes of the drawer.

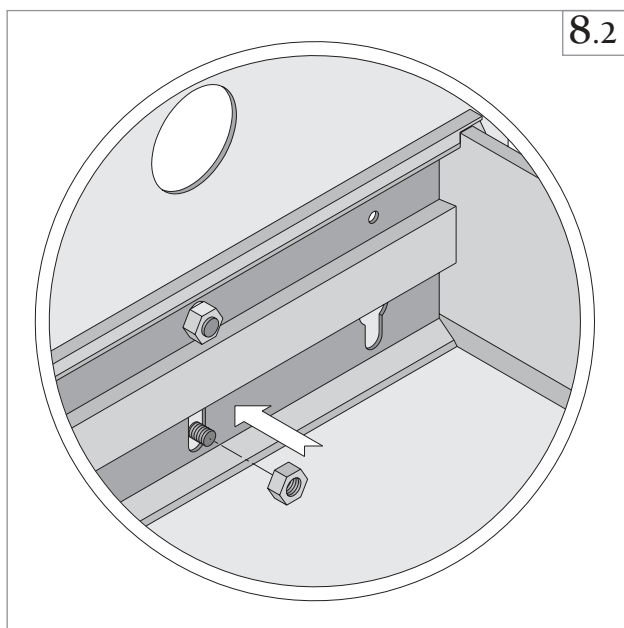

Hand tighten self-locking nuts.


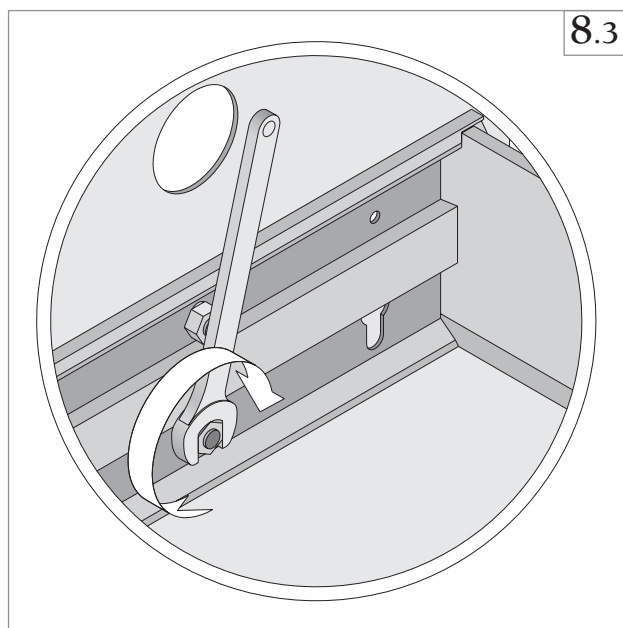


Now align the drawer face panel and tighten the nuts with the 10 mm open end wrench.


Werndl™ Emerge™

Installation of Drawer with Panel


In Addition to Existing Hanging Frame

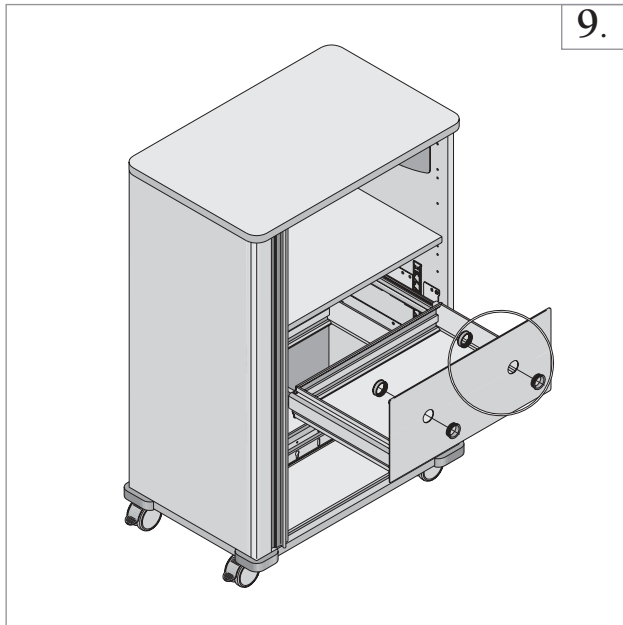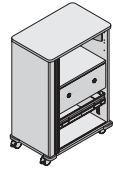

Installation of the ring pulls on the drawer face panel.

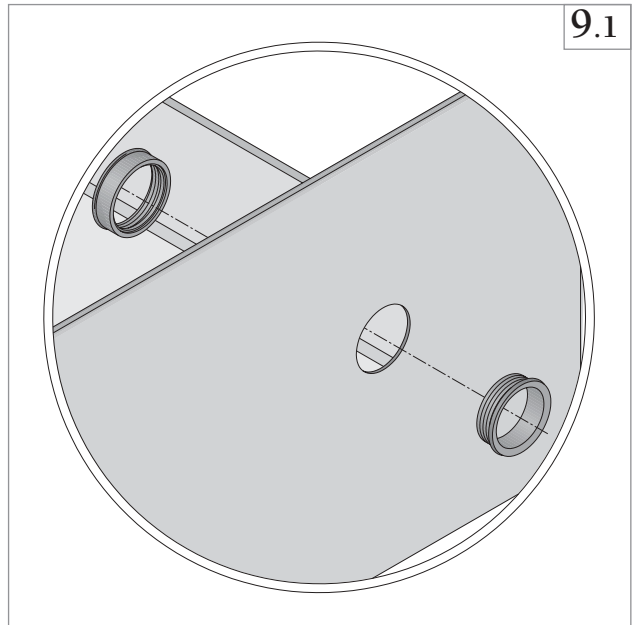

Position ring pulls in the holes in the drawer face panel.

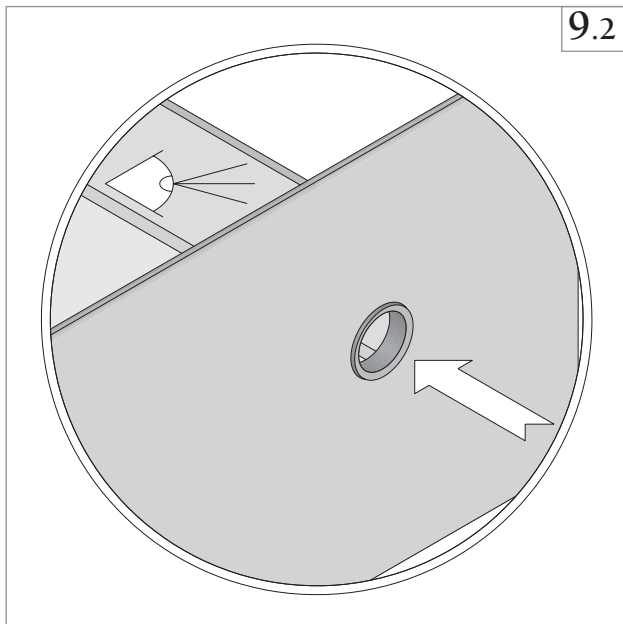



Insert the outer ring through the hole.




Hand tighten the inner ring onto the outer ring.

Werndl™ Emerge™


6.1.2 Install and Remove Drawer

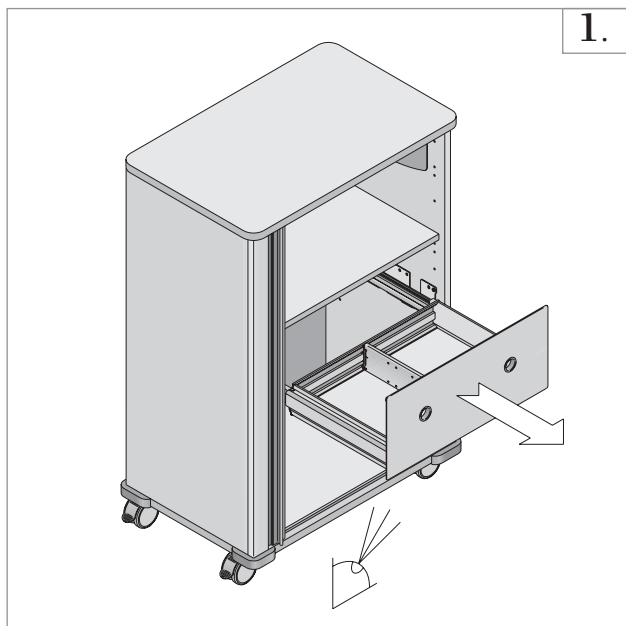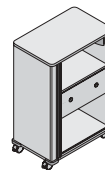


1. To prepare the drawer, pull it all the way out.

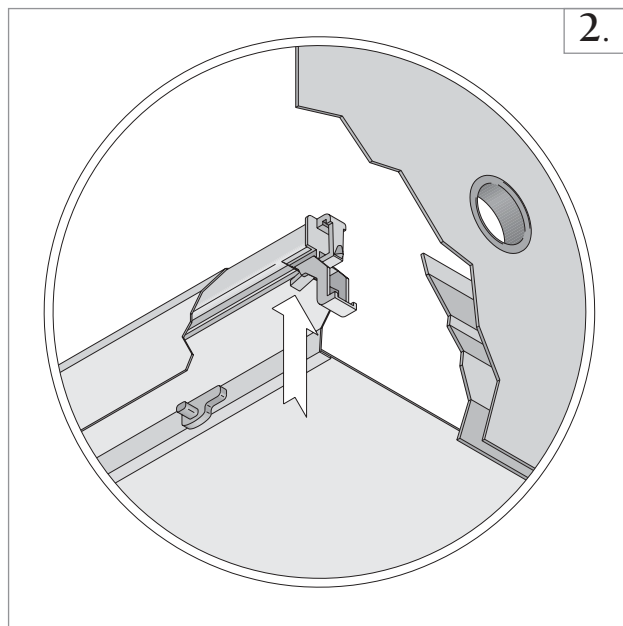

2. Plastic spring catches are located at the ends of the two drawer slides. Release both spring catches simultaneously by pushing upwards.


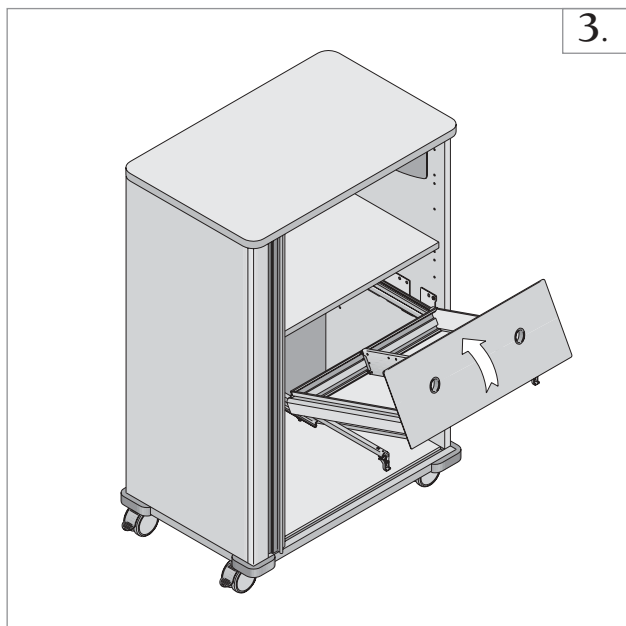


3. Now lift the drawer toward the front and pull it out somewhat further. After that the drawer can be lifted out.

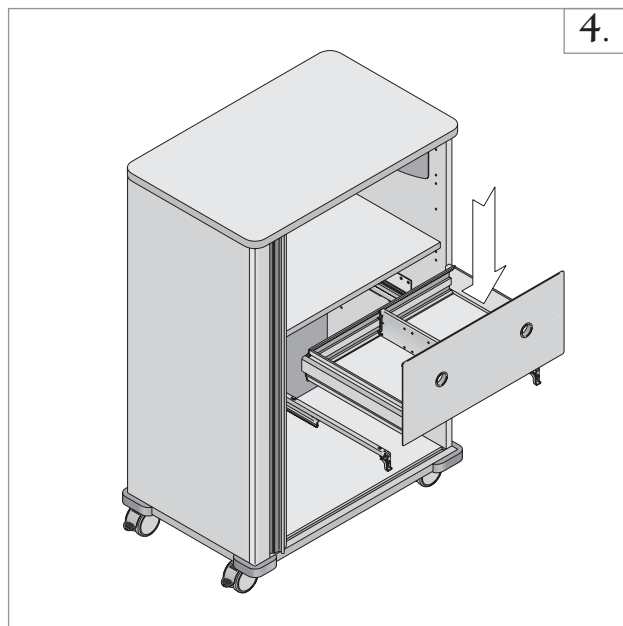


4. To install the drawer, place it on the drawer slides. To facilitate doing this, pull the side walls of the drawer somewhat to the outside.

Werndl™ Emerge™ Install and Remove Drawer

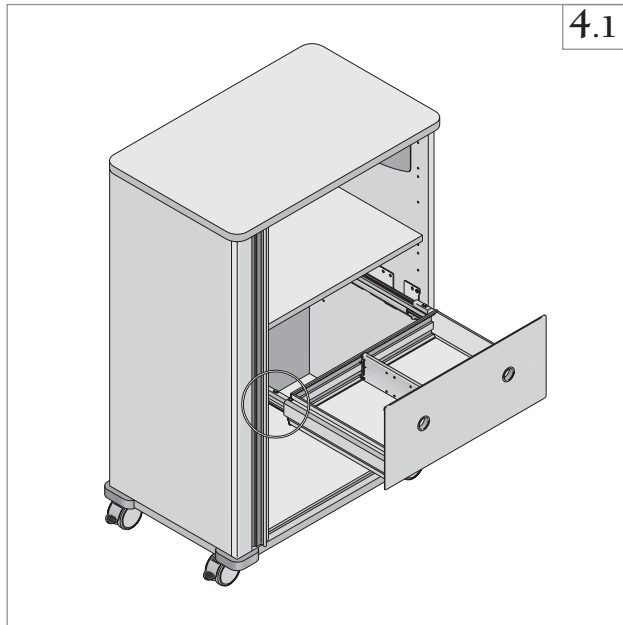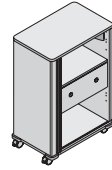


4.1

The drawer slides are now located in the lateral grooves of the drawer.

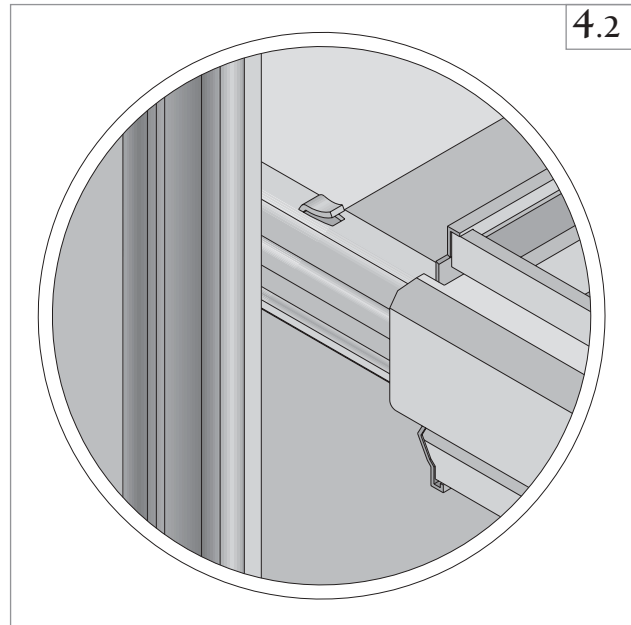


4.2

The drawer must rest on the drawer slides in front of the drawer stop.

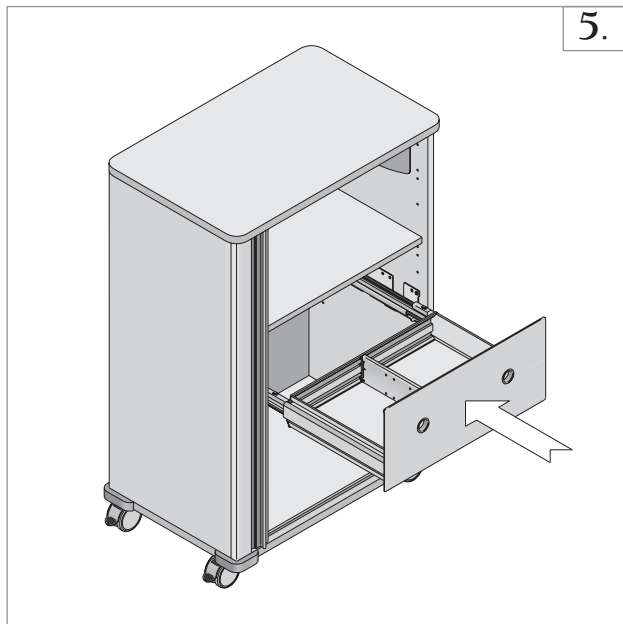

5.

Push the drawer together with the drawer slide into the Moby.

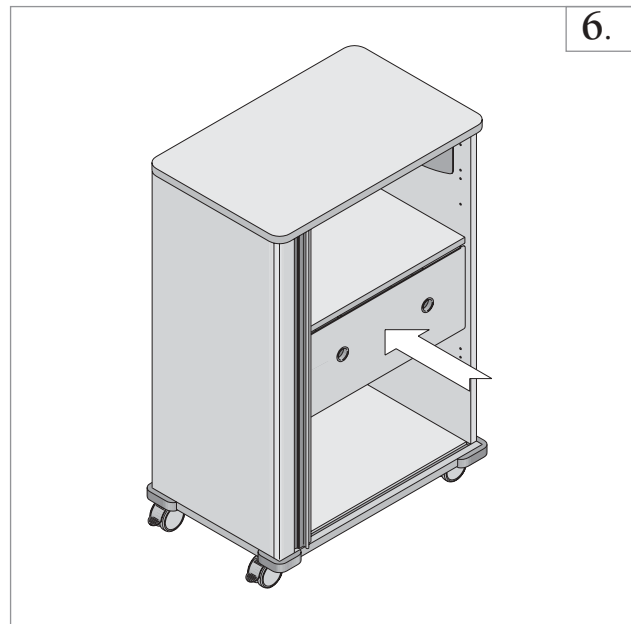

6.



Note: To ensure proper engagement of drawer to the drawer slides, push the drawer firmly towards the back of the cabinets.

Werndl™ Emerge™

6.2 Moby™ - Garage


General	0
Emerge	1
Conference	2
Tokyo	3
FreeWall	4
Communicator	5
Moby	6

Werndl™ Emerge™ Moby™ - Garage

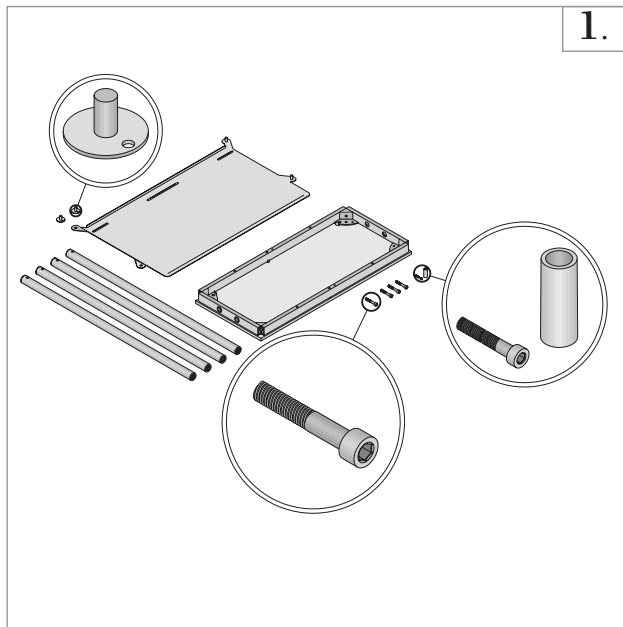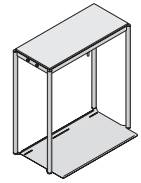


Package contents:

- 1 top plate with frame
- 4 leg columns with sleeves
- 4 screws M10x60
- 1 plastic spacer
- 1 screw M6x35
- 1 approach ramp plate
- 2 pin plates , 40 mm diameter


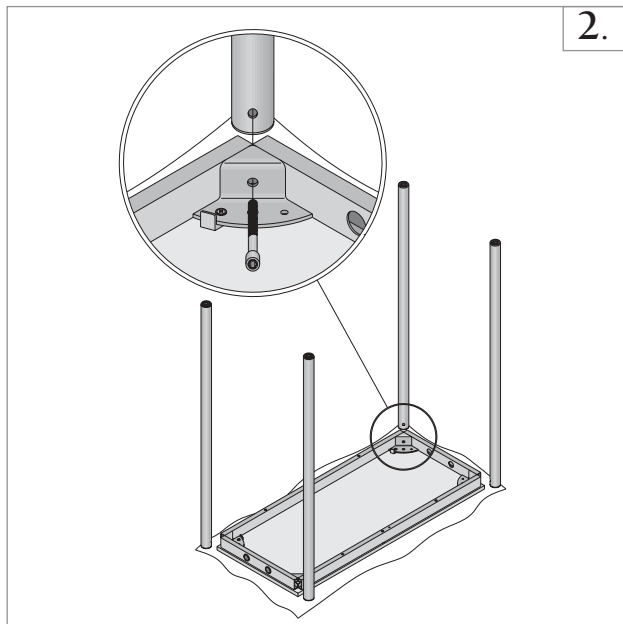


Place package wrap under the top plate to prevent scratching.
Position leg columns at the corners of the frame.

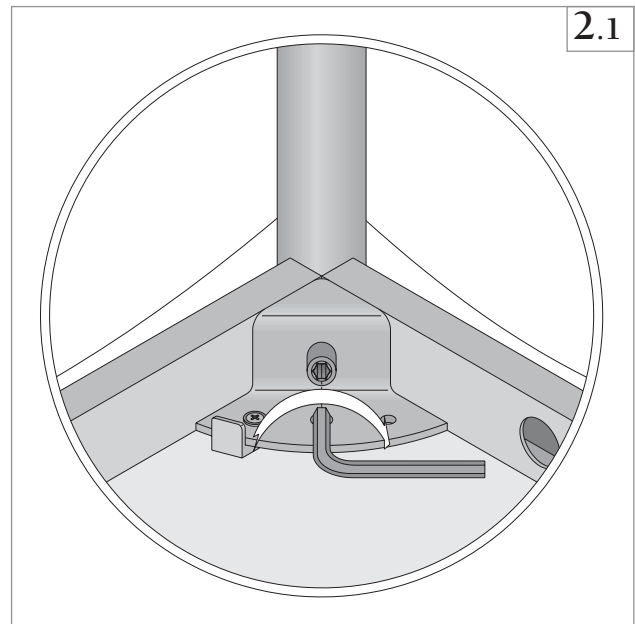


Insert screw into the threads of the leg clamp.
Then tighten with 8 mm Allen wrench.


Werndl™ Emerge™
Moby™ - Garage

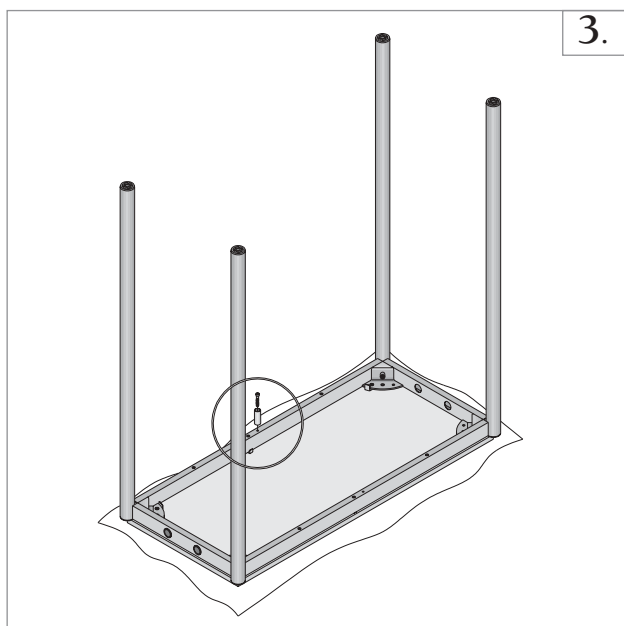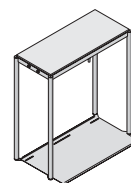


Position spacer on frame.

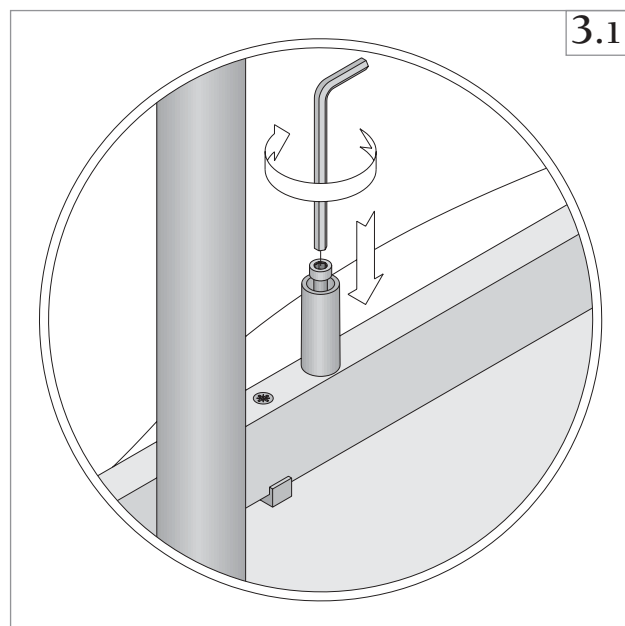

Screw spacer to frame with M6x35 screw.
Use 5 mm Allen wrench.


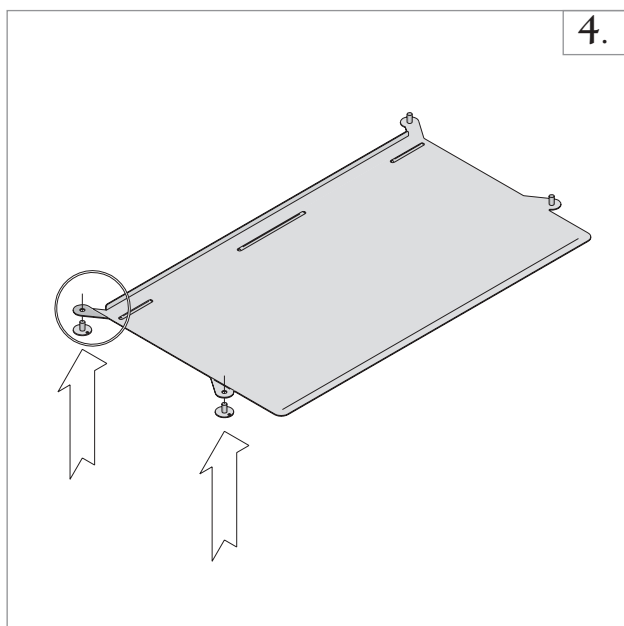


Prepare approach ramp plate.

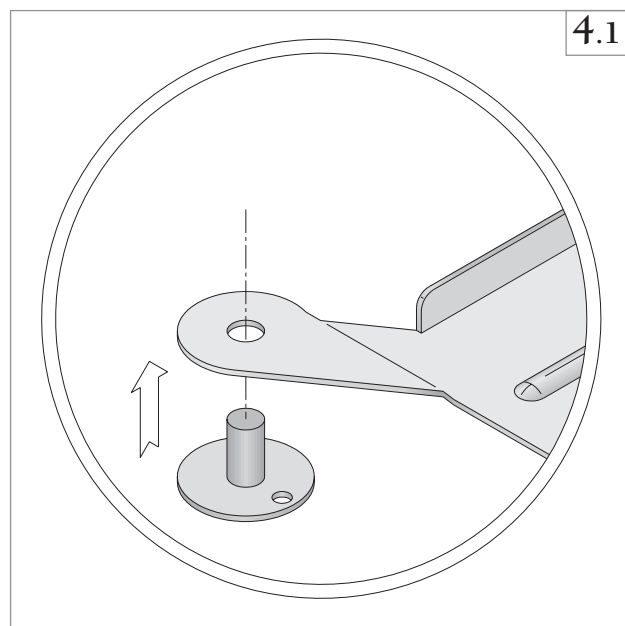


Insert pin plates from below through the offset
receiving brackets of the approach ramp plate.


Werndl™ Emerge™
Moby™ - Garage

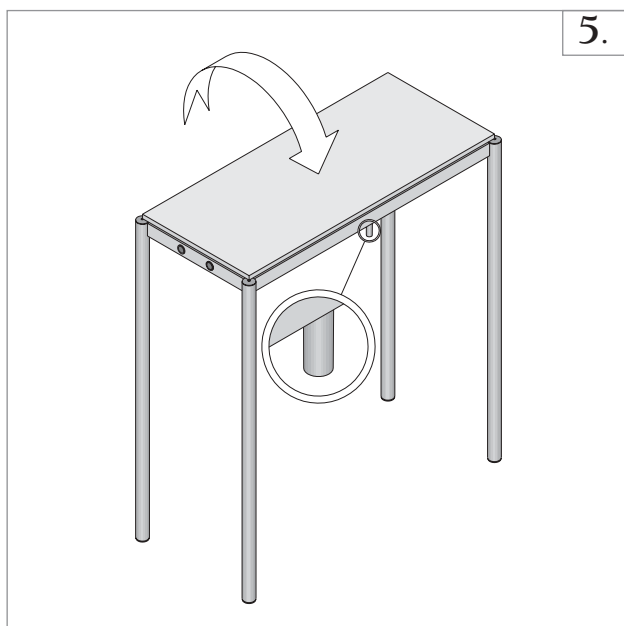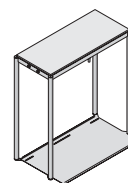

Set the top of the garage on its legs.
The spacer is in the front.

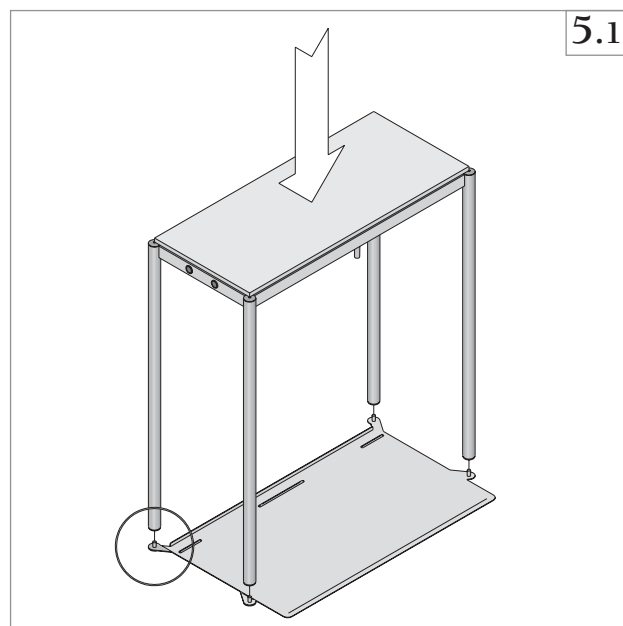

Position the top of the garage on the approach ramp plate.

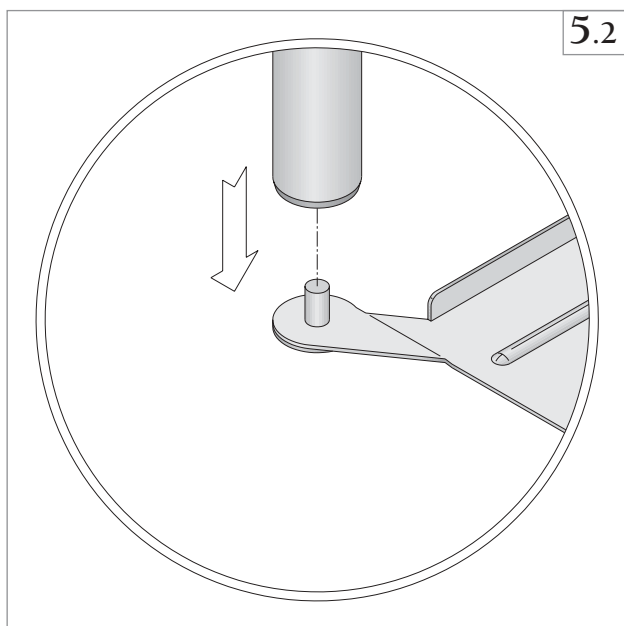

Set the holes in the plastic sleeve in the columns
onto the pins of the approach ramp plate.

6	Moby	5	Communicator	4	FreeWall	3	Tokyo	2	Conference	1	Emerge	0	General
---	------	---	--------------	---	----------	---	-------	---	------------	---	--------	---	---------

