


BYRNE

BE01453 & BE01454 INSTALLATION INSTRUCTIONS FOR BYRNE PDC®


Install data jacks as described in the installation instructions provided with the data adapters, BE01421

To Install BE01454:

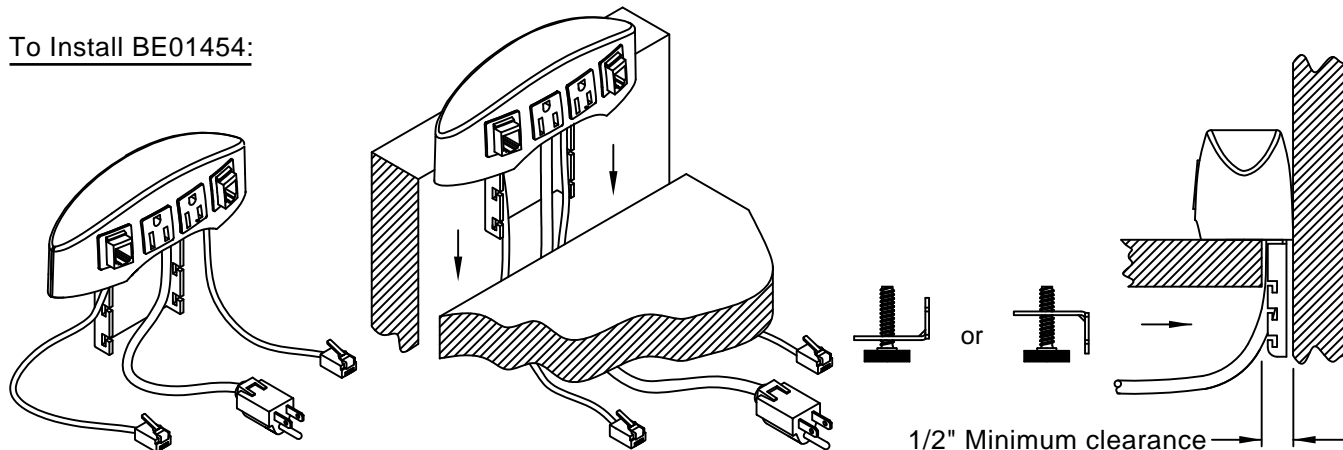

1. Drop the power and communication cords between work surface and panel or wall.
2. Attach locking cam to clamp behind the work surface after PDC is seated.
3. Tighten the knob until the PDC is secure.

To Install BE01453:

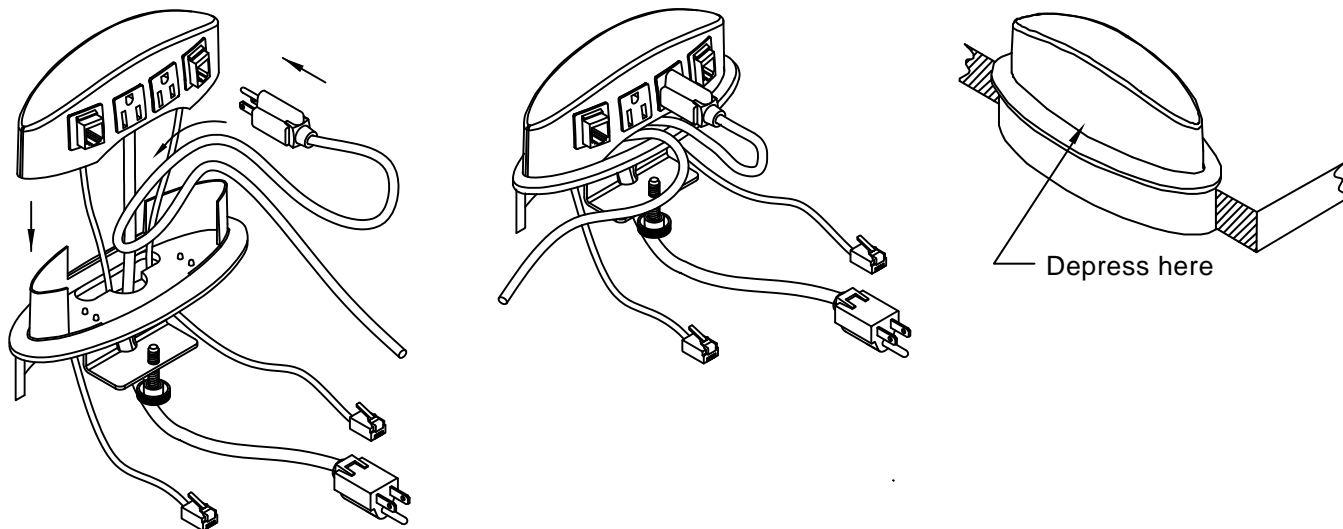

1. Insert the power and communication cords through PDC base.
2. Any excess cord may be inserted into PDC.
3. Snap the PDC housing into the base.
4. Slide the PDC onto work surface.
5. Tighten the knob until PDC is secure.
6. To remove PDC housing from its base, press on the lower back of the housing.