


004462D Rev B

Installation Instructions




Vertical Wire Manager
AHVERT


- 1** Attach spine mounting brackets to underside of worksurface.

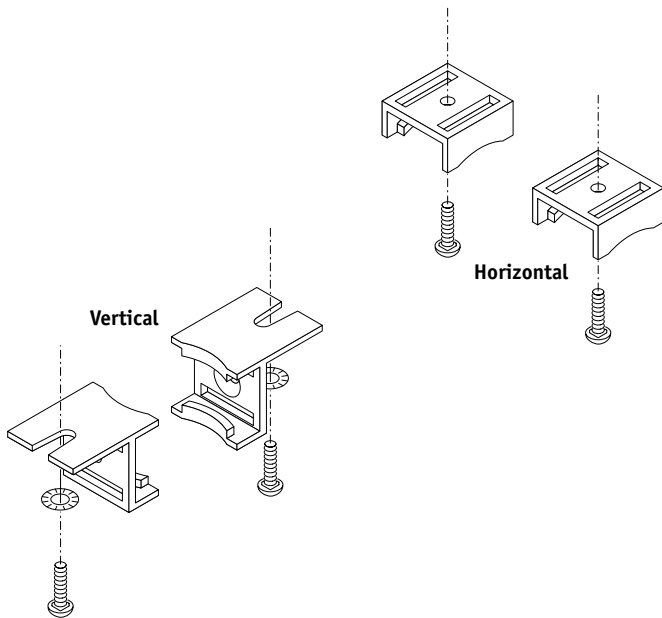


- 2** Slip spine into mounting brackets, as shown.

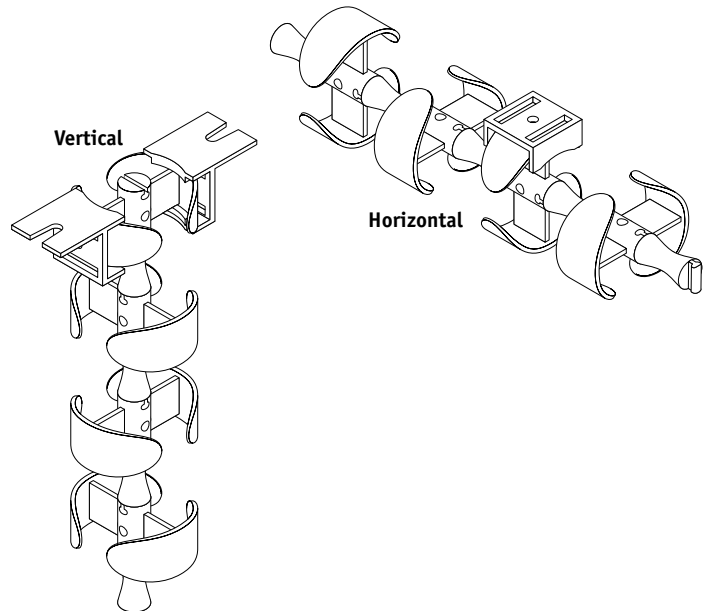

- 3** Attach weighted base to spine, as shown.

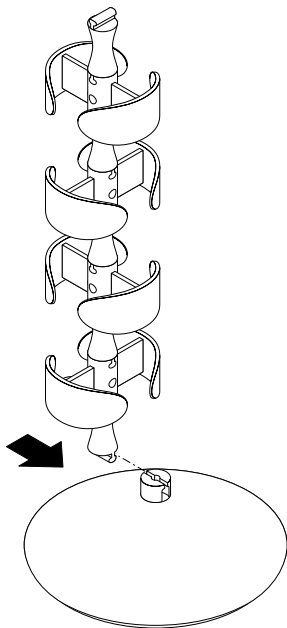

- 4** Route your wires through and around the length of the spine.

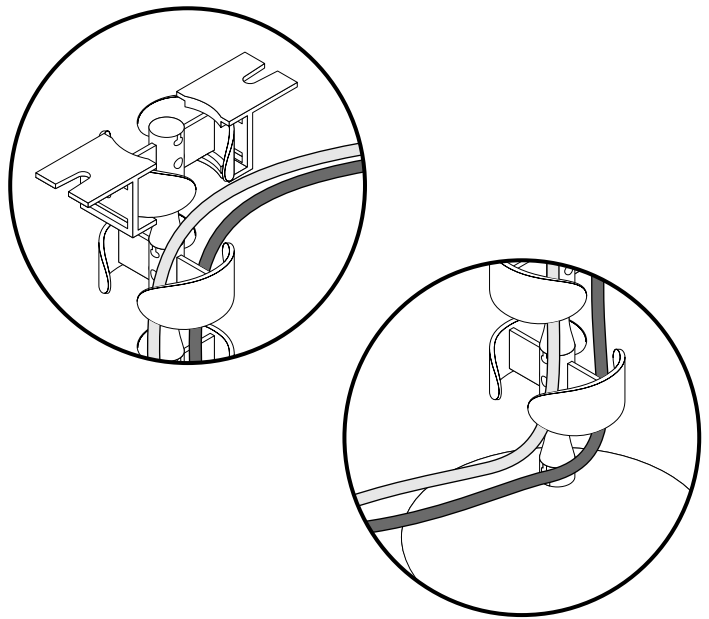

For a better day at work.™

details®

A STEELCASE COMPANY

www.details-worktools.com
Details Customer Alliance 800.833.0411
All rights reserved. Printed in U.S.A. 3/06