

STOP!

Do not install until you have read these instructions
Call 800.465.6909 with any questions

HANDLING AND INSTALLATION INSTRUCTIONS

Beadazzled in Relief and Bijou Flexible Glass Bead™ Wall Tiles
(MR-BR, BRNB, BRBC, BTCP, BTCN, BRB, BRS series)

This is not a seamless product. Lighting will affect appearance of final installation.

QUICK FACTS

- Paste: Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality clear, strippable, pre-mixed, vinyl adhesive.
- All Beadazzled must be installed within 6-8 weeks from date of shipment.
- Table-trim from the back.
- Level 5 finish.
- Prepaste the wall.
- Allow to rest 2-3 minutes.
- Note tiles are directional—see diagram.
- Please read the following installation instructions before proceeding.
- **IF YOU DO NOT FOLLOW OUR INSTALLATION INSTRUCTIONS, MAYA ROMANOFF WILL NOT ACCEPT RESPONSIBILITY FOR THE INSTALLATION—YOU WILL BE INSTALLING AT YOUR OWN RISK.**

SPECIAL HANDLING REQUIRED

- Store the material between 60-85° F in a dry place.
- Store boxes flat.
- Prolonged storage is not recommended. Check label on box for install by date. Product must be kept in a temperature controlled environment.
- This product cannot be double-cut on the wall; trim the material from the back side on a table.

GENERAL GUIDELINES

- Inspect goods carefully. No returns on cut goods.
- Confirm that you have the correct color and product before installing. Additional tiles from this dye lot may not be available.
- **No allowances will be made after FOUR (4) tiles—Call 800.465.6909 immediately if you encounter any difficulties.**
- No claims allowed for labor charges or consequential damages under any conditions.
- Wallcoverings can display certain irregularities that are inherent to the manufacturing process.

ACTIONS TO AVOID

- Do not trim from the front or get paste on the front.
- Do not crease wallcovering.
- Do not pull tiles once they have been placed on the wall: this will cause the seams to open after the product dries.
- Avoid direct or bright sunlight. Not guaranteed against fading or color change.

05/01/11

CONTINUED



MAYA ROMANOFF®

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 t 1.773.465.6909 f 1.773.465.7089 www.mayaromanoff.com

STOP!

Do not install until you have read these instructions
Call 800.465.6909 with any questions

HANDLING AND INSTALLATION INSTRUCTIONS

Beadazzled in Relief and Bijou Flexible Glass Bead™ Wall Tiles
(MR-BR, BRNB, BRBC, BTCP, BTCN, BRB, BRS series)

This is not a seamless product. Lighting will affect appearance of final installation.

WALL PREPARATION

- Paint the wall the color of the product with a good quality, non-sealing flat latex wallpaint. Avoid super sealing wall prep products. They can cause product to bubble.
- When installing Bijou wall tiles (BRNB-XXXX), wall must be a **Level 5 finish**.
- Walls must be completely dry before installation can begin.
- Apply a coat of Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality CLEAR, STRIPPABLE, PRE-MIXED, VINYL adhesive* to the wall.

TRIMMING

- Trim with a very sharp, single edge razor blade. **USE A NEW BLADE FOR EACH CUT.**
- All edges are factory edges. Create a template for tight corners or any surface that is not square.
- This product cannot be double-cut on the wall; trim the material from the back side on a table only when necessary.

ADHESIVE

- Use Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality CLEAR, STRIPPABLE, PRE-MIXED, VINYL adhesive*. Apply a generous, even coat of adhesive to the product being careful at the edges so that adhesive does not get on any overhanging beads.
- Allow to rest 2-3 minutes.
- Do not fold.
- To avoid getting paste on face of product, use a 3/8" nap roller to apply adhesive.
- You can protect the face of the installed drops from adhesive using 3M Blue Tape.
- Overhanging beads: Carefully push overhanging beads back into the body of the tile, away from the edges after tile has been pasted and relaxed.

HANGING

- Adhere product to the wall using a bristled nylon brush.
- Smooth product to the wall using a plastic smoother. Smooth continuously to remove any bubbles.
- Use a wooden seam roller to set the seams.
- Use a corner roller to ease the material into moldings, casework, etc., prior to trimming.

CLEANING

- Blot any excess debris—do not rub.
- Dampen the area using a soft cloth and a very weak solution of a very mild liquid detergent.
- Use canned air to raise any imbedded material to the surface.
- Blot the product dry with a soft cloth.

*For more information on Maya Romanoff's MR-RA-888-1 or MR-RA-888-5, check out www.mayaromanoff.com.

05/01/11

CONTINUED



MAYA ROMANOFF®

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 t 1.773.465.6909 f 1.773.465.7089 www.mayaromanoff.com

STOP!

Do not install until you have read these instructions
Call 800.465.6909 with any questions

HANDLING AND INSTALLATION INSTRUCTIONS

Beadazzled in Relief and Bijou Flexible Glass Bead™ Wall Tiles
(MR-BR, BRNB, BRBC, BTCP, BTCN, BRB, BRS series)

This is not a seamless product. Lighting will affect appearance of final installation.



ADDITIONAL INFORMATION

Please note: Beadazzled Tiles are directional. Please note printed lines on back of metallic gold and silver tiles OR follow the pattern repeat. When hanging, take care to keep printed lines facing in same direction on all tiles. The color of the back-printing will not impact the installation. It will be un-noticeable from the front of the installed tiles.


Tiles in all colorways are not perfectly square. As you are installing, pay attention that the tiles line up as you hang the tiles. Following the pattern repeat will ensure tiles match correctly. (Note, the Circles pattern can be rotated.)

See illustrations below.

Examples of **CORRECT** metallic tile installation (showing back-printing on tile):

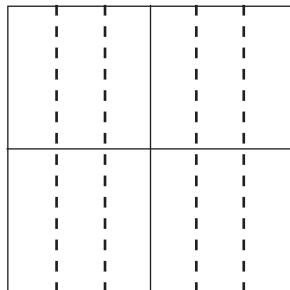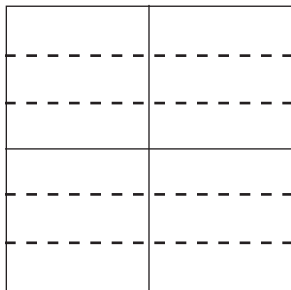


Example of **INCORRECT** metallic tile installation:

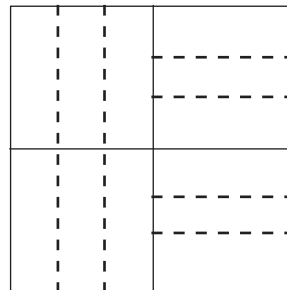


If there are printed lines on back of product, they **MUST** face in same direction.

CORRECT tile installation:

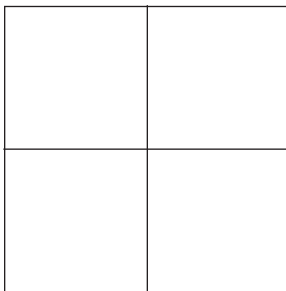

Example of **INCORRECT** tile installation:

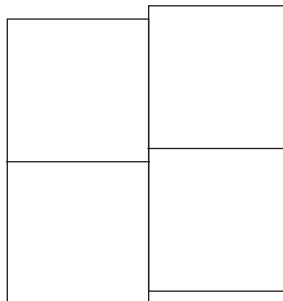

If tiles are not matching up, rotate the tile until the tiles DO match up (as shown in the "Correct tile installation illustration").

05/01/11