

STOP!

Do not install until you have read these instructions
Call 800.465.6909 with any questions

HANDLING AND INSTALLATION INSTRUCTIONS

Sunburst II™ Type II Vinyl Wallcovering

PLEASE CHECK PRODUCT BEFORE CUTTING

QUICK FACTS

- Paste: Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality clear, strippable, pre-mixed, vinyl adhesive.
- Double-cut on the wall.
- Walls should be mirror smooth.
- Hang in sequence.
- Please read the following installation instructions before proceeding.
- **IF YOU DO NOT FOLLOW OUR INSTALLATION INSTRUCTIONS, MAYA ROMANOFF WILL NOT ACCEPT RESPONSIBILITY FOR THE INSTALLATION—YOU WILL BE INSTALLING AT YOUR OWN RISK.**

GENERAL GUIDELINES

- Inspect goods carefully. No returns on cut goods.
- Confirm that you have the correct yardage and color of product before installing. Additional yardage from this dye lot may not be available.
- **No allowances will be made after THREE (3) drops—Call 800.465.6909 immediately if you encounter any difficulties.**
- No claims allowed for labor charges or consequential damages under any conditions.
- Wallcoverings can display certain irregularities that are inherent to the manufacturing process.

INSTRUCTIONS

- Inspect for defects and double check color and product before cutting.
- Before hanging wallcovering, prime and prepare walls accordingly. WALLS SHOULD BE MIRROR-SMOOTH.
- Use Maya Romanoff's MR-RA-888-1 or MR-RA-888-5* or a good quality CLEAR, STRIPPABLE, PRE-MIXED, VINYL adhesive. Remove any excess adhesive immediately with warm water. If excess paste is not removed permanent damage could result to the face of the wallcovering.
- When installing a textured wallcovering, reversing alternate strips may help minimize subtle shading caused by reproduction of natural materials. **Please note:** Some patterns CANNOT BE reverse-hung. Confirm before hanging.
- Wallcovering rolls are marked numerically on the shipping label. PLEASE HANG IN SEQUENCE.
- Take care not to scratch surface of wallcovering with plastic sweep when smoothing to wall. Rough smoothing with a plastic sweep can damage wallcovering.
- To clean and care for wallcovering, use mild soap and water and a non-abrasive sponge.
- Walls should be free of dirt, mold, and mildew prior to installation. Further, conditions that allow moisture infiltration to get into walls should be corrected prior to installation. Consult with a professional.

*For more information on Maya Romanoff's MR-RA-888-1 or MR-RA-888-5, check out www.mayaromanoff.com.

10/13/11



MAYA ROMANOFF®

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 t 1.773.465.6909 f 1.773.465.7089 www.mayaromanoff.com

STOP!

Do not install until you have read these instructions
Call 800.465.6909 with any questions


HANDLING AND INSTALLATION INSTRUCTIONS

Sunburst II™ Type II Vinyl Wallcovering

PLEASE CHECK PRODUCT BEFORE CUTTING

TRIMMING

- This product has a side match and an 18" x 18" repeat.
- 56" wide untrimmed. Trim from each side. 54" wide installed.
- Best results achieved when double cut on the wall. See diagram below.

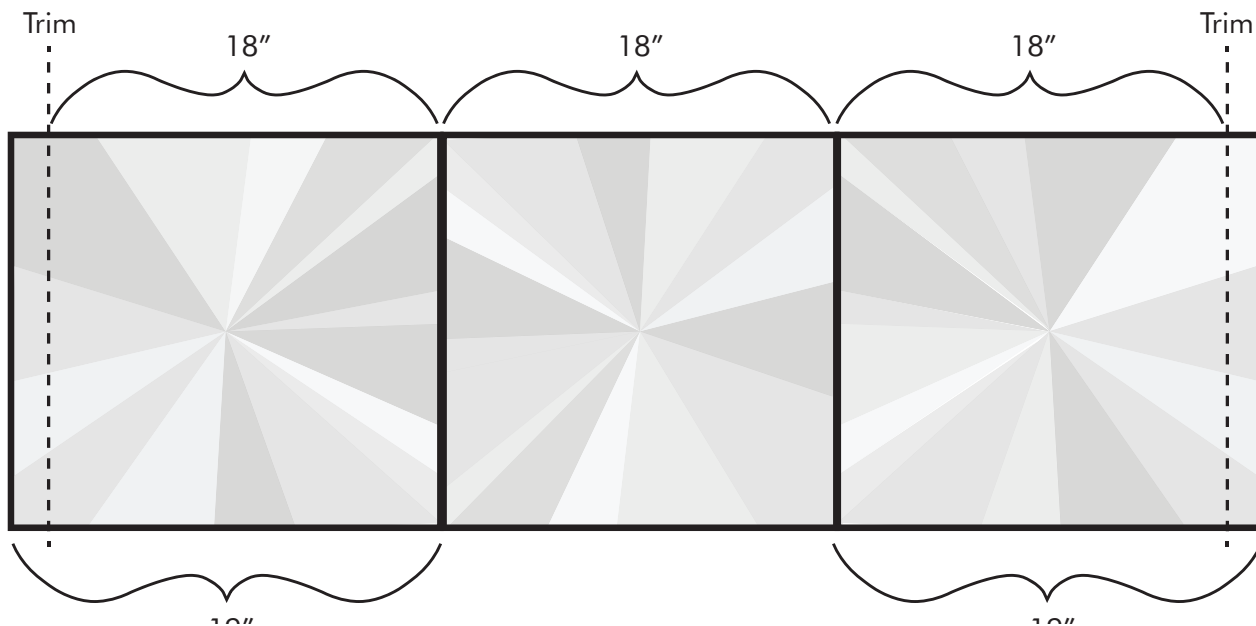

10/13/11