




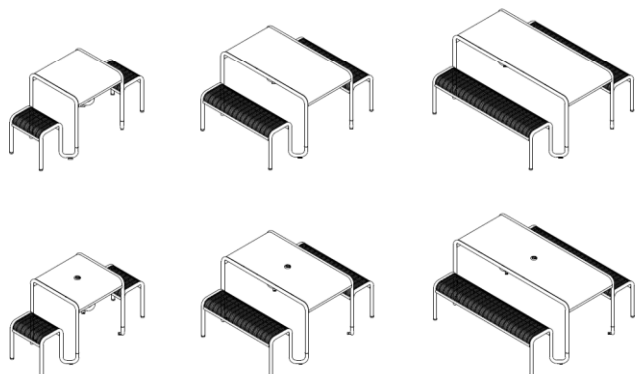

Included components:

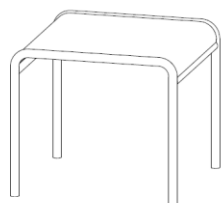

1x - Table

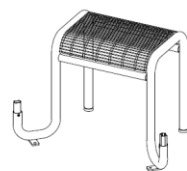

2x – Seat assembly

Tools Required

- 3/16" Allen head wrench for tightening set screws
- For surface mount option:
- (4) non-corrosive anchors, maximum 3/8" diameter.

Note: If specifying the Manistee table with umbrella hole and a Landscape Forms' umbrella, the umbrella must be ordered with the surface mount stand and the stand must be anchored. See separate installation guide for the surface mount stand.

ASSEMBLE WITH CARE! Pangard II® Polyester Powdercoat is a strong, long-lasting finish. To protect this finish during assembly, place unwrapped powdercoated parts on packaging foam or other non-marring surface. Do not place or slide powdercoated parts on concrete or other hard or textured surface – this will damage the finish causing rust to occur. Use touch-up paint on any gouges in the finish caused by assembly tools.

ASSEMBLY:

1. Loosen seat screws in seat legs 2 turns. Do NOT remove set screws.
2. Place table legs over splice lock connectors.
3. Tighten set screws.

Freestanding unit can be set in place.

FOR SURFACE MOUNT INSTALLATION:

1. Set assembled table in position.
2. Mark hole locations.
3. Move table to allow access for drilling holes.
4. Drill holes according to anchor manufacturer's instructions.
5. Move unit back in position.
6. Install anchors according to anchor manufacturer's instructions.

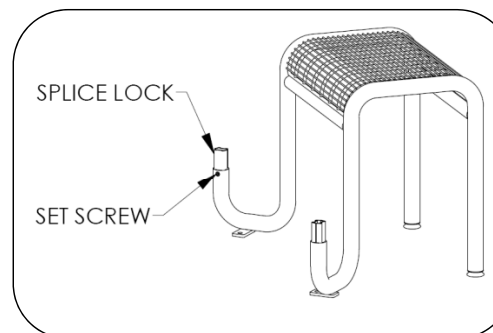


Fig. 1

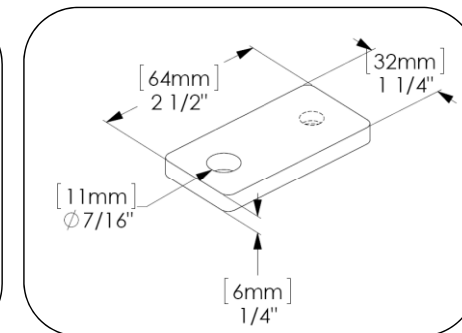


Fig. 2

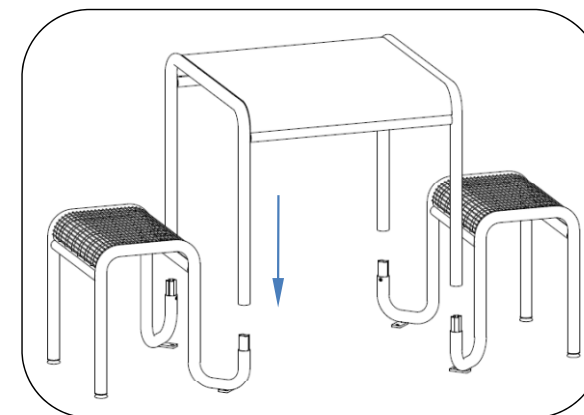


Fig. 3