




35PBCFPS
35PBDPB

POWERBAR® 6 OUTLET ELECTRICAL UNIT

Assembly Instructions

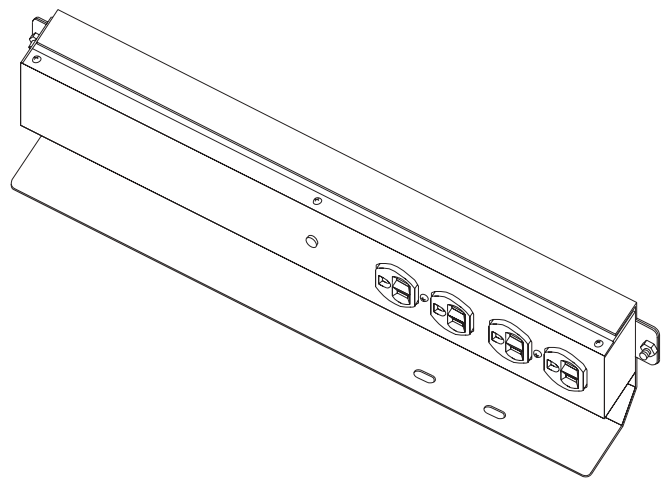


Parts List

Qty	Part No.	Description
1	ECF6	6 Outlet Power Strip w/Bracket (Comes with PBCFPS Only)
1	010-3194	Mounting Bracket


Hardware List

Qty	Part No.	Description
4	030-0302	#8-32 x 3/8" Phillips Combo Screw
4	02236	#8-32 Hex Nut-Serrated

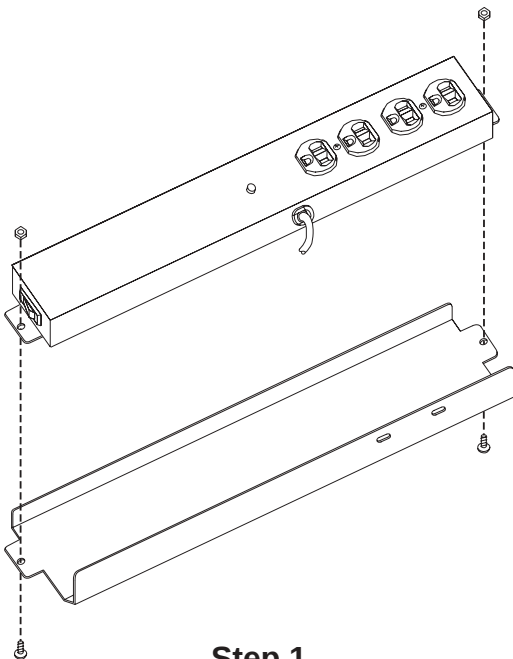

Step 1

Install E-Unit onto mounting bracket using #8-32 x 1/2" screws and #8-32 hex nuts as shown.

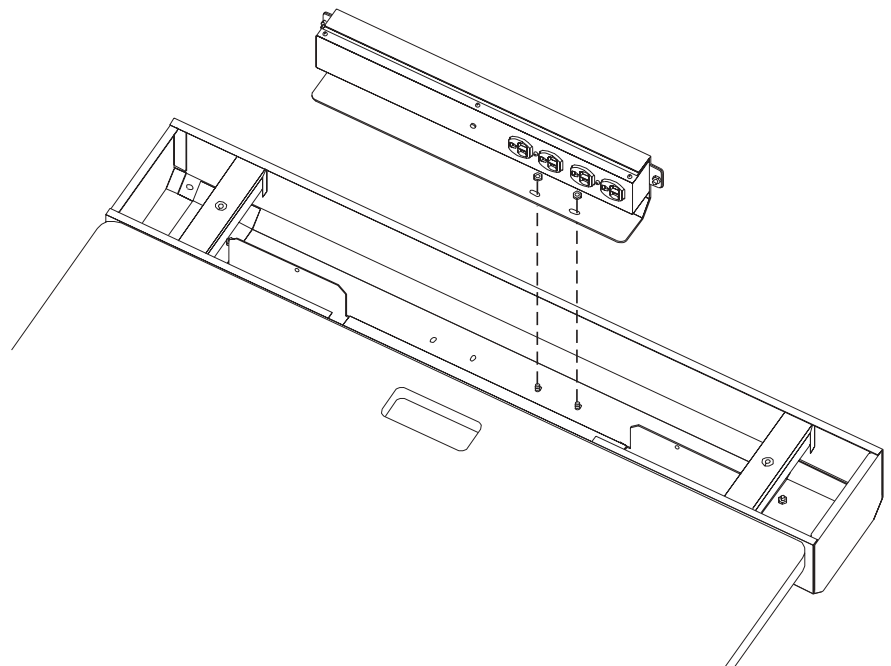

Step 2

Remove Power Bar™ wire bin cover to install E-Unit

Install E-Unit assembly into Power Bar™ wire bin by inserting #8-32 x 3/8" screws from underneath and through slotted mounting holes. Attach E-Unit assembly over #8-32 screws and fasten #8-32 hex nuts as shown.

Reinstall Power Bar™ wire bin cover

Bretford
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

Bretford Ltd.
Technology House
7 Lake End Court, Taplow
Bucks SL6 0JQ England
TEL: 01628 603558
FAX: 01628 604923

www.bretford.com

Part # 031-3218
Rev.07.23.10 CZ