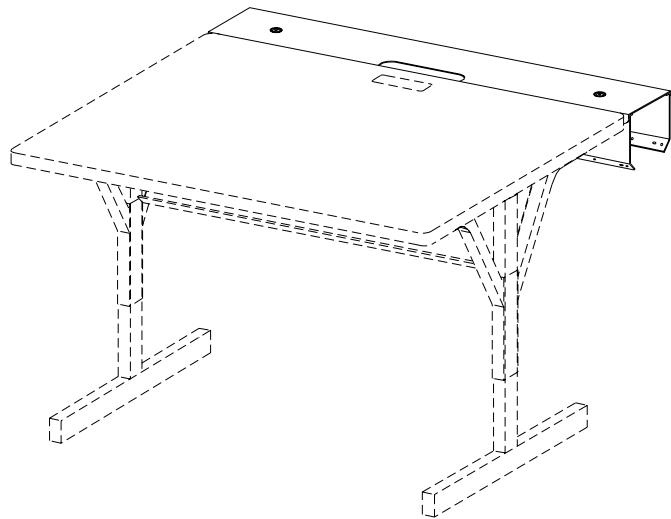


**BRETFORD****35PBR42 35PBR48  
35PBR60 35PBR72****POWERBAR®****Assembly Instructions****PARTS LIST**



Qty	Part No	Description
1	022-1986	Wire Bin (42)
	022-1987	Wire Bin (48)
	022-1988	Wire Bin (60)
	022-1989	Wire Bin (72)
2	017-0610	Square Tubes
2	010-3173	Cover Mounting Bracket
1	010-3177	Cover (42)
	010-3180	Cover (48)
	010-3183	Cover (60)
	010-3186	Cover (72)
1	010-3172	Bin Plate
2	010-3197	Ganging Clip

**HARDWARE LIST**


Qty	Ref	Part No	Description
4	AA	030-0354	#10-32 x 1 1/2" Button Head Allen Screw
2	BB	030-0422	#5/16-18 x 1/2" Phillips Head Screw
2	CC	030-0474GM	#1/4-20 x 7/8" Flat Head Allen Screw
4	DD	030-0302	#8-32 x 3/8" Combo Head Screw
4	EE	02236	#8-32 Hex Nut-Serrated
2	FF	030-0402	#10-32 x 5/8" Combo Head Screw (Ganging Clip)

**TOOLS REQUIRED**

Phillips Screwdriver  
5/32 Allen Wrench (supplied)  
1/8 Allen Wrench

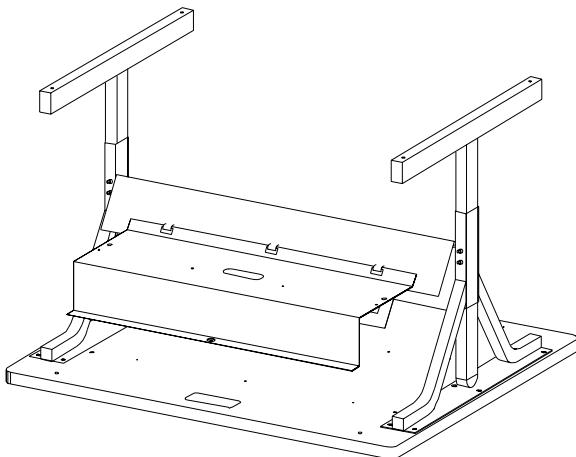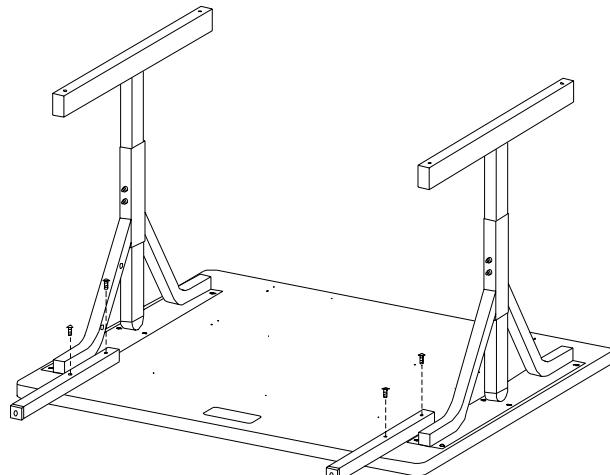**2 PERSON INSTALLATION RECOMMENDED****FIGURE 1****FIGURE 2****STEP 1**

Turn table over and remove modesty panel assembly (**FIGURE 1**). Attach the straight tubes (with threaded plastic insert) to the back edge of the table with screws (AA) provided as shown in **FIGURE 2**. Reattach modesty panel and stand unit upright.

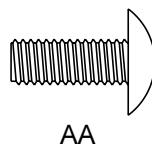**AA**


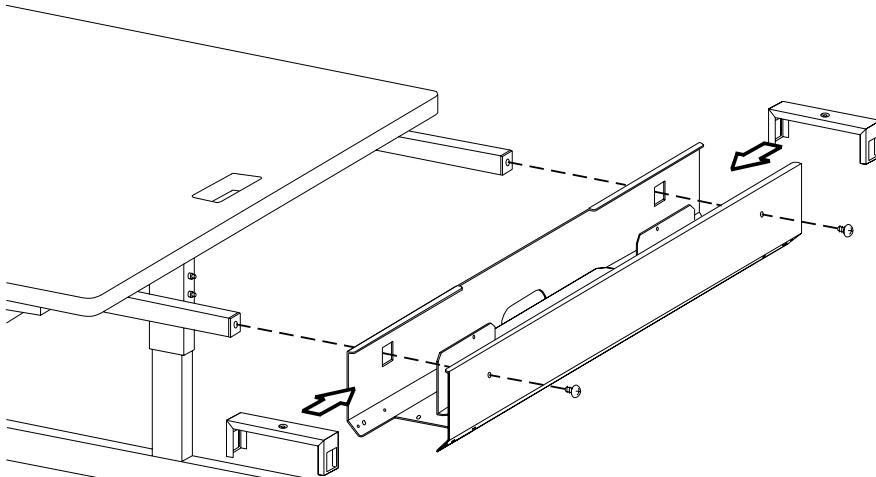



FIGURE 3

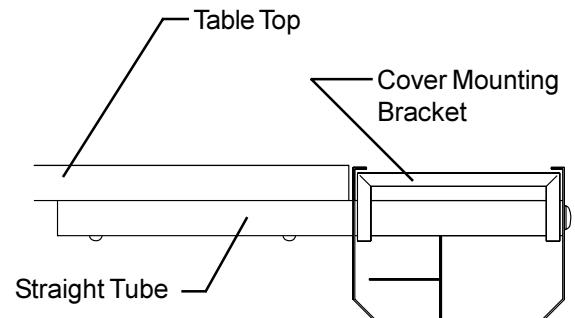

SIDE VIEW OF BIN ASSEMBLY

## STEP 2

Position bin with (2) square cutouts in line with the straight tubes. (See Figure 3). Slide the bin just onto the straight tubes. Insert both cover mounting brackets from the side opening of bin. Adjust the bin so one end of cover mounting brackets fit onto straight tubes and slide bin in while aligning second hole in cover mounting brackets onto the straight tubes. (Note: the cover mounting brackets have a loose fit). Install the (2) screws (BB) into the threaded plastic insert on the end of the straight tubes. **Do not over tighten.**

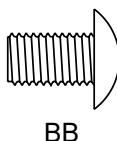

BB

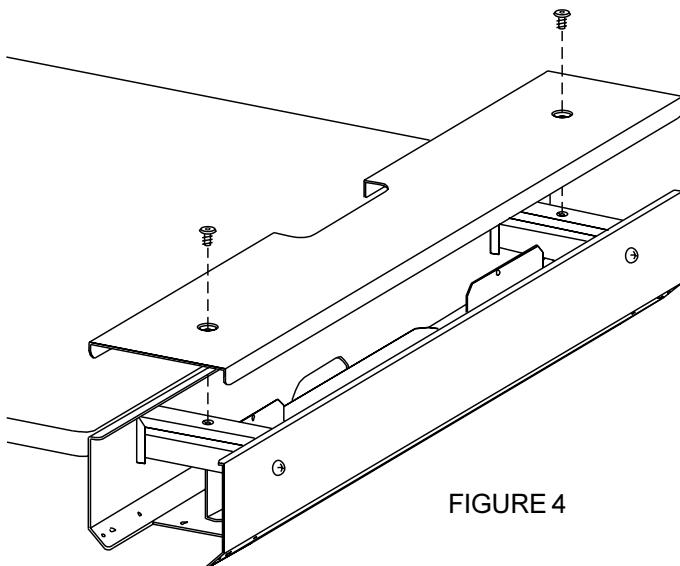


FIGURE 4


## STEP 3

Attach bin cover using 1/4-20 x 7/8" flat head allen screws (CC) as shown in Figure 4.


FIGURE 5

## STEP 4

The supplied flat plate (Bin Plate) is used when two Power Bars™ are bridged together end to end as shown in Figure 5. Use #8-32 x 3/8" screws (DD) and #8-32 hex nuts (EE) to secure plate to the bin.

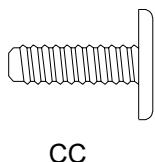


CC

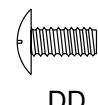

DD




EE

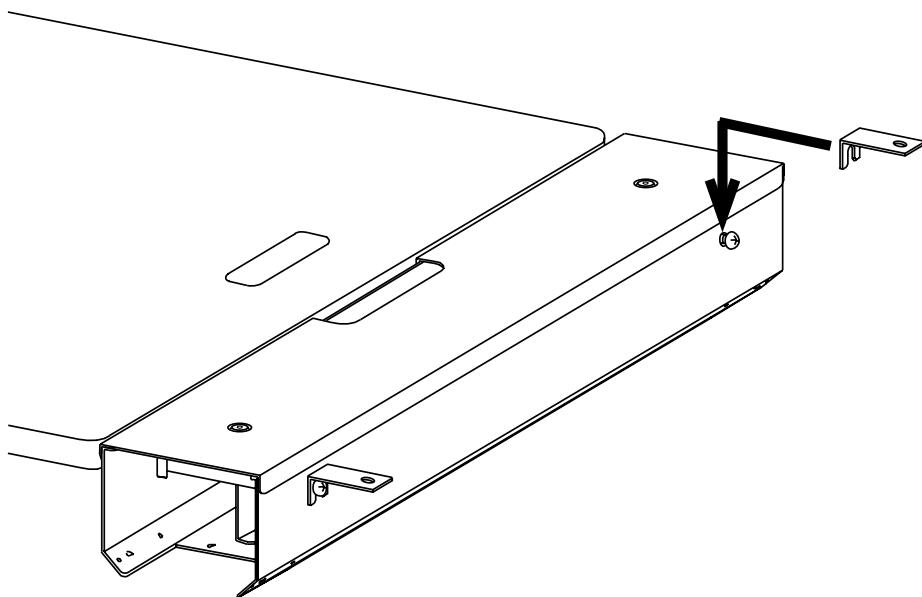

### Step 5

The supplied Ganging Clips are used when another table assembly (with out a Power Bar™) is to be joined back to back. **Do not discard the clips.** Save clips for future use (store in wire bin). Loosen the 5/16-18 x 1/2" screws on the bin front enough to slide the Joining Clips on. Then tighten screws.

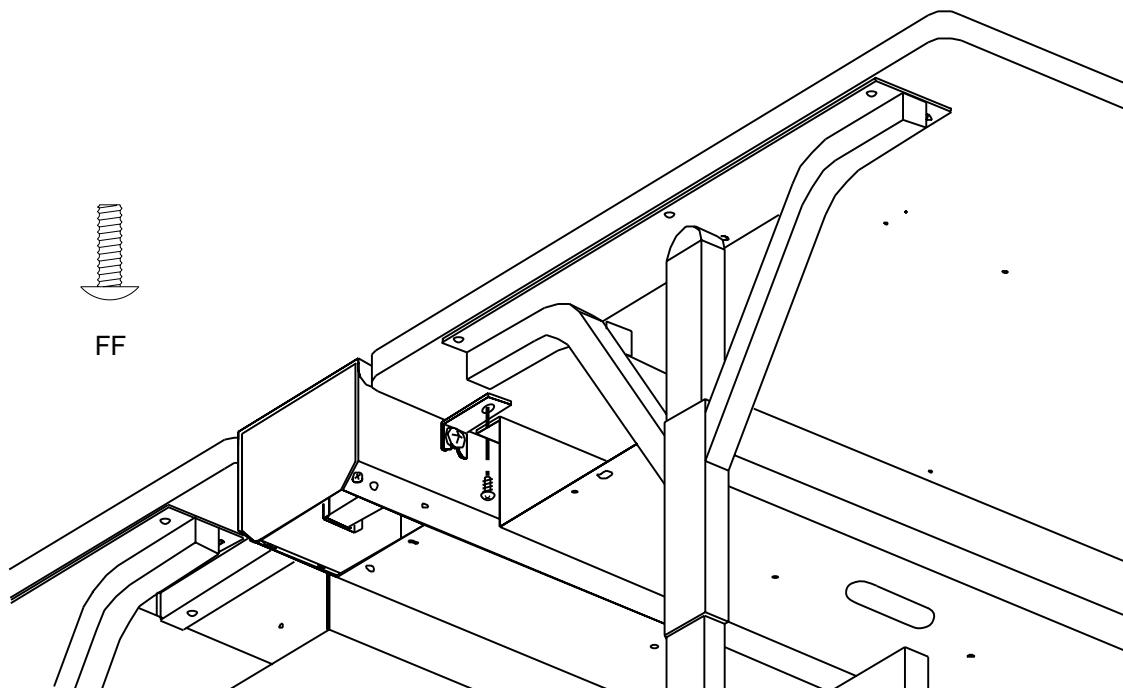

### Step 6

Butt the table up against the Power Bar™ table and align the clip mounting holes with the table mounting holes underneath. Insert #10-32 x 5/8" screws (FF) and tighten.

**Bretford**  
 11000 Seymour Avenue  
 Franklin Park, IL 60131  
 TEL: 847.678.2545  
 800.521.9614  
 FAX: 847.678.0852  
 800.343.1779

[www.bretford.com](http://www.bretford.com)

**Bretford Ltd.**  
 Technology House  
 7 Lake End Court, Taplow  
 Bucks SL6 0JQ England  
 TEL: 01628 603558  
 FAX: 01628 604923