


QUATTRO TABLES

Assembly Instructions

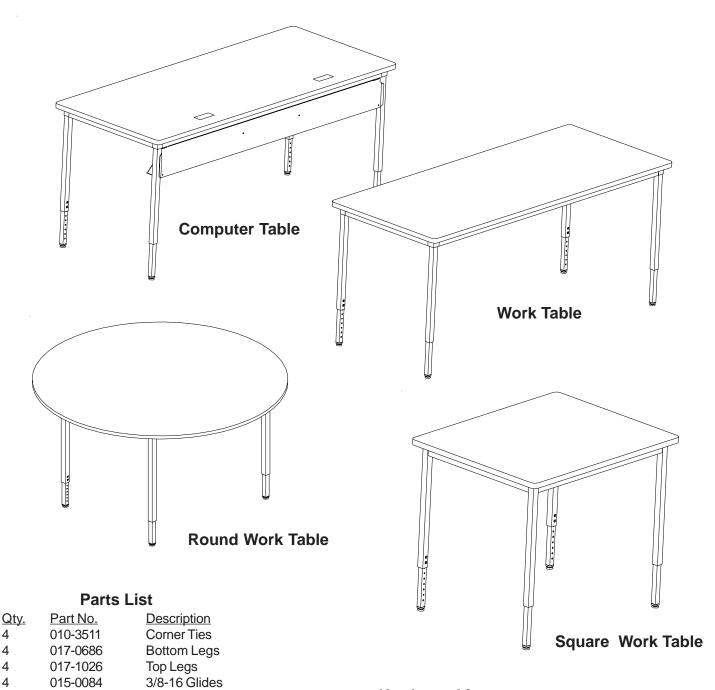

Tools Required

010-3520

Bin Mounting Bracket


(For Computer Tables Only)

2

Philips Screwdriver Allen Wrench Adjustable Wrench


Hardware List

Qty.	Part No.	<u>Description</u>
8	030-0396	3/8-16 x 1/2" Set screw
2	030-0357	#10-32 Flanged Hex Serrated Nut
		(For Computer Tables Only)
2	030-0402	#10-32 x 5/8" Black Combo Head Screw
		(For Computers Tables Only)
4	030-0852	5/16-18 x 1-1/4" Hex Flange Cap Screw

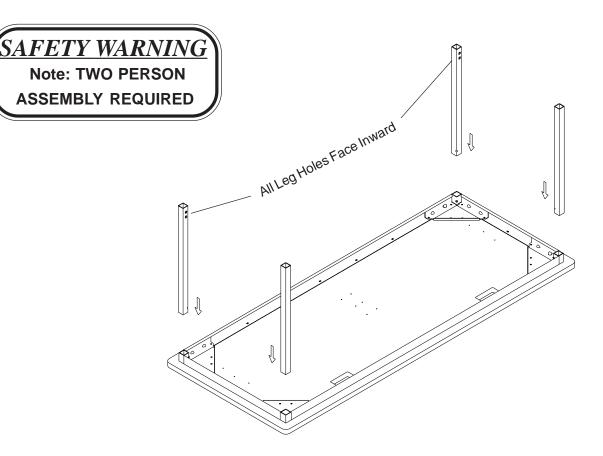

Step 1


Lay wood top on a carpeted surface with holes facing upward. Insert the legs into each corner with holes facing in as shown.

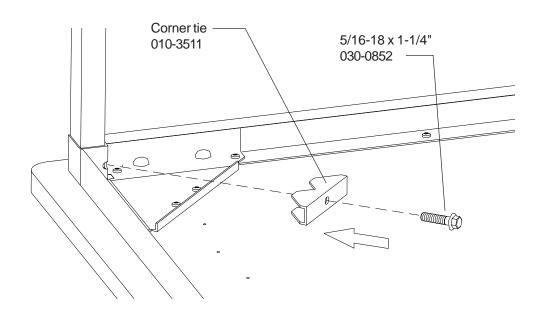

Step 2


Attach legs with 5/16-18 x 1-1/4" Hex Flange Cap screws (030-0852) and corner ties (010-3511). Tighten all screws.



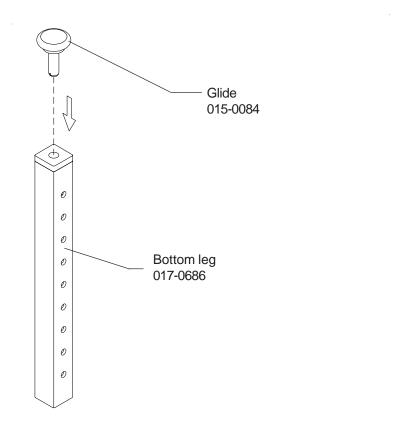




Screw glides (015-0084) into bottom legs (017-0686). Glides should be fully installed into legs so that the entire stem is inside of leg.

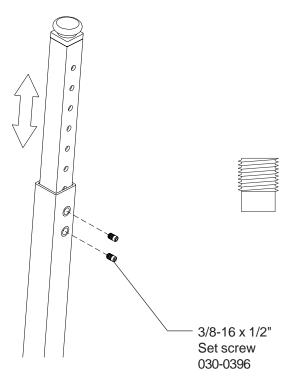


Step 4

Position holes in legs so that they face each other. Insert bottom legs into top legs. Set desired height and insert $3/8-16 \times 1/2$ " (030-0396) Set screws into legs and tighten with Allen wrench. Stand the unit upright.

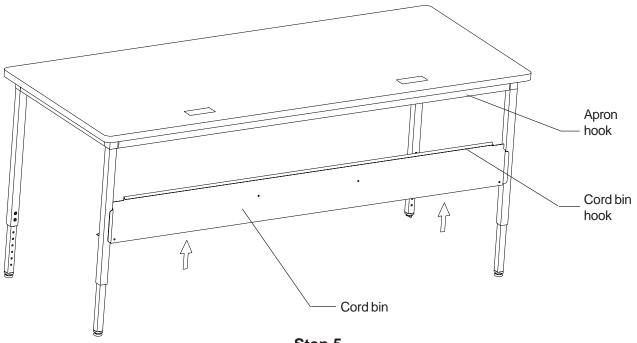

Step 5 (For tables with cord bin only)

Slide cord bin in between table legs. Slide the cord bin up on the legs until it hooks onto apron's lip underneath working surface.

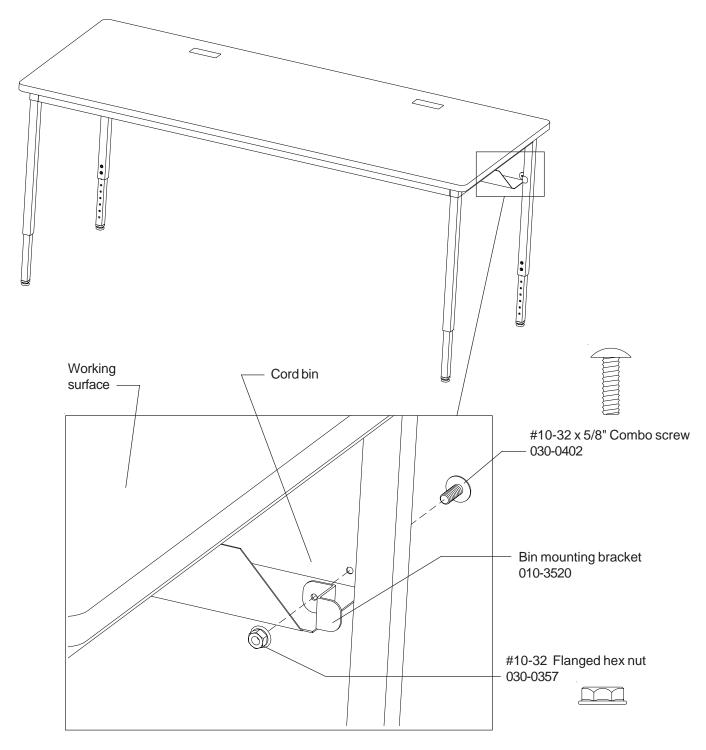

Step 6 (For tables with cord bin only)

Attach brackets to the cord bin as shown using $#10-32 \times 5/8$ " Combo screw (030-0402) and $#10-32 \times 5/8$ " (040-0402) and

Bretford

11000 Seymour Avenue Franklin Park, IL 60131 TEL: 847.678.2545 800.521.9614

FAX: 847.678.0852 800.343.1779 Bretford Ltd.

2 Etongate 110 Windsor Road Slough, Berkshire SL1 2JA England TEL: 01753 216531 FAX: 01753 539478