

INSTALLATION GUIDE FOR WHIRLPOOLS AND BATHTUBS

MODEL# 0707.200

CADENZA / EVOLUTION CORNER APRON

MODEL# CORNER-APRON

LIFETIME CORNER APRON

THANK YOU...

for selecting an American Standard bath. Your new bath is shipped to you after careful inspection. The whirlpool version is completely assembled with pump, motor, and system piping. All you need to finish the whirlpool installation are your selected fittings and electrical connections.

To insure maximum performance and pleasure from this product, please follow the instructions and cautions.

FOR AFTER-SALES SERVICE CALL 1 (800) 442-1902 WEEKDAYS.

The apron system is designed with an acrylic apron, an adjustable support with tub block, two corner pieces, a flexible kick base and support, and apron floor mounts. This system allows for 3/4" (19mm) thick finished floor. See **Figure D**.

1. Install whirlpool per instructions.
2. Install support stand: see **Figure A**
 - A. Remove paper back from adhesive on wooden tub block and apply at location indicated in **Figure A**. Locate on side of tub where apron is to be installed. Use spacer provided to give gap indicated from inside edge of whirlpool rim.
 - B. Place closed end of support stand in hole in tub block.
 - C. Screw foot out until tub rim is supported. Do not lift rim. Secure foot to floor with nail or screw. Snug locking nut.
3. Position the two corner posts at top edge of leveling stringer and flush with front edge of tub. Secure with screws provided. See **Figure B**.
IMPORTANT: TOPS OF CORNER POSTS MUST BE FLUSH WITH TOP OF LEVELING STRINGERS.
4. Place the apron against the corner posts, with short edge up and bottom edge on floor. Run a pencil along the bottom edge of the apron to mark the floor. Also mark the hole locations of the apron on the floor. Set apron aside. Install the front end of the floor mounts 1/8" (3 mm) behind the marked line at the hole locations. See **Figure B**.
5. Slide the top edge of the apron under the front edge of the whirlpool rim. Center the apron and lift it up against the underside of the whirlpool rim. Mark the apron hole locations on the mounting blocks with a pencil.
6. Remove apron and set aside.
7. Drill pilot holes 3/32" (2.5 mm) diameter in mounting blocks.
8. Reinstall apron with lip of apron under edge of whirlpool rim. Secure to floor mounts with screws provided.
9. The kickbase support is installed once the finished floor is in place. It is used to reinforce the bottom of the kickbase. See **Figure C**.
Start by fixing the support to either floor mount #1 using the screws provided. Form the support to the shape of the apron going from mounts 1 to 4. Join the supports at mount #4. Trim as necessary.
10. The kick base attaches to the apron bottom with hook and loop fastener. Align the bottom edge of the base with the finished floor and start at one end. Press the kick base in place.
See **Figure D** for side view of final assembly.

FIGURE A

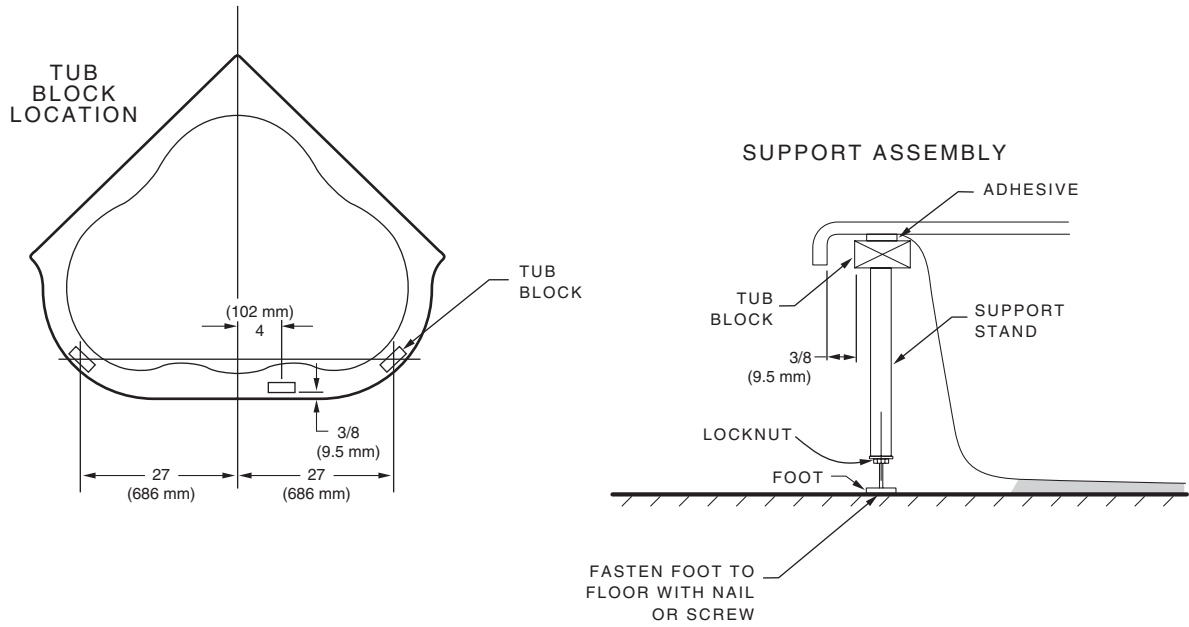


FIGURE B

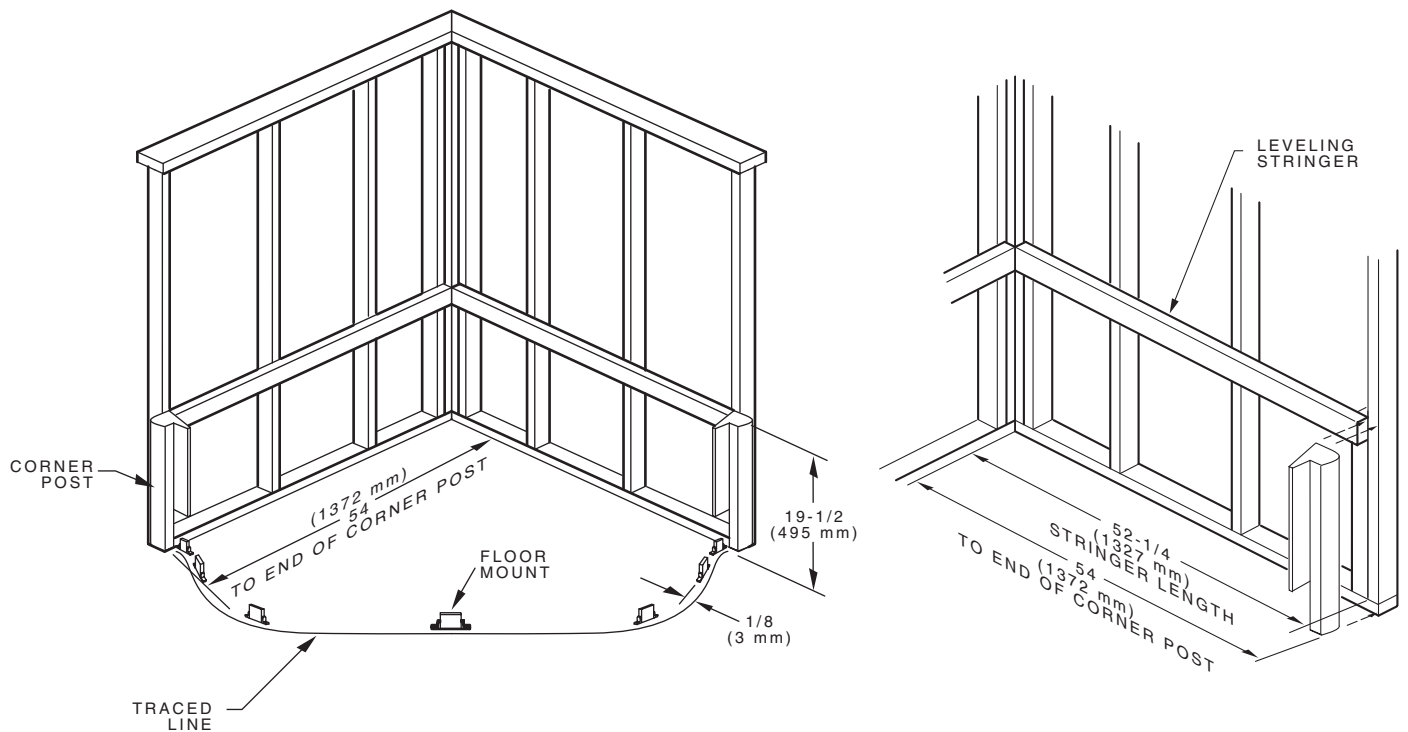


FIGURE C

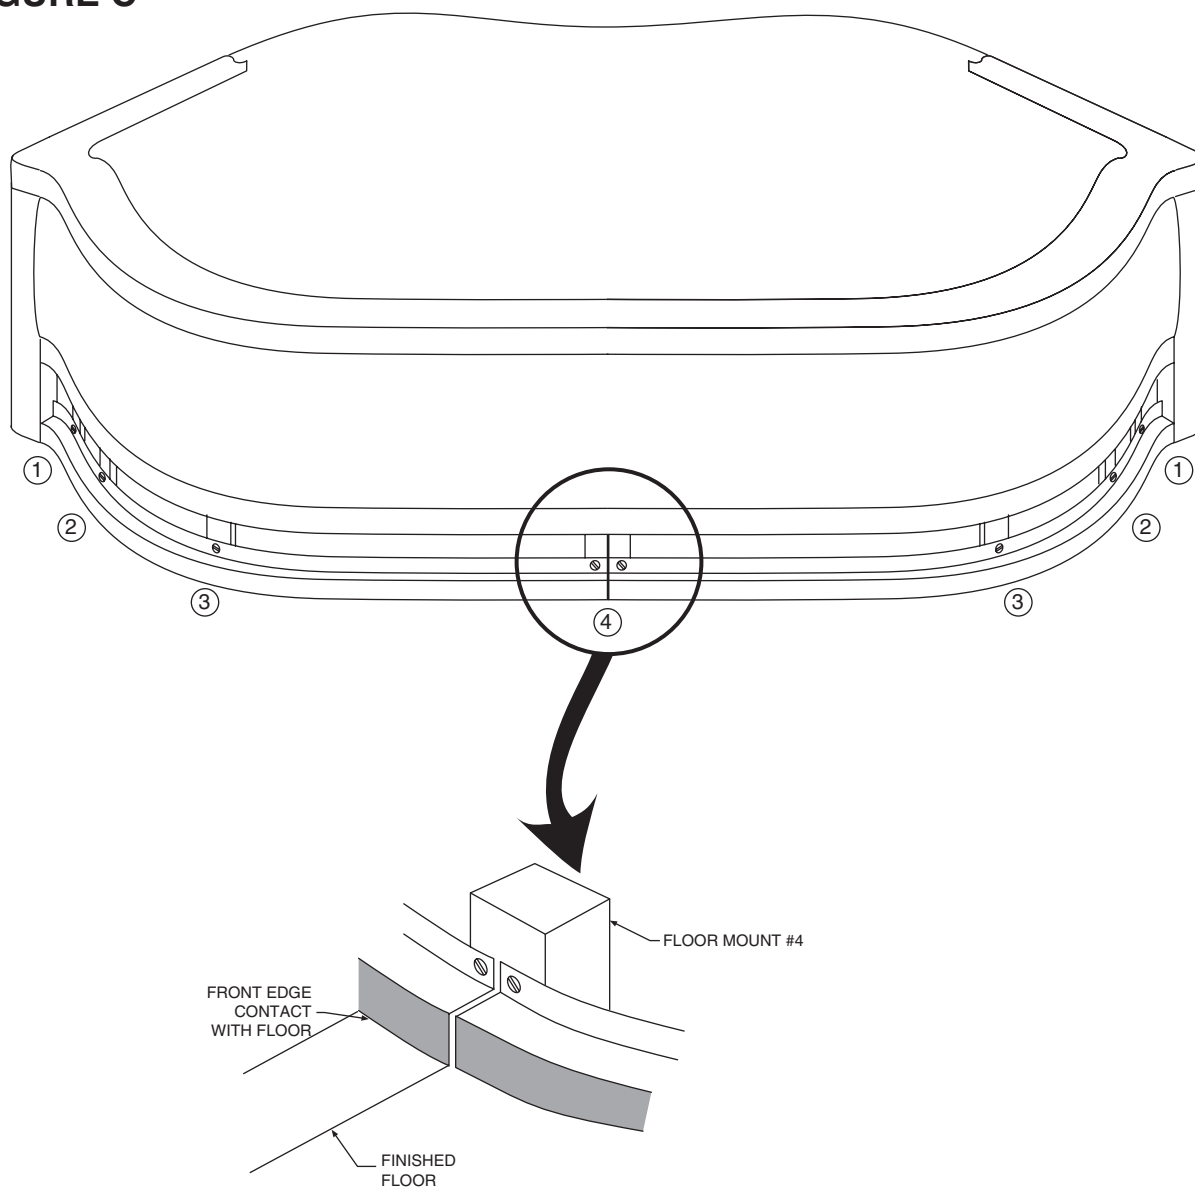


FIGURE D

