

ICS Sink

Shroud Installation Instructions



ICS Sink Shroud Installation Procedure



Step 1



Install the ICS Sink according to the recommended installation instructions.

American Standard
Style That Works Better

Step 2

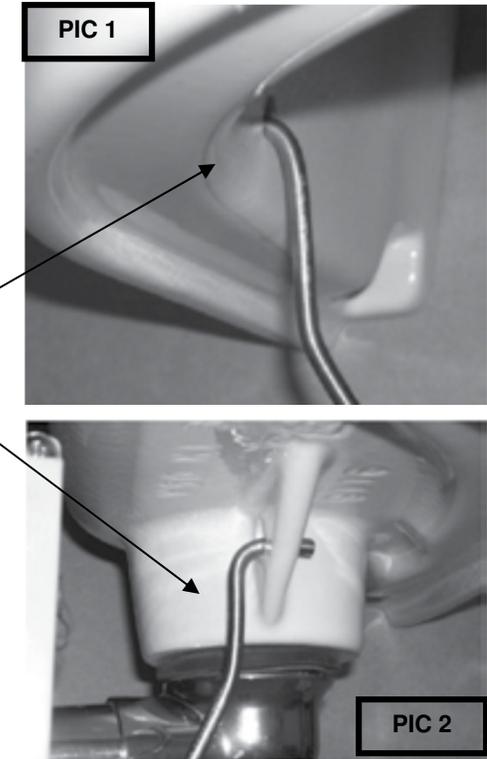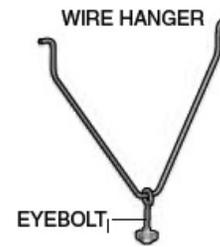

- Install EYEBOLT onto the WIRE HANGER.
- Place WIRE end in left SIDE HOLE (PIC 1).
- Place WIRE end in right SIDE HOLE near DRAIN (PIC 2).

ICS Sink Shroud Installation Procedure

Step 2 cont.



Side View



Front View

- WIRE HANGER is positioned behind ELECTRONIC BOX and in front of DRAIN.

Step 2 cont.



- Remove THUMB NUT from EYEBOLT.

ICS Sink Shroud Installation Procedure


Step 3



- Hold SHROUD up against SINK and flush against finished wall.
- Mark a line with a pencil on the wall about 6" long as shown on both sides of the SHROUD.

American Standard
Style That Works Better


Step 4

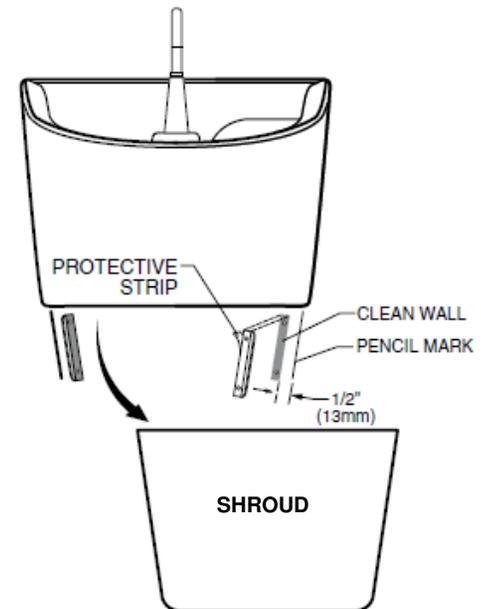

- Remove the SHROUD. Clean the wall where the SHROUD BRACKETS supplied with SINK are to be applied. Peel off the protective strip from the back of the SHROUD BRACKETS. Apply the two SHROUD BRACKETS to the finished wall parallel to the pencil marks as shown in the illustration below. This will prevent the SHROUD from moving accidentally.
- Clean off the pencil marks from wall.


ICS Sink Shroud Installation Procedure

Step 5

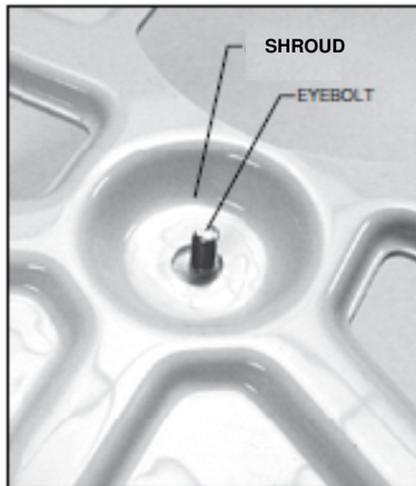

- Position SHROUD below SINK and against finished wall, slide SHROUD up to engage the wall brackets.
- Feed the threaded end of the EYEBOLT through the hole in the bottom of the SHROUD.

Step 6

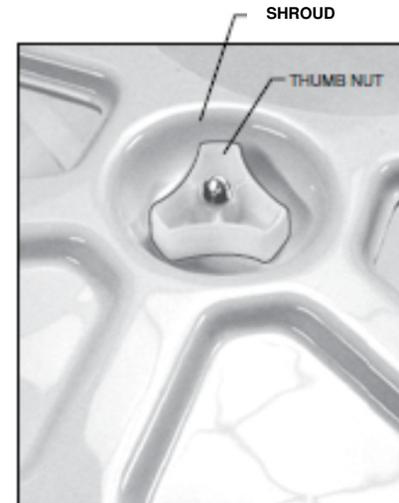


- Retain SHROUD with THUMB NUT. Finger tight only.

ICS Sink Shroud Installation Procedure

Optional Mounting


OPTIONAL MOUNTING. (SCREWS AND ANCHORS NOT SUPPLIED). Use Brackets to mark pilot holes on wall. Drill holes for ANCHORS. Peel off the protective strip from the back of the APRON BRACKETS. Apply the two SHROUD BRACKETS to the finished wall parallel to the pencil marks as shown and aligned with the mounting holes. See illustration below. Install SCREWS and tighten.

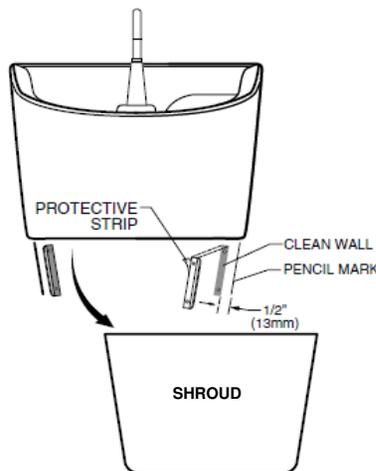

American Standard

Repair Parts

Models: 9118.111,
9118.100 & 9118.150

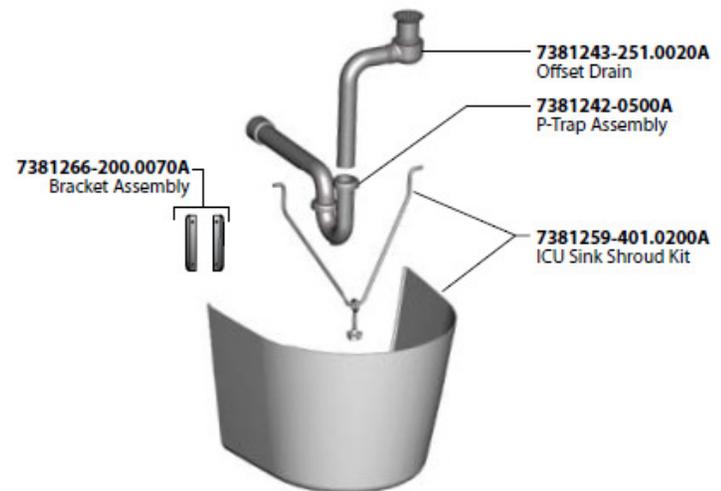

American Standard

Style That Works Better