

MEDICINE CABINET SURFACE MOUNT


Installation Instructions



INSTALLATION

1. CABINET MOUNTING PREPARATION AND CABLE ROUTING

Install the lower hanging cleat by attaching it to an adequately sturdy surface using five #8 x 1" screws. Position the cleat to be at the bottom and centered in cabinet location.

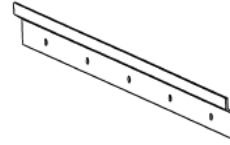


Wire and Cable Connection:

Quick disconnect terminals, HDMI cable, and RF cable pig tails are provided and exiting out of the bottom entry port of the cabinet. Removal of electrical access panel is not required. The quick disconnect with black and white color wire is for main power to the unit. The quick disconnect with two red color wires is for light switch legs.


Dimmable Option:

If the medicine cabinet was ordered with dimmable option, then connect gray (negative) and violet (positive) wires from a low voltage (0-10 VDC) control dimmer switch to the quick disconnect. The quick disconnect with black and white color wire is for main power to the unit.

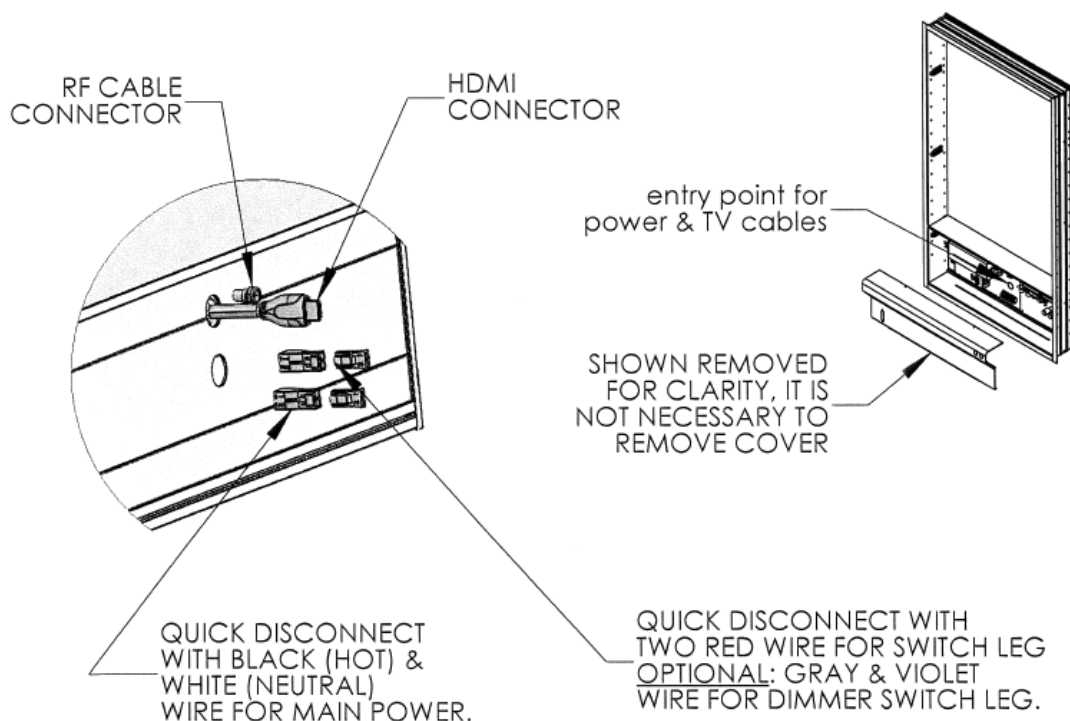


2. CABINET MOUNTING

After cabinet has been wired and tested, set the lower edge of the cabinet on the hanging cleat, make sure that cleat slides into the groove at the bottom of the cabinet. Tilt the top of the cabinet toward the wall and install other cleat on the top cabinet make sure that the cleat slides into the groove at the top of the cabinet, secure top cleat with five #8 x 1" screws.

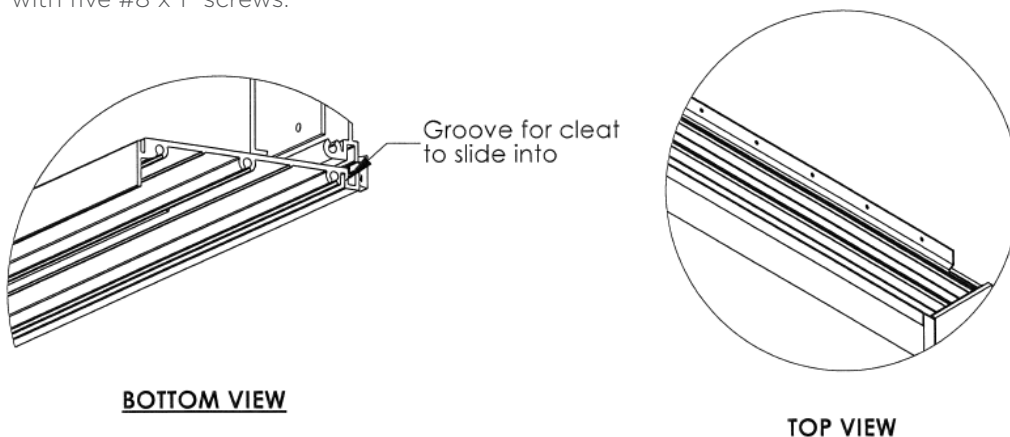

3. SIDE MIRROR PLACEMENT

Once the cabinet is mounted on the wall, peel adhesive liner from velcros and attached the side mirrors by aligning the top of the side mirror the top of the chassis (not the door) and pressing against the cabinet. The Dual-Lock Velcro attached to the mirrors and the chassis will adhere them.


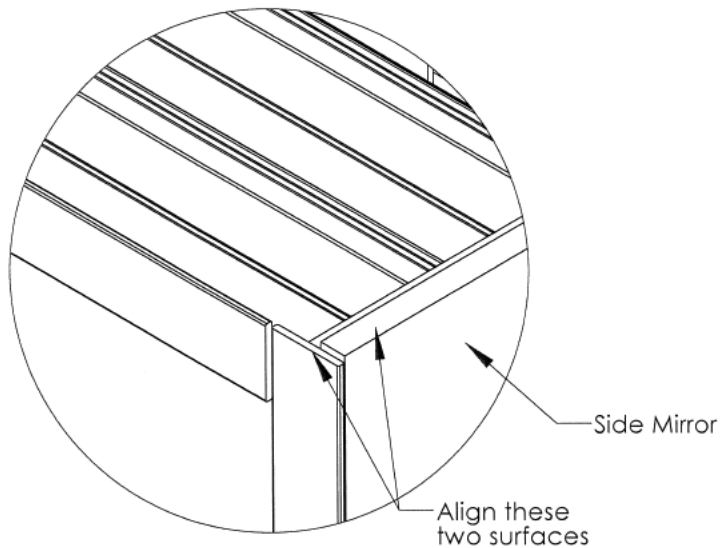


4. DOOR HANGING

Once the cabinet is mounted on the wall, attach the door by snapping the three hinges into place.


Blum three-point contact

CLIP top and CLIP hinges have three-point contact between the hinge and mounting plate to keep them firmly connected under heavy usage.

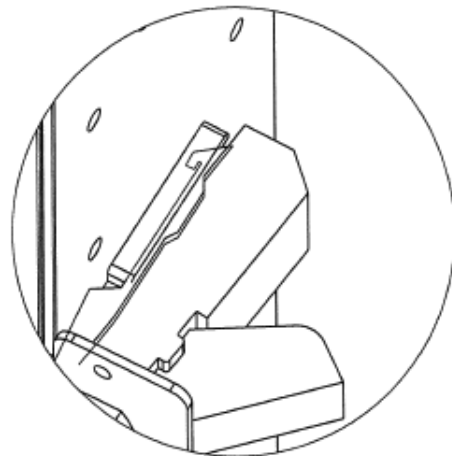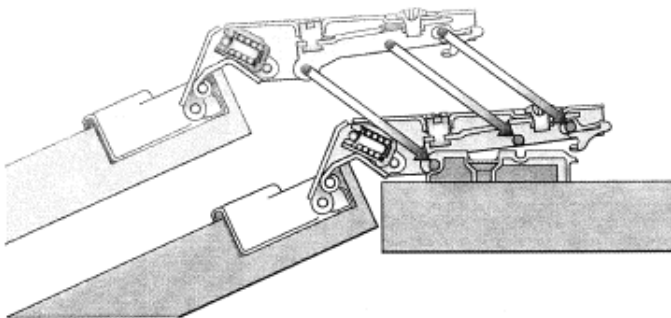

5. FINAL CONNECTIONS

Plug in the cable from the door to the cabinet and secure in place by lightening the screws on the end of the cable. Retest medicine cabinet for functionality. Use provided remote control for TV. The installation is now complete.

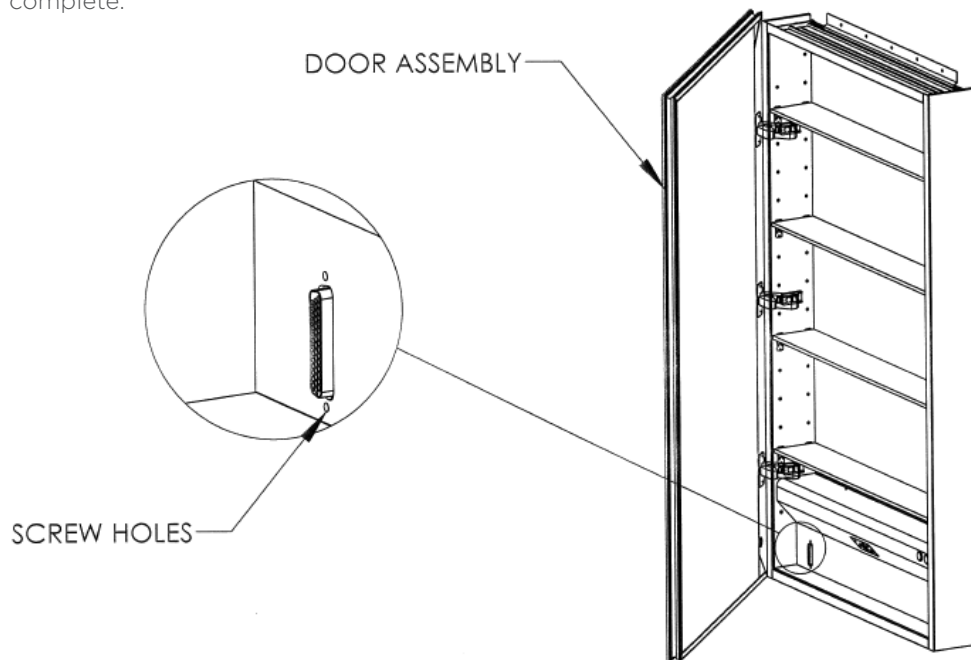

OPERATION

Use provided remote control for TV.
Right side [push button controls LED lights.
Left side push button controls mirror defogger.

