

ios: Installation

Recommended installation using Special Drain: VA code SPE-CAP-PC, BN, PN, PB, ORB

The fitting of the base and installation of the tub will be seen as acceptance of quality.

We strongly recommend that you use a suitably qualified installer. Instructions must be adhered to. We cannot accept responsibility of incorrect installation. Victoria & Albert customer service representatives are not qualified to give advice on DIY installations.


Note We recommend the plastic and foam packaging remains on the tub until all the construction and decoration is completed.
ABS pipe should always be used below floor level.

If you are planning to install the ios close to walls, prior to roughing in check the location for adequate space for the overflow fitting.

- a. Before roughing in the drain and laying the final floor, position the bathtub in the desired location and mark the outline of the center of the drain outlet and the position of the overflow tube directly onto the floor. The bathtub cannot be repositioned once installed and therefore initial positioning and markings are critical.
- b. Remove the bathtub to a clean and safe location
- c. Rough in the drain, ensuring that the overflow pipe is ready for sub floor connection and the bottom of the Special drain sump fitting is securely connected to the shoe tube at the required height using a 1 1/2" fitting. Lay final floor.



- d. Reposition bathtub and mark the outline of the base
- e. Remove the bathtub to a clean and safe location
- f. As per the below, mark the XX and YY coordinates on the floor using a straight edge. Use the dimensions from the diagram to measure and mark locations of the three fixing brackets on the floor.

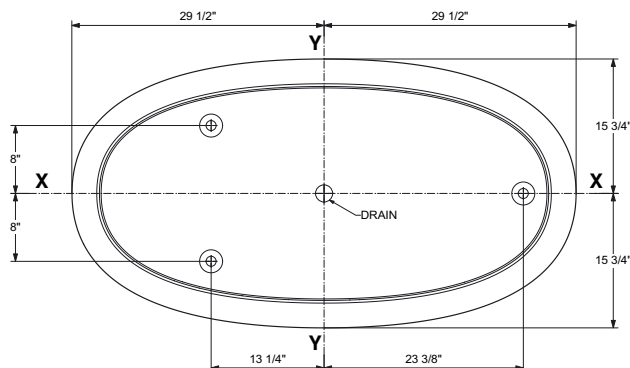

- g. Secure brackets in place using a suitable method for your floor. Ensure that the open slots face in the same direction.
- h. Screw the three feet into the cone shaped blocks under the bathtub and adjust so that the underside of each foot is in-line with the underside of the base.



- i. Position bathtub so that the feet stand next to the open slots of the fixing brackets.
- j. Firmly push the bathtub from the open end to lock the adjustable feet into the brackets.
Note you can release tub from the brackets by giving it a firm push from the opposite end.
- k. Continue with drain installation; connecting the top of the Special drain into the sump of the tub and connecting the overflow down pipe.
- l. For the ultimate finish we recommend applying a white bead of silicone around the base of the bathtub.

Note This tub requires an underfloor connection of the overflow and shoe tube (not supplied). We have purposely omitted these parts from the Special Drain as compression fittings should not be used below floor level.

Questions?
1.800.421.7189