

Fitting Metal Feet

The fitting of the tub feet and installation of the tub will be seen as acceptance of quality.

We strongly recommend that you use a suitably qualified installer. Instructions must be adhered to. We cannot accept responsibility of incorrect installation.

Victoria & Albert customer service representatives are not qualified to give advice on DIY installations.

If the tub has been painted ensure the contact area on the tub where the feet will fit has not been painted over as this could result in poor adhesion and possible failure.

Please note: The silicone tube contains the correct amount of adhesive for the feet supplied. Be careful not to over apply on the first foot.

Silicone should be used before the expiration date printed on the tube. Additional supplies of general purpose clear medium/high modulus silicone are available from all good DIY stores. Do not use adhesives.

Please note: Roxburgh and Shropshire slipper baths have unique front and back feet. Prior to fitting, ensure the color coding is correctly matched.

Attaching the feet to the tub

Adjustable metal feet



- a. With the tub upside down, apply one quarter of the silicone in small thin beads to the contact area of the foot.



- b. Align the foot and press firmly into position, forcing it to bed-down.
- c. Thread the washer onto the bolt and hand tighten. Use a screwdriver for the final 1/4 turn, but no more. Be careful not to over tighten the bolt and strip the thread.
Repeat this process with all four feet.




- d. Turn the tub on its feet. Leave any excess silicone and trim when dry.

Attaching your tub to the floor

For your safety we have included a fixing kit to level and secure the tub to the floor and we recommend it be used in all installations.

The kit consists of four adjustable metal bolts, four ground anchors and four screws.

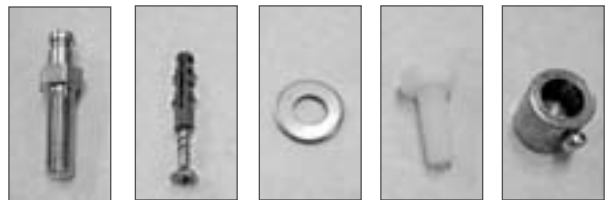

Adjustable Bolt Screw and Rawl Plug Washer Bolt Ground Anchor

- a. Screw the metal adjustable bolt into the base of the foot until just protruding out of its bottom.



- b. Put the tub into position. Adjust bolts to ensure tub is level. Draw round the bottom of the bolt on the floor marking the precise position.
- c. Remove tub and fix all four ground anchors to the deck using a suitable fixing method for your floor type using the screws and rawl plugs provided. Loosen the small screws on the side of the ground anchors.
- d. Put the tub back into position placing the bolts into the ground anchors now fixed to the deck.
- e. Adjust again if necessary and tighten the small screw in the side of the ground anchor to fix the tub to the deck.
- f. Allow 12 hours before moving tub for the first time.

Questions?

1.800.421.7189