


Standard Drain: Installation

Recommended for all bathtubs apart from ios, Napoli, Ravello and Sorrento

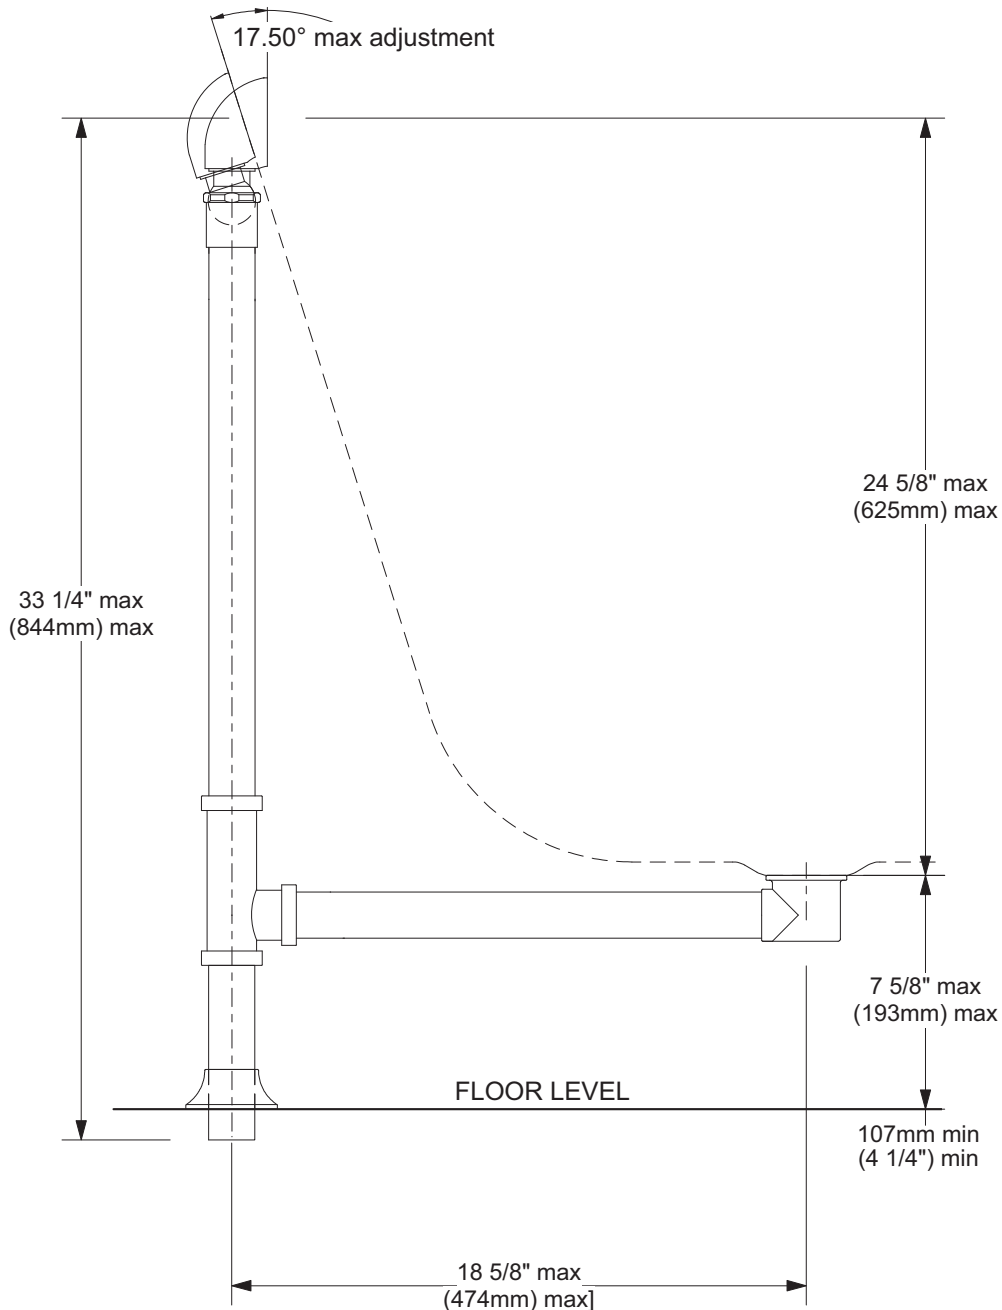

Additional information

It may be necessary to shorten the overflow, shoe and drain tubes to fit your bathtub.

We strongly recommend the use of a suitable qualified plumber to install your bathtub.

Victoria & Albert customer service representatives are not qualified to give advice on DIY installations.

If floor to sump height of less than 4 1/4" is required, we recommend alternative SPE-CAP-xx drain.