

# Assembly Instructions

## HurryUp!™ Nesting Table Wire Management Accessories

March 2004

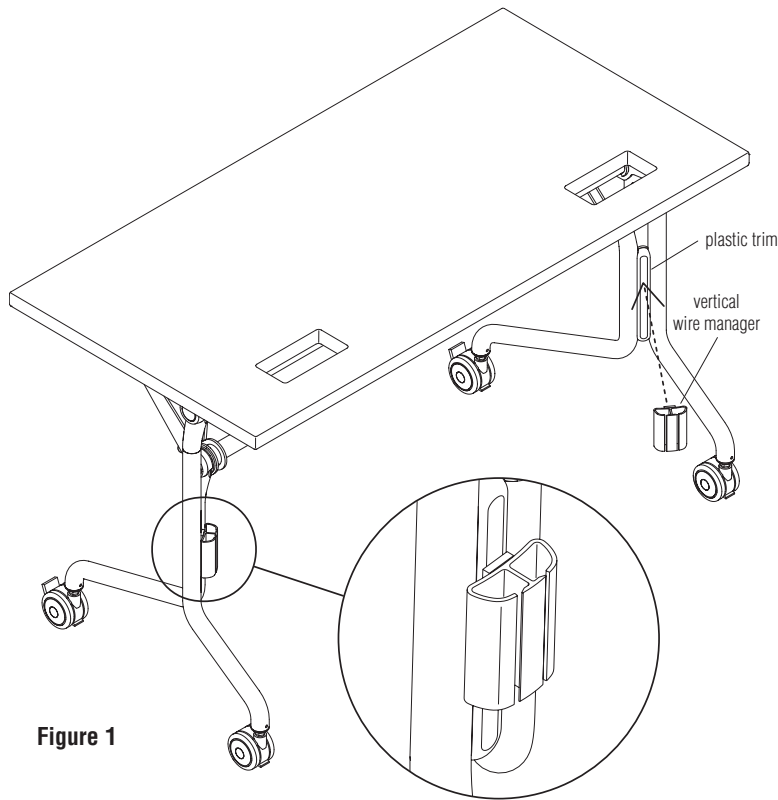


Figure 1


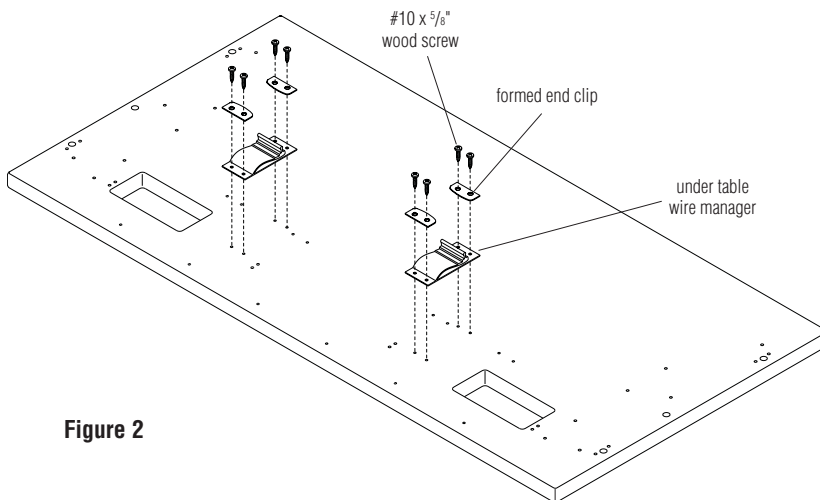


Figure 2



### Vertical (Leg) Wire Manager

1. Remove the protective paper backing to expose the adhesive surface of the vertical wire manager.
2. Locate the plastic trim at the rear of the table leg. Position the wire manager in the center of the leg trim and apply firm pressure to allow adhesive to set. Repeat for other leg if desired (Figure 1).
3. Allow 24 hours for adhesive to cure before routing wires and cables through a wire manager.

### Under Table Wire Manager

**Note:** On 24" wide tables, installation of the under table wire manager must be performed prior to installing the table frame. On all other tables, the steps below may be performed after frame installation.

1. Carefully place table top face down on a soft protective surface. Two people may be required to handle the worksurface (Figure 2).
2. Locate the hole pattern on the underside of the worksurface that matches the mounting hole spacing of the wire manager exactly. Remove the peel-off protective paper backing and place the wire manager onto the worksurface, aligning the mounting holes to the pre-drilled holes in the worksurface. As illustrated, secure the under table wire manager to the worksurface using four #10 x 5/8" wood screws through the two formed end clips (Figure 2).

