

# Constellation Chandelier

**HS513\_ 1.1**
**LBL**
**Fusion Jack™**
**GENERAL PRODUCT INFORMATION:**


This product is suitable only for dry locations and approved for use at any height above the finished floor.


This product can be dimmed with a low-voltage electronic dimmer.

Read through all the instructions before attempting installation.


**CAUTION - RISK OF FIRE**

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°C supply conductors.

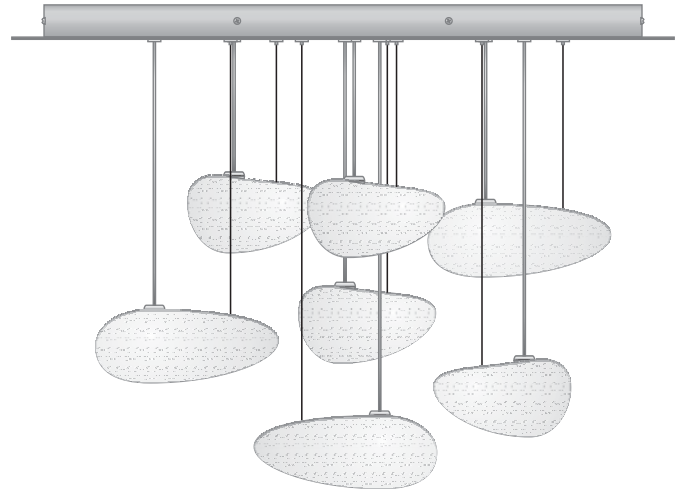


## Mount the Backplate

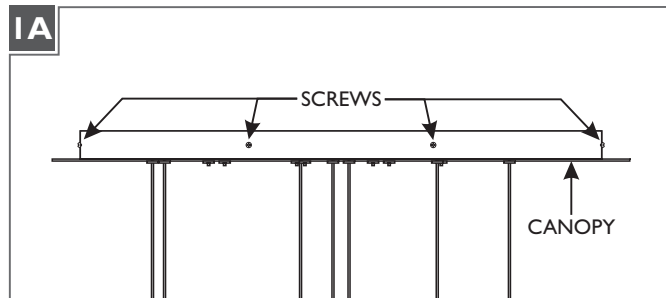


- 1** Remove all six screws from the sides of the canopy.

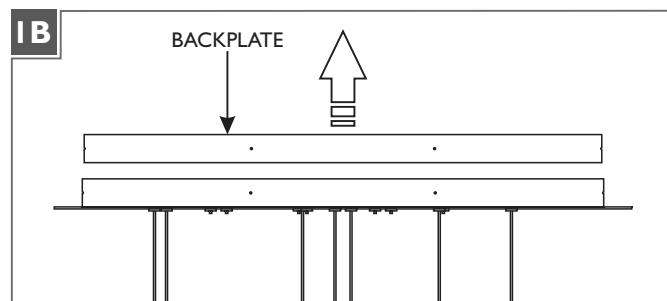


- 2** Lift the backplate out of the canopy.

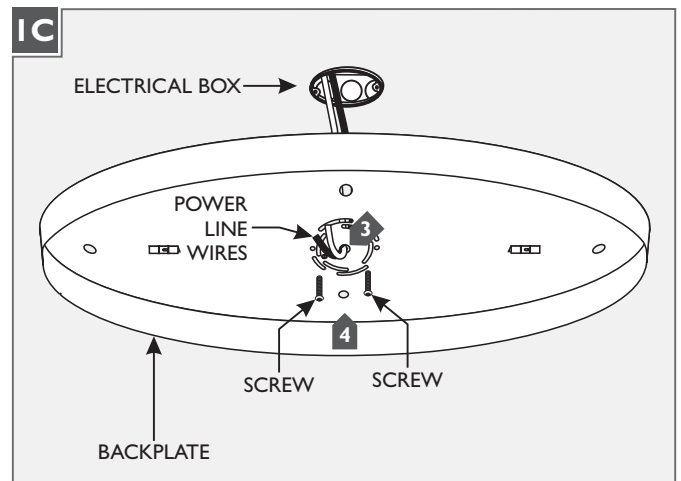

- 3** Feed the power line wires through the center hole of the backplate.
- 4** Mount the backplate to the electrical box with the two #8-32 button-head screws provided.

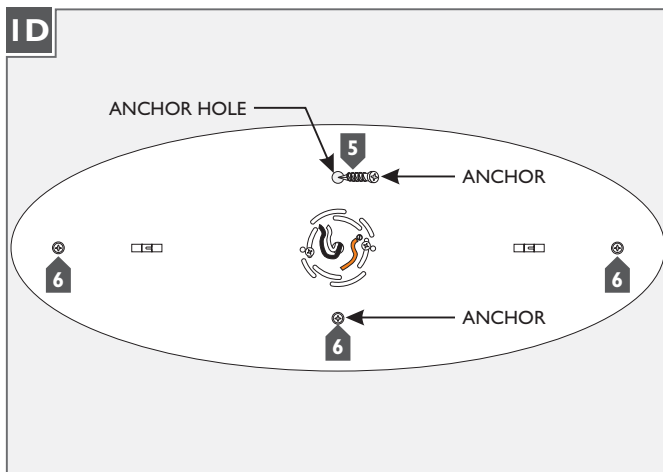


- 5** Line up an anchor tip with one of the marks on the ceiling, and push the anchor into the ceiling up to the threads.
- 6** Screw the anchor in the rest of the way with a screwdriver.
- 7** Repeat steps 6-7 for the other three anchors.

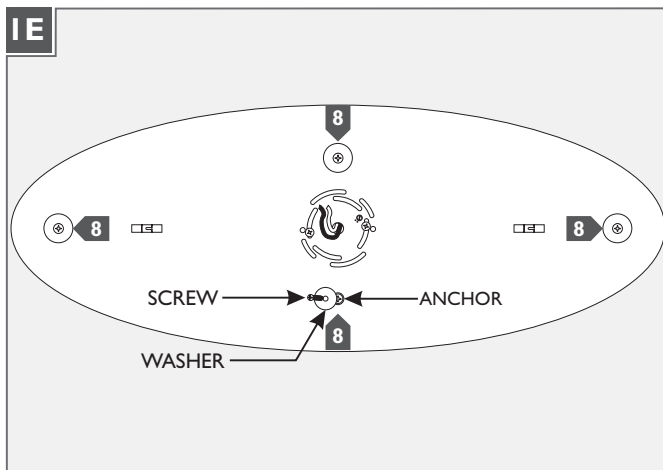


- 8** Secure the backplate to the anchors with a screw and washer on each of the four anchors.


## Attach the Canopy

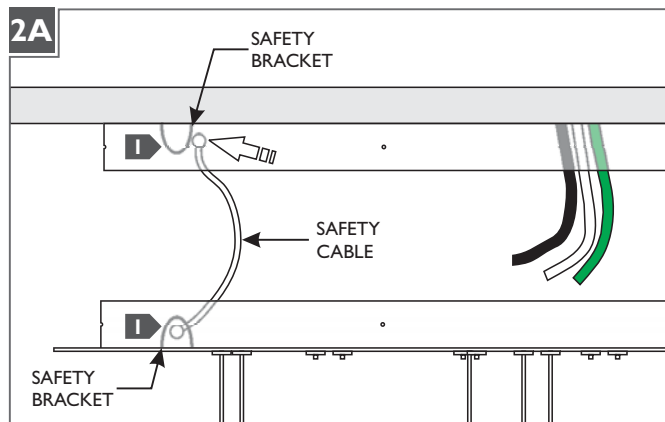

- 1** Hook a safety cable through the safety brackets on each end of the canopy and backplate.

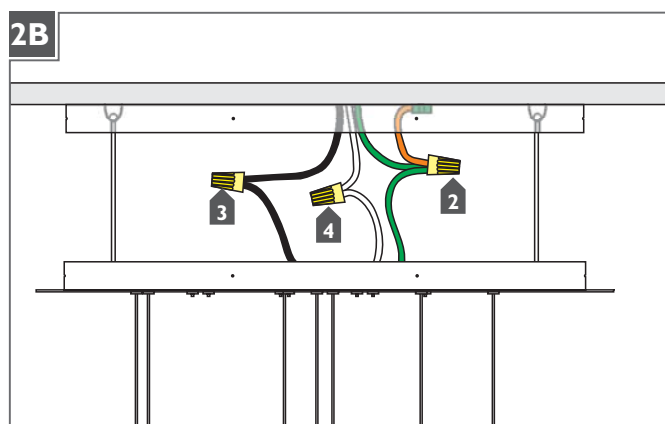


- 2** Connect the green canopy wire and bare copper backplate wire to a suitable ground according to local electrical codes.
- 3** Connect the black canopy wire to the hot power line wire with a wire nut.
- 4** Connect the white canopy wire to the neutral power line wire with a wire nut.

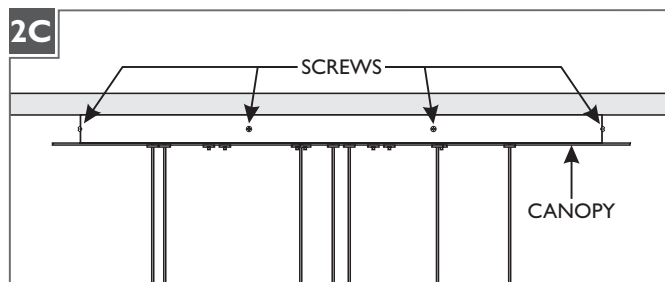

- 5** Place all wires and safety cables inside the canopy.
- 6** Slide the canopy onto the backplate.
- 7** Replace and tighten the six #8-32 screws to secure the canopy.

## Install the Lamps and Glass

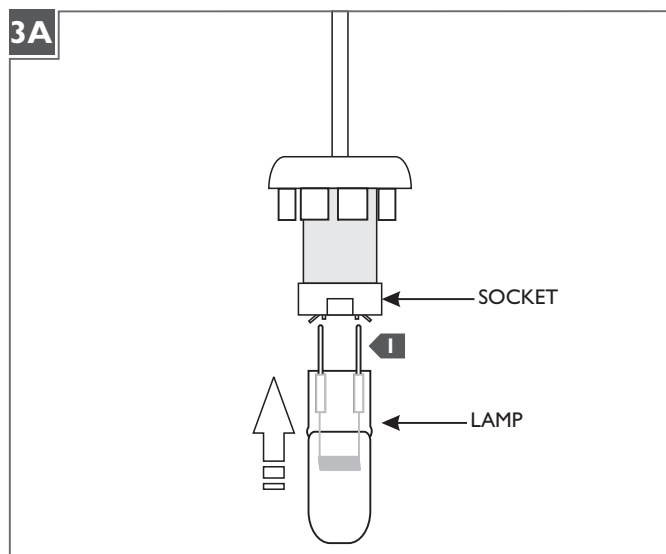


**NOTE:** Use only your fingers and a soft cloth to install the lamp.


Use **MAX 35 Watt** Frosted Bi-pin Xenon Lamp in each socket.



- 1** Push the lamp pins completely into the socket holes. Repeat for each socket.

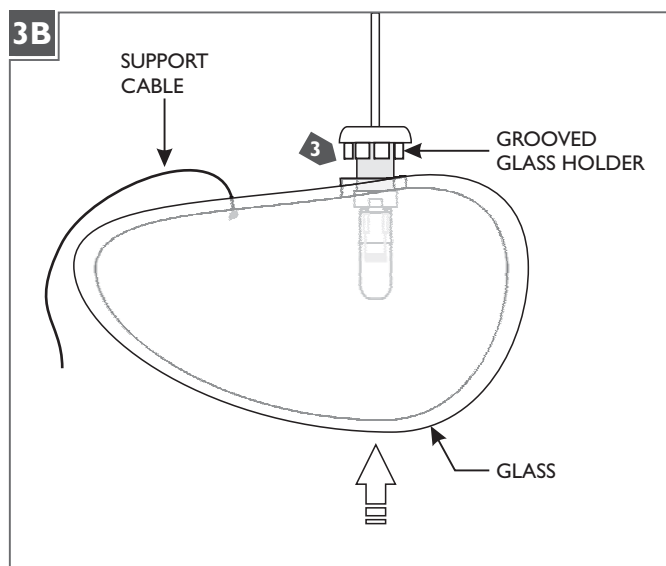


- 2** Refer to the diagrams on the back page to determine the location of the glass piece. There are two different sizes of glass: large and small.
- 3** Push the glass opening completely onto the grooved glass holder. The glass should fit snugly on the holder. If holder is too big for the opening or the glass fits loosely on the holder, follow step 4 to adjust the holder.

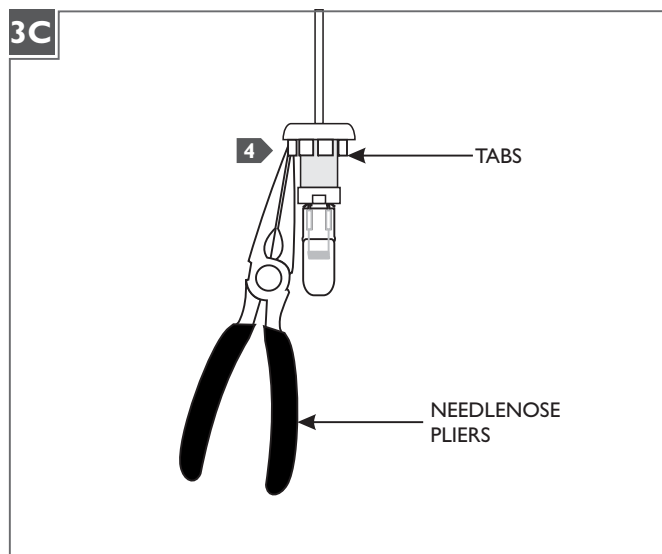


- 4** To adjust the glass holder (if necessary), bend the tabs in or out slightly with needle-nose pliers.

**NOTE:** Bend the tabs carefully. Excessive bending may break the tabs.

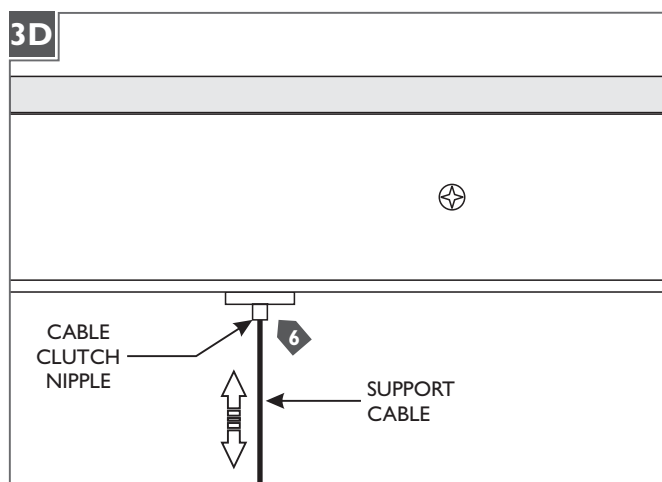


- 5** Push in the cable clutch nipple and feed in the support cable from the glass.
- 6** Adjust the support cable until the glass is level. Feed the cable into the cable clutch to raise the glass. Push in on the cable clutch nipple to release the cable and lower the glass.
- 7** Repeat steps 1 through 4 for all the other glass pieces.

## BOTTOM VIEW

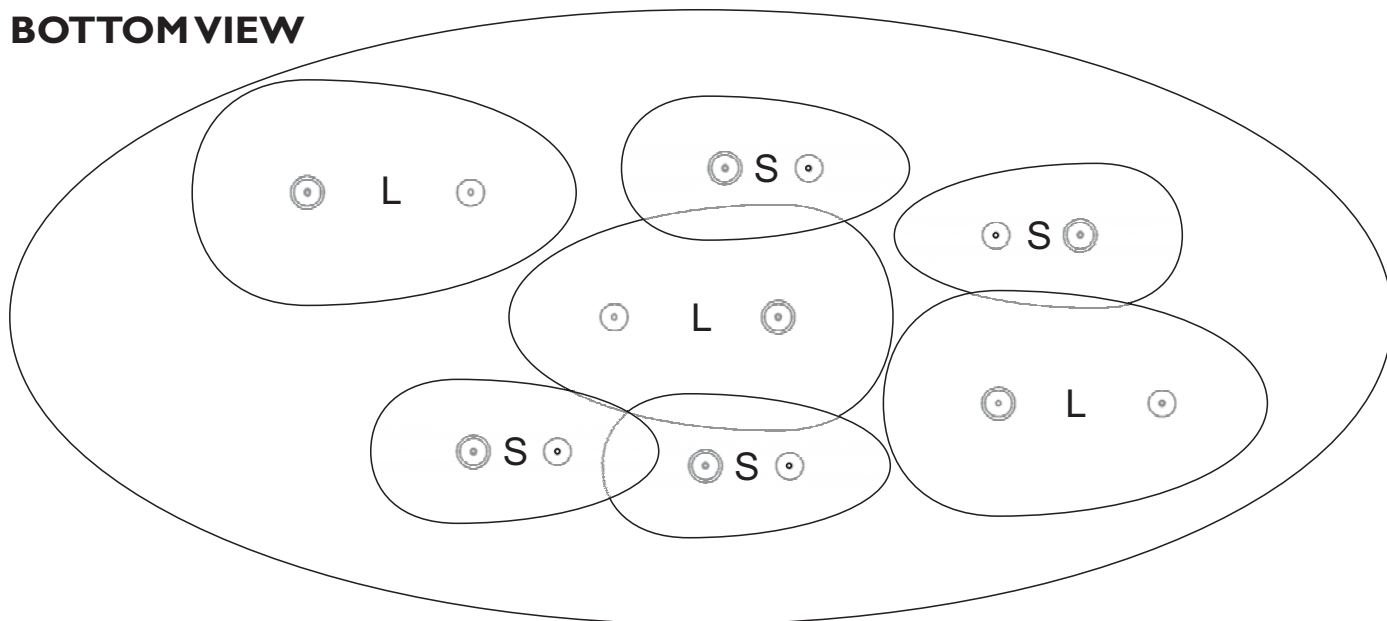

## SIDE VIEW

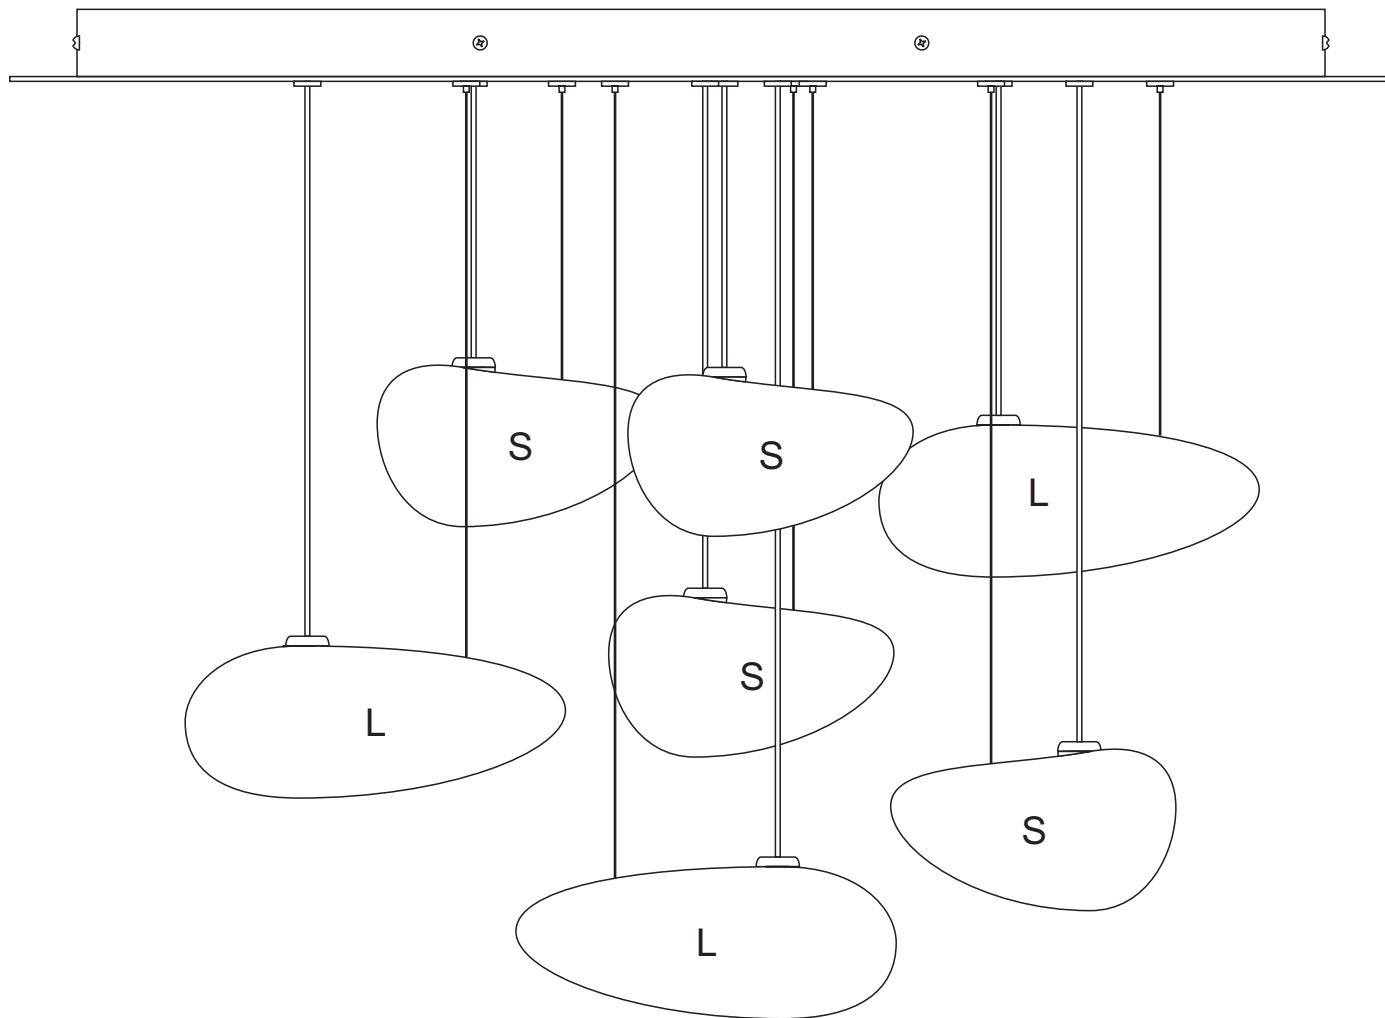

**SAVE THESE INSTRUCTIONS!**

**LBL**

7400 Linder Ave, Skokie, IL 60077

800.323.3226 - 847.626.6300

[www.lblighting.com](http://www.lblighting.com)

© 2014 LBL Lighting. All rights reserved. The "LBL Lighting" graphic is a registered trademark of LBL Lighting. LBL Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company