

INSTRUCTION SHEET



ROOK 475 RIGID STEM MOUNT, INSTALLATION


689-0552

PAGE 1 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

1 UNFASTEN CANOPY

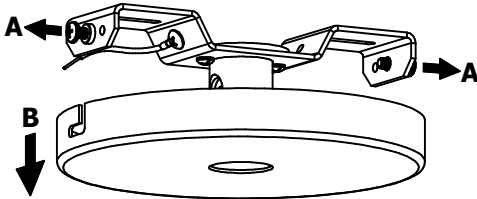


LOOSEN BUT DON'T REMOVE (2x) CANOPY SCREWS, THEN TWIST AND REMOVE CANOPY

2 MOUNT CROSSBAR

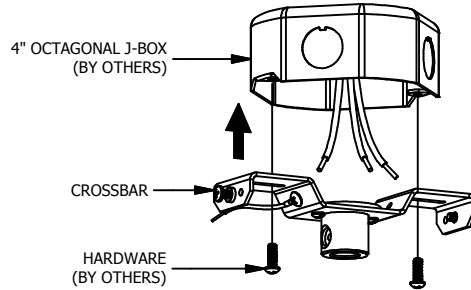


MOUNT CROSSBAR TO 4" OCTAGONAL J-BOX

3 ATTACH STEM & CYLINDER

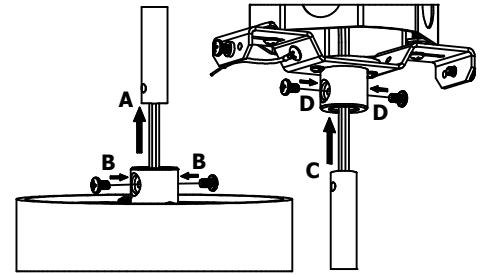


FEED WIRES THROUGH STEM, ALIGN HOLES, THEN FASTEN CYLINDER TO STEM WITH (2x) SCREWS. WITH CANOPY ON STEM, FEED WIRES THROUGH CROSSBAR, ALIGN HOLES, THEN FASTEN STEM TO CROSSBAR WITH (2x) SCREWS


4 WIRE ACCORDING TO LOCAL AND NATIONAL CODE

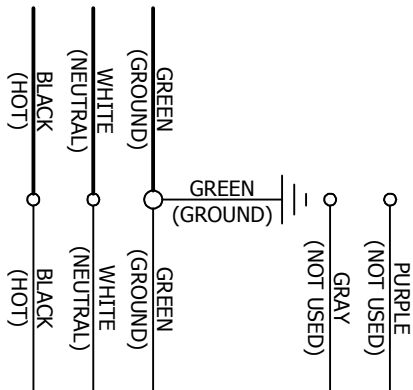

ELV/ TRIAC

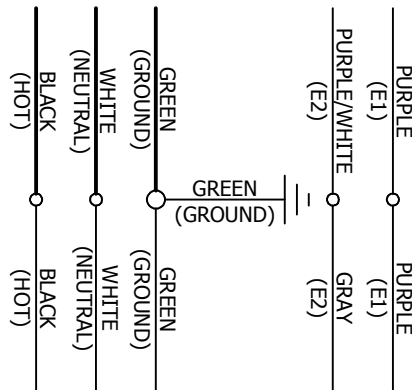


HILUME-ECO

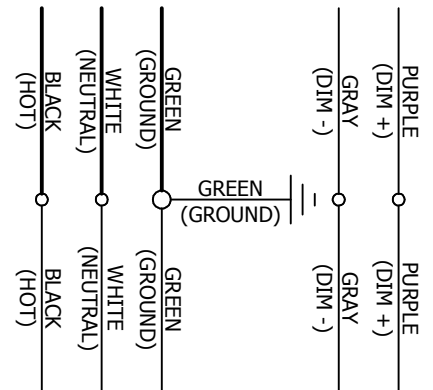


(0-10)V

5 FASTEN CANOPY

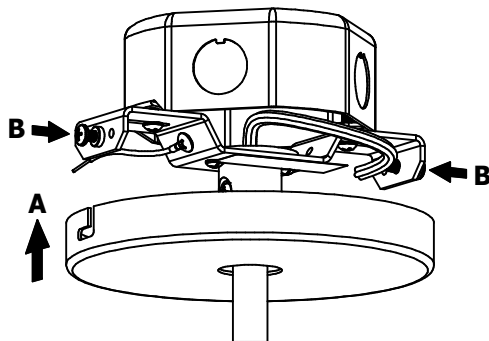

RAISE CANOPY AND TWIST INTO PLACE, THEN TIGHTEN (2x) CANOPY SCREWS

HEIGHT ADJUSTMENT

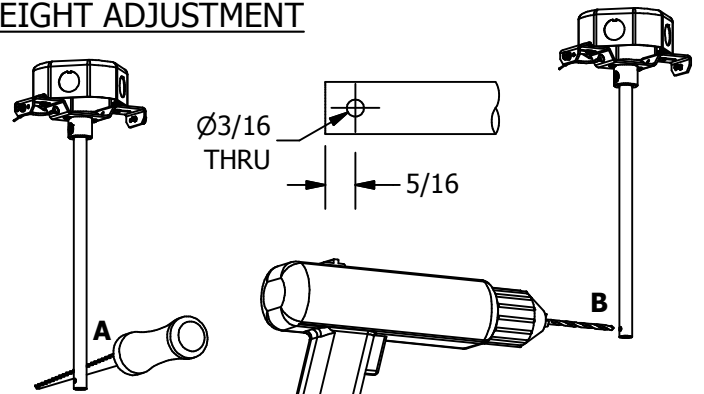

REVERSE STEPS 5, 4, & 3. CUT STEM TO DESIRED LENGTH AND DRILL A Ø3/16 HOLE THROUGH STEM 5/16" FROM BOTTOM. REPEAT STEPS 3-5

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com

INSTRUCTION SHEET



ROOK 475 RIGID STEM MOUNT, MAINTENANCE


689-0552

PAGE 2 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

1 LOOSEN SCREWS

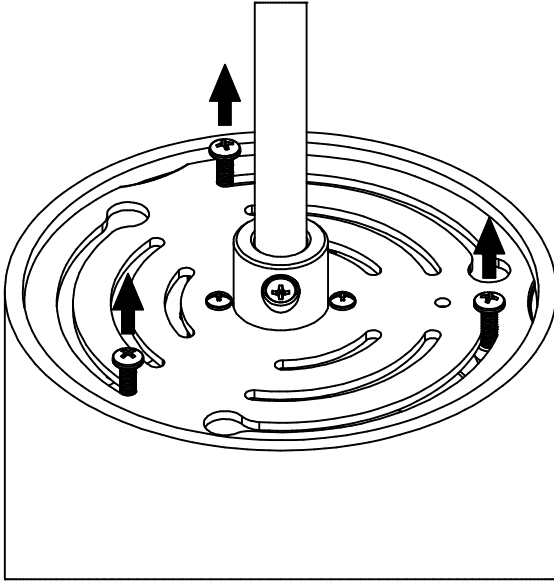


LOOSEN BUT DON'T REMOVE (3x) SCREWS ON TOP OF CYLINDER BY NO MORE THAN 1/2". BOTTOM REFLECTOR FLANGE WILL BE ACCESSIBLE FROM BOTTOM OF CYLINDER

2 TWIST

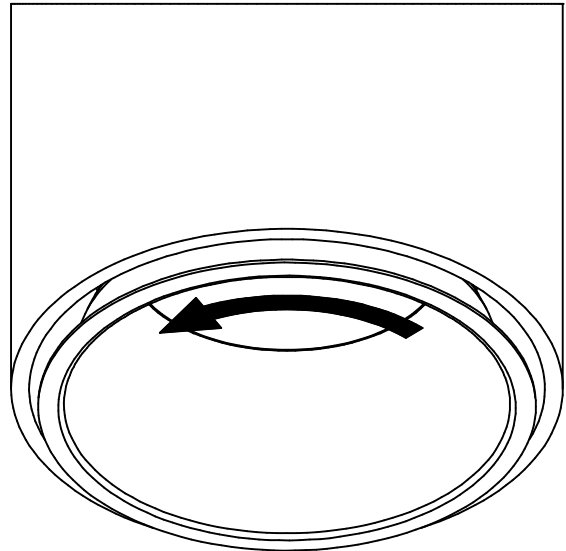


TWIST BOTTOM REFLECTOR 90° COUNTER-CLOCKWISE. ALTERNATIVELY, TWIST TOP SCREWS 90° CLOCKWISE

3 REMOVE FROM CYLINDER

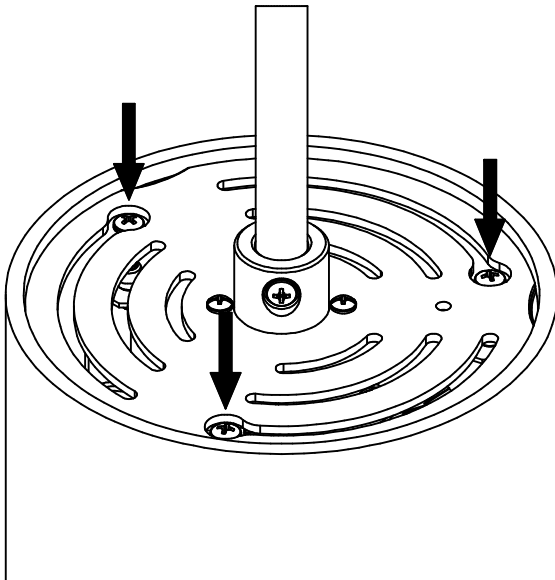

ALIGN SCREW HEADS WITH SLOT KEYHOLES AND, WHILE SUPPORTING BOTTOM REFLECTOR, REMOVE REFLECTOR ASSEMBLY FROM CYLINDER

4 UNDO ELECTRICAL CONNECTION

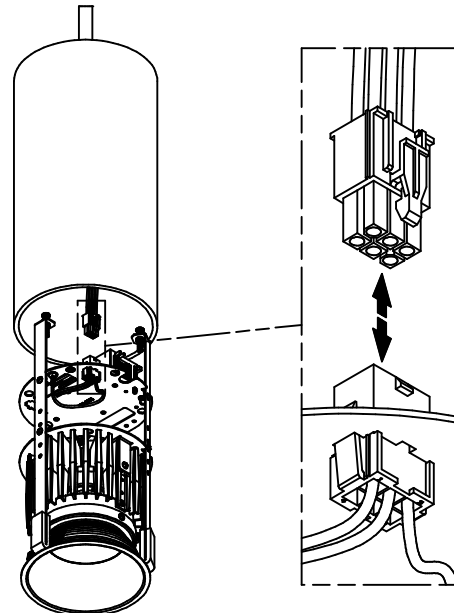

WHILE SUPPORTING REFLECTOR ASSEMBLY, UNDO ELECTRICAL CONNECTION AS SHOWN

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com