ENT INT SA WM SERIES WALL MOUNTING BRACKET INSTRUCTIONS

WARNING: BEFORE PROCEEDING, READ ALL INSTRUCTIONS CAREFULLY TO INSURE PROPER AND SAFE INSTALLATION.

WARNING: RISK OF FIRE OR ELECTRICAL SHOCK. DISCONNECT POWER BEFORE INSTALLING OR SERVICING.
WARNING: RISK OF ELECTRICAL SHOCK. HIGH TEMPERATURES INSIDE LUMINAIRE. MAKE CERTAIN LINE VOLTAGE

CORRESPONDS WITH BALLAST'S PRIMARY VOLTAGE. (SEE BALLAST LABEL)

WARNING: ALL WIRING TO BE PERFORMED PER NATIONAL ELECTRICAL CODE AND LOCAL CODE BY A QUALIFIED ELECTRICIAN.

IMPORTANT: WHEN LAMPING, ALWAYS WEAR EYE PROTECTION.

NOTE: IF LAMP IS INSTALLED DIRTY, OPERATING HOURS AND PERFORMANCE WILL SIGNIFICANTLY DECREASE.

NOTE: KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.


WARNING: VERIFY THE EXISTING INPUT VOLTAGE AND CHOOSE MATCHING VOLTAGE ON MULTI-TAP BALLAST BEFORE WIRING.
NOTE: MAKE CERTAIN ALL UNUSED LEADS ARE CAPPED INDIVIDUALLY! FAILURE TO DO SO MAY SHORT OUT LUMINAIRE

AND VOID WARRANTY!

NOTE: FIELD MOUNTING CONNECTIONS ARE TO BE MADE IN SUCH A MANNER SO AS TO EXCLUDE WATER FROM WIRE WAY.

IMPORTANT: FOR USE WITH LSI'S MODEL ENM/S INM/S SA ONLY!

ASSEMBLY TOOLS REQUIRED: 3/4" OPEN END WRENCH, 3/16" HEX KEY, 7/32" HEX KEY

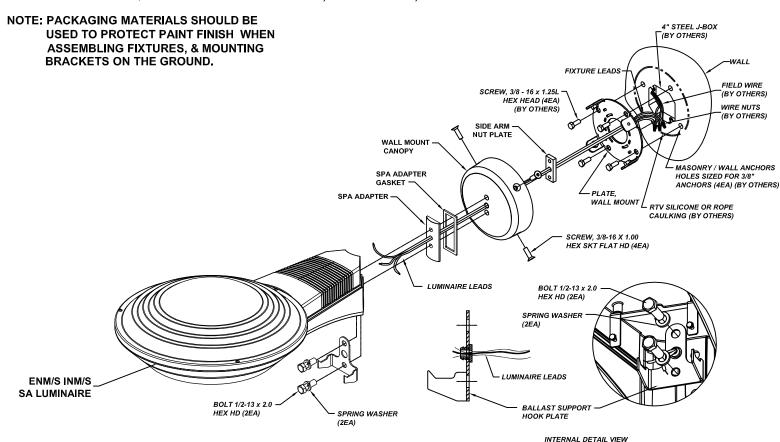



MAKE CERTAIN FIXTURE DOES NOT TWIST WHEN TIGHTENING BOLTS. FAILURE TO KEEP STRAIGHT WILL RESULT IN LUMINAIRE HANGING OUT OF SQUARE.

- 1. REFER TO LUMINAIRE ASSEMBLY INSTRUCTIONS FOR PROPER FIELD INSTALLATION OF FIXTURE. FEED FIXTURE LEADS AS SHOWN THRU ADAPTER, GASKET, & WM CANOPY. INSTALL 2EA 1/2-13 X 2.0 BOLTS, SCREW INTO NUTPLATE. TIGHTEN BOLTS TO 35-40 FT/LBS TORQUE.
- 2. MOUNT WALL MOUNT PLATE OVER 4" STEEL BOX AS SHOWN WITH ANCHORS. WIRE LUMINAIRE TO ELECTRICAL SERVICE.
- 3. MOUNT LUMINAIRE/ SA WM BRACKET ASSY TO WALL MOUNT PLATE WITH 4EA 3/8-16 HEX SKT CAP SCREWS, TIGHTEN SCREWS TO 10-12 FT/LBS TORQUE.
- 4. USE RTV SILICONE OR ROPE CAULKING TO SEAL WALL MOUNT HOUSING TO WALL TO AVOID WATER ENTRY INTO STRUCTURE.



INSTALLATION QUESTIONS? CALL LSI FIELD SERVICE 800-436-7800 EXT 3300 FAX 513-984-9723