

INSTALLATION AND ASSEMBLY INSTRUCTIONS
Sterling XSB Series PLS POLY VANDAL SHIELD



WARNING: Failure to follow instructions could result in damage to product and void warranties!

WARNING: Risk of fire or electrical shock. Disconnect power before installing or servicing.


WARNING: Before proceeding, read all instructions carefully to ensure proper and safe installation.

IMPORTANT: This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Tools required: Drill & 11/64” drill bit, and 5/16” & 3/8” nut driver.

NOTE: This Shield attaches to the center cover panel. Once the Shield is installed, the cover may be removed and reinstalled to access the driver compartment without removing this Shield.

1. Loosen 4 screws securing center cover. **Note:** screws are captive and should be retained in cover.

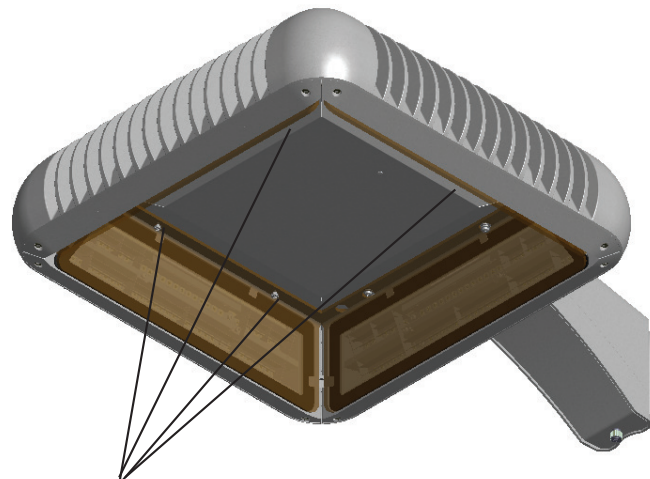


Loosen (4) screws;
allow cover to drop



2. Remove nut securing grounding tether with 3/8" nut driver. Place Cover on the ground, oriented FACE-UP so that end edges are touching the ground (center bulge facing UP).

XSB PLS, cont'd.

- Place Shield over Cover, so that the (4) LARGE HOLES align with the SCREWS on the cover. Make sure edges of Shield and Cover are equally aligned on all four sides.
NOTE: An additional hole is provided on (2) sides of Shield for optional antenna!
- With a marker, draw marks on Cover thru SMALL HOLES in Shield. Remove Shield, then drill all (4) holes using drill and 11/64” diameter drill bit.
- Remove protective film from both sides of Shield.
- Reposition Shield on Cover. Secure with (4) screws (supplied) using 5/16" nut driver.

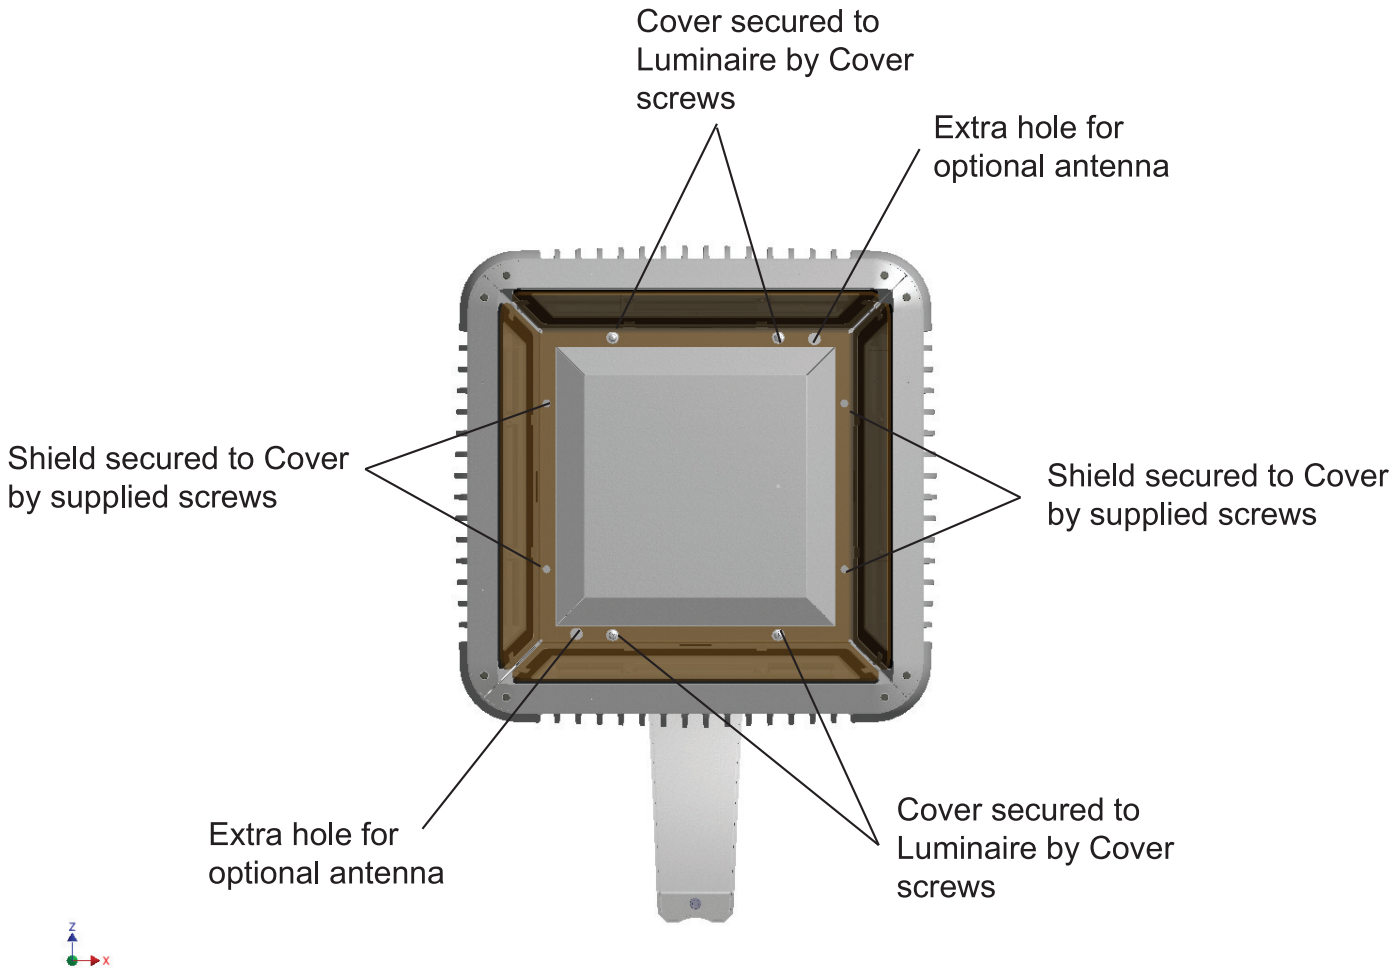

7. Holding Shield/Cover assembly up to luminaire, reinstall ground tether and nut. Reinstall Shield/Cover to Luminaire.



Installation Questions?
Call LSI Field Service Department at:
1-800-436-7800 Ext. 3300
Fax: 1-877-861-1368