

LED LIFESTYLE XDLM XDLS SERIES

POLE TOP MOUNTING BRACKET INSTRUCTIONS

XDLM / XDLS LUMINAIRE INSTALLATION ON SA DIRECT BOLT-ON BRACKET

ASSEMBLY TOOLS REQUIRED: 3/4" OPEN END WRENCH, FISH TAPE, LEVEL

NOTE: PACKAGING MATERIALS SHOULD BE USED TO PROTECT PAINT FINISH WHEN ASSEMBLING FIXTURE, MOUNTING BRACKET, & POLE ON PARKING LOT SURFACE OR GROUND.

1. REMOVE LUMINAIRE FROM MASTER PACKING CARTON. SCREW 1/2-13 STUDS (2X) INTO THE CROWN UNTIL STUD THREADS ARE FULLY ENGAGED IN CROWN (MIN. .500" THREAD ENGAGEMENT) . SLIDE CROWN ADAPTER CASTING, ARM EXTRUSION, POLE ADAPTER CASTING, ONTO STUDS.
2. CAREFULLY FEED LUMINAIRE LEADS THRU ADAPTER, ARM EXTRUSION , ADAPTER, AND POLE. A FISH TAPE MAY BE USED TO AID FEEDING LEADS. INSTALL LOCKWASHERS (2X), & HEX NUTS (2X) AS SHOWN IN FIGURE 1. MAKE CERTAIN ARM IS SQUARE WHEN TIGHTENING 1/2-13 HEX NUTS. TIGHTEN HEX NUTS TO 35-40 FT/LBS TORQUE.

⚠ FASTENERS SHOWN FOR SA ARM MOUNTING MUST BE INSTALLED AS SHOWN IN FIGURE 1 BELOW!

⚠ MAKE CERTAIN ARM DOES NOT TWIST WHEN TIGHTENING HEX NUTS. FAILURE TO KEEP CROWN STRAIGHT WILL RESULT IN LUMINAIRE HANGING OUT OF SQUARE WITH POLE.

3. REFER TO LUMINAIRE INSTALLATION INSTRUCTIONS INCLUDED IN THE LUMINAIRE SHIPPING CARTON. CONNECT FIXTURE SUPPLY LEADS TO SITE POWER SUPPLY.
4. INSTALL POLE TOP CAP AS SHOWN.

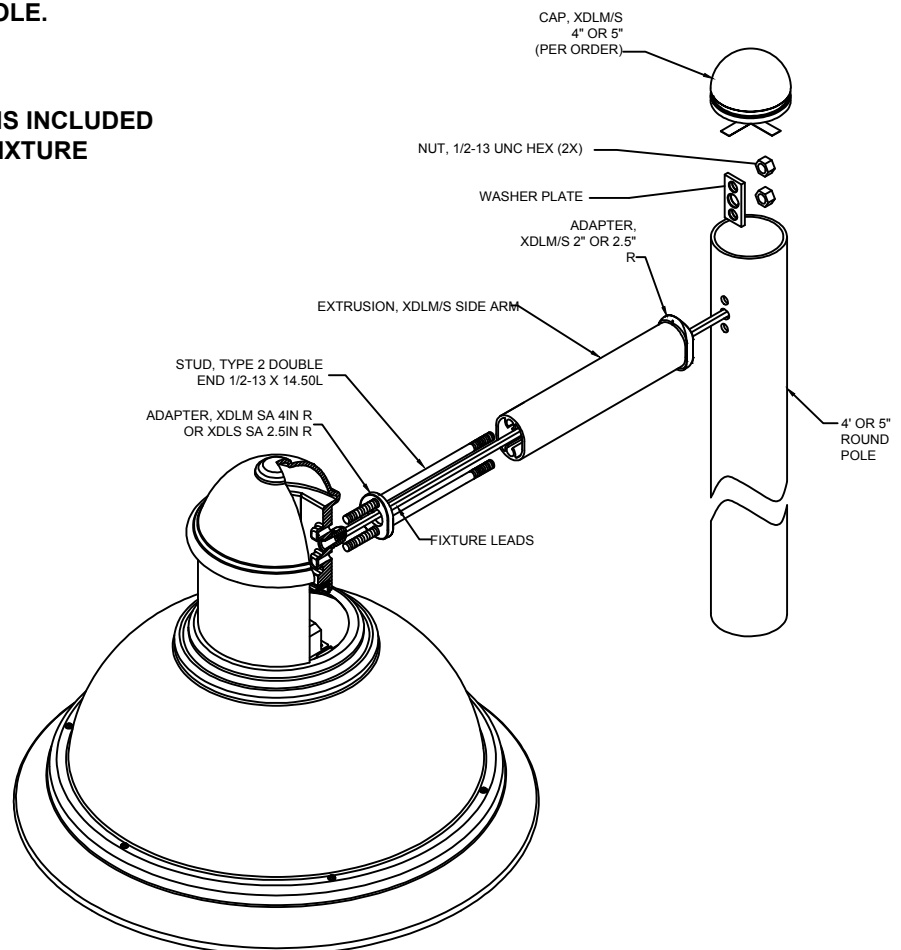


FIGURE 1



A Company with a *Smart Vision*

INSTALLATION QUESTIONS?
CALL LSI FIELD SERVICE
800-436-7800 EXT 3300
FAX 513-984-9723

LED LIFESTYLE XDLM XDLS SERIES

POLE TOP MOUNTING BRACKET INSTRUCTIONS


XDLM / XDLS LUMINAIRE INSTALLATION ON CH CLASSIC HOOK MOUNTING BRACKET

ASSEMBLY TOOLS REQUIRED: 3/16" HEX KEY WRENCH, FISH TAPE, LEVEL

NOTE: PACKAGING MATERIALS SHOULD BE USED TO PROTECT PAINT FINISH WHEN ASSEMBLING FIXTURE, MOUNTING BRACKET, & POLE ON PARKING LOT SURFACE OR GROUND.

1. REMOVE LUMINAIRE FROM MASTER PACKING CARTON. CAREFULLY FEED LUMINAIRE LEADS THRU CH BRACKET ARM & DOWN THRU SLIPFITTER. USE A FISH TAPE TO AID IN PULLING LEADS. INSERT CROWN TENON INTO CH BRACKET ARM & ROTATE FIXTURE TO ALIGN STREET SIDE ARROW TOWARDS DESIRED BEAM DIRECTION. INSTALL 5/16-18 SCREWS (4X) INTO CROWN TENON USING 3/16" HEX KEY. TIGHTEN SCREWS TO 8-10 FT/LBS TORQUE.
2. REFER TO LUMINAIRE INSTALLATION INSTRUCTIONS INCLUDED IN THE LUMINAIRE SHIPPING CARTON.
3. SLIDE FIXTURE & CH BRACKET ASSEMBLY ONTO 4" POLE OR TENON & ROTATE TO DESIRED AIMING DIRECTION THEN TIGHTEN 3/8-16 SET SCREWS (6X) WITH 3/16" HEX KEY TO 10-12 FT/LBS TORQUE.

⚠ MAKE CERTAIN SLIPFITTER SET SCREWS ARE TIGHTENED EVENLY. FAILURE TO KEEP CROWN STRAIGHT WILL RESULT IN LUMINAIRE HANGING OUT OF SQUARE WITH POLE.

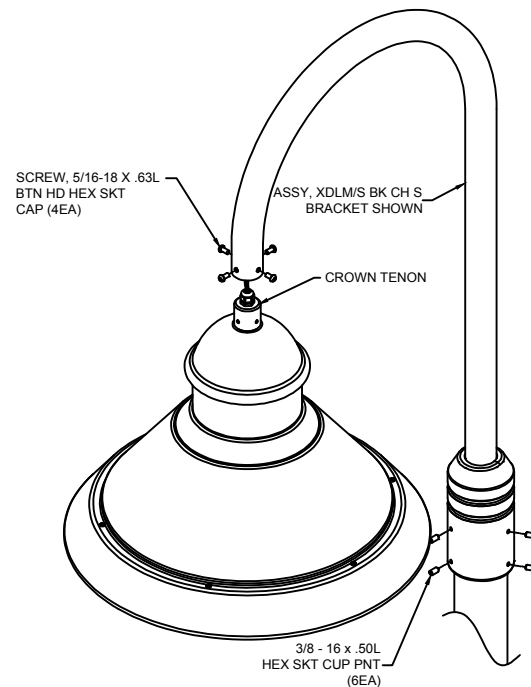

A Company with a *Smart Vision*