

INSTALLATION AND ASSEMBLY INSTRUCTIONS
XSPS SERIES



WARNING: Failure to follow instructions could result in damage to product and void warranties!


WARNING: Risk of fire or electrical shock. Disconnect power before installing or servicing.

WARNING: Wiring to be performed by Qualified, Licensed Electrician to NEC and local code!

Suggested Tools: #2 screwdriver, saw,

1. Remove luminaire from carton. Place luminaire, lens facing UP, on protected surface.
 2. Remove (2) 1/4-20 screws from lens frame. Remove luminaire from mounting frame.
- Figure 1**
-
- (2) 1/4-20 screws
- Luminaire
- Mounting Frame
3. Cut an 11" square hole in ceiling. **NOTE: Make sure nothing is above where luminaire will mount!**
 4. Secure frame portion to ceiling as shown below. Use suitable mounting hardware (not supplied).
NOTE: Holes in mounting frame are sized for #10 screws.

Figure 2

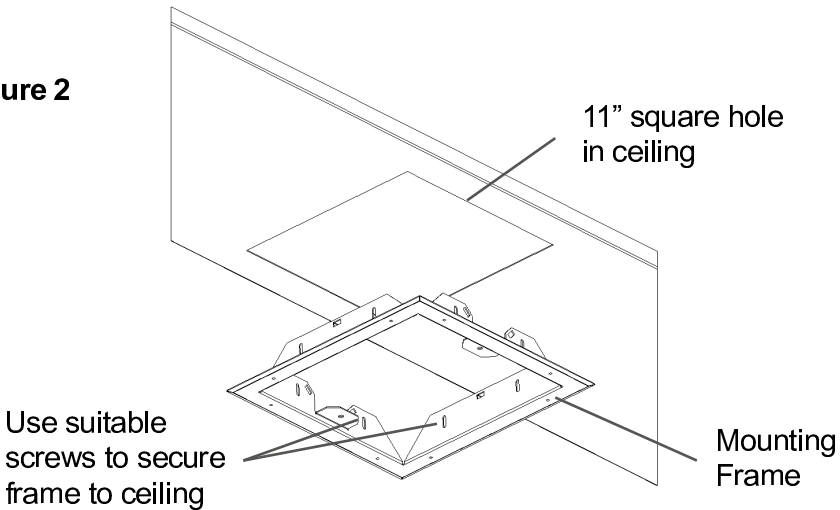

XSPS, cont'd.


5. Temporarily hang luminaire from frame by engaging lanyard to frame.

IMPORTANT! The following instructions are for qualified electricians **ONLY!**

IMPORTANT! Match incoming supply voltage to luminaire voltage rating!


6. Remove driver box cover by removing both screws.
7. Driver Box is equipped with a hole and knockouts. Run conduit and supply wiring through hole.
IMPORTANT! Luminaire is voltage-specific! Make sure incoming power matches luminaire marking!
8. Follow wiring diagram below to make electrical connections to luminaire wiring.
9. Install driver box cover and secure in place with both screws. Ensure all wiring is placed inside box, and is not pinched beneath cover.

Figure 3

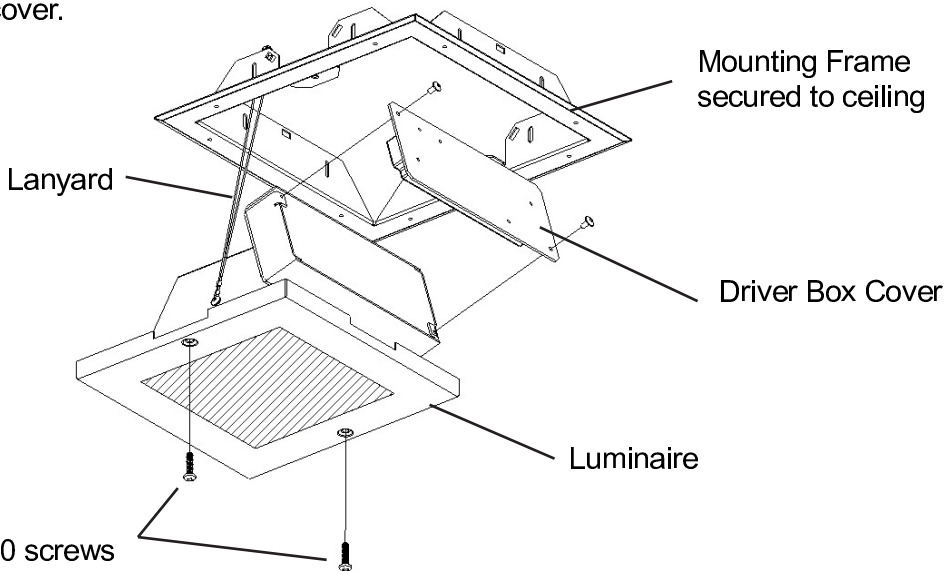

10. Lift Luminaire up to frame. **DO NOT SUPPORT LUMINAIRE WITH LENS SURFACE!** Support luminaire along lens frame.
11. Secure Luminaire to mounting frame with (2) 1/4-20 screws.

Figure 4

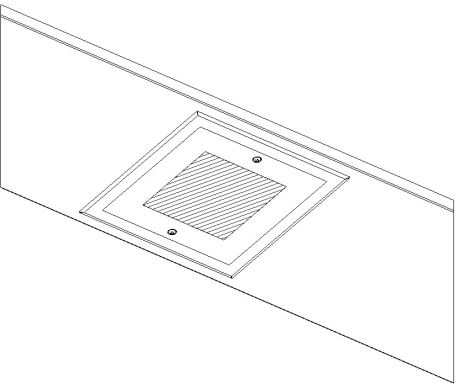

Installation Questions?
Call LSI Field Service Department at:
1-800-436-7800 Ext. 3300
Fax: 1-877-861-1368

