## PMX LED INSTALLATION INSTRUCTIONS

(USE FOR CHAIN, GRIPPLE, AIRCRAFT CABLE, HUB AND MONOPOINT J-BOX ASSEMBLIES)

WARNING: Before proceeding, read all instructions carefully to insure proper and safe installation.


WARNING: Risk of fire or electrical shock. Disconnect power before installing or servicing.

WARNING: Risk of electrical shock. High temperatures inside luminaire. Make certain line voltage corresponds with


ballast's primary voltage. (See ballast label).

WARNING: All wiring to be performed per National Electrical Code and local code by a qualified electrician.


IMPORTANT: Not every unit is identical! Placement of proper luminaire section (by length, emergency option, etc.) within each row is important. Refer to layout drawing to verify row identification, product location, and feed points!

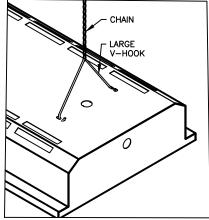


CHAIN ASSEMBLY ONLY. MOUNT THE FIXTURE BY USING THE LARGE V-HOOK AND CHAIN KIT. ADJUST HEIGHT.

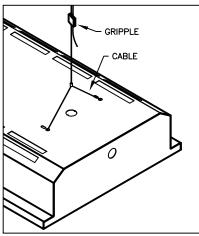


GRIPPLE ASSEMBLY ONLY. MOUNT THE FIXTURE BY FEEDING CABLE THRU GRIPPLE. ADJUST HEIGHT.

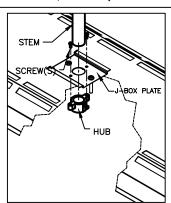


**HUB ASSEMBLY ONLY.** REMOVE REFLECTOR & DRIVER COVER TO MOUNT HUB TO INSIDE OF FIXTURE AND ATTACH TO SINGLE 3/4" IP STEM (ORDERED SEPARATELY). SECURE ALL SCREWS.

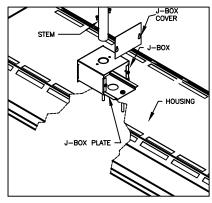

MONOPOINT J-BOX ASSEMBLY ONLY REMOVE J-BOX COVER AND MOUNT PLATE TO FIXTURE. THEN ATTACH SINGLE 3/4" IP STEM (ORDERED SEPARATELY). SLIDE HOUSING INTO PLACE INSIDE J-BOX AND MAKE WIRE CONNECTIONS. REPLACE J-BOX COVFR.

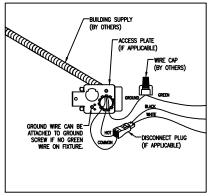

PULL BUILDING SUPPLY LEADS INTO HOUSING THROUGH THE ACCESS PLATE OR PIPE STEM. MAKE WIRE CONNECTIONS AS SHOWN. REPLACE ACCESS PLATE IF NECESSARY.

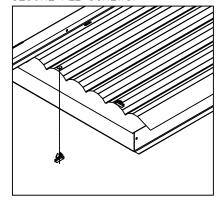

TO ACCESS DRIVER REMOVE LED PANEL BY ROTATING THE (4) 1/4 TURN FASTENERS 90°. THEN REMOVE DRIVER COVER BY REMOVING FOUR(4) SCREWS



LSI INDUSTRIES INC. 10000 Alliance Road Cincinnati, Ohio 45242 (513)793-3200 Fax (513)984-0147 www.lsi-industries.com

**Installation Questions? Call LSI Field Service Department at:** 1-800-436-7800 Ext. 3300 Fax 877-861-1368