


INSTALLATION INSTRUCTIONS CATALOG NO. 806, 806-3

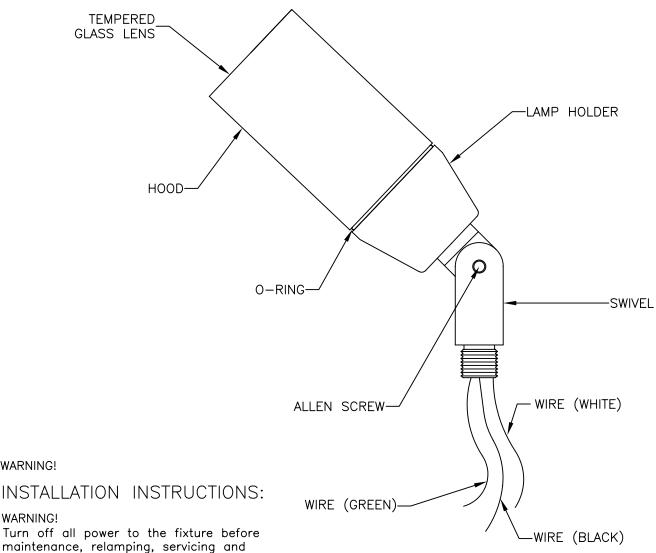

WARNING!

WARNING!

Turn off all power to the fixture before maintenance, relamping, servicing and initial installation.

NOTE:

All line voltage fixtures must be grounded in accordance with local and/or national electrical codes.

Wiring and installation must be performed by a qualified electrician.

- 1. Attach fixture to a junction box, mounting spike or ground box. Tighten with lock nut (included).
- 2. Connect wires from the conduit line (120 volts) to the corresponding wires coming out of the fixture. Connect black to black, white to white, and ground (green) to green.
- 3. Loosen the allen screw on the swivel with allen wrench provided to adjust fixture aiming.

RELAMPING: WARNING:

Turn power off before servicing, maintenance, or relamping.

Use PAR16 or PAR20 50W maximum incandescent or halogen lamp.

Check package and fixture labeling carefully for proper lamp type and wattage.

To relamp:

Unscrew lamp holder from the hood. Unscrew lamp from medium base socket. Replace lamp, and screw hood back to lamp holder. Be sure that hood seats on o-ring snugly body for a watertight seal.

Lumiere Design & Manufacturing, Inc. reserves the right to make design changes without notice.

> DRAWN BY: E.K. 08-09-00 DWG. NO: 806-3inst